




ASSEMBLY INSTRUCTIONS - SINK BASE CABINET

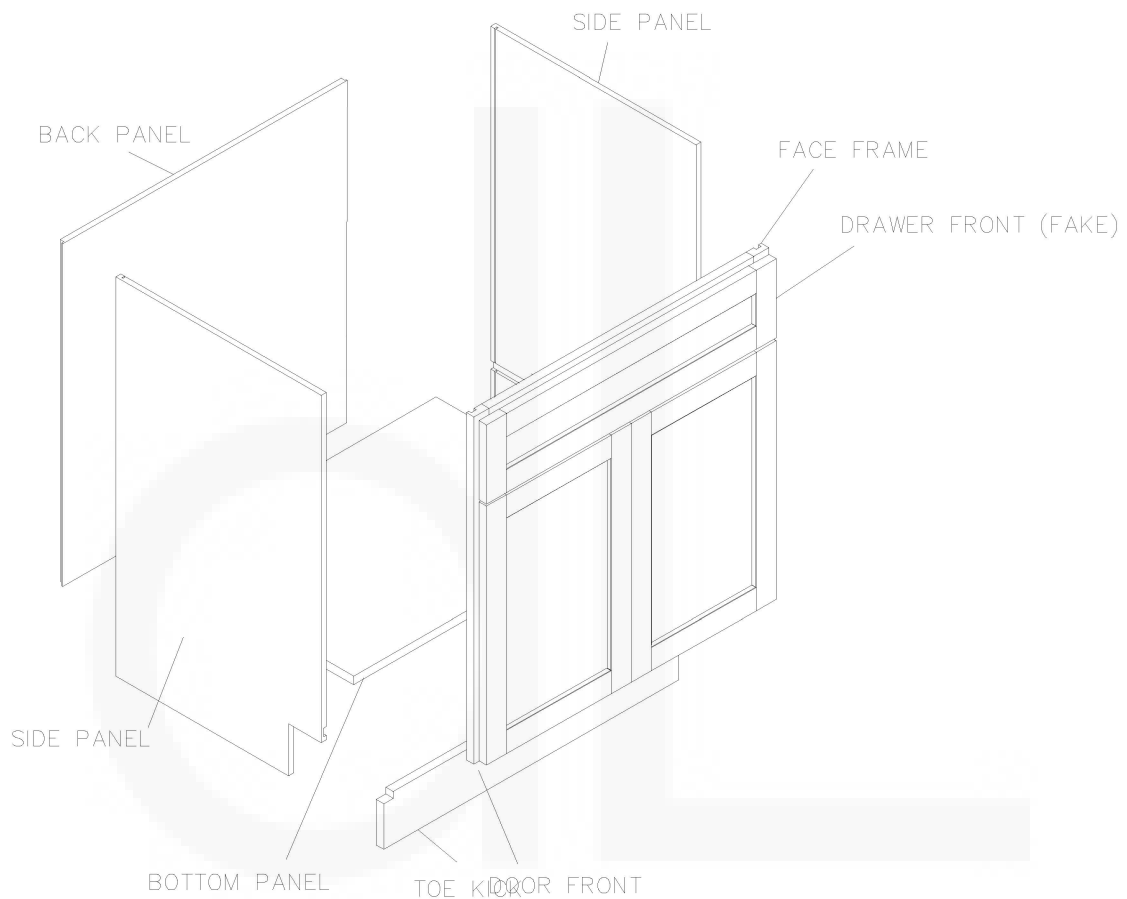

METAL BRACKETS



SCREWS



TOOLS




SCREW
DRIVER



RUBBER
Mallet



NAIL
GUN

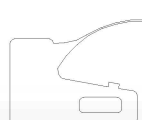


STAPLER

This instruction applies to the following items:


SB30 (Single false drawer)

SB36 (Double false drawers)


STEP
1

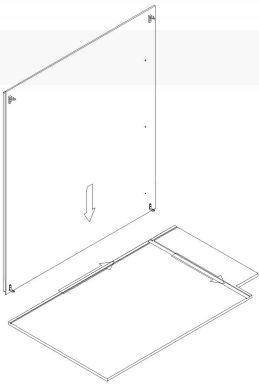


STEP
2

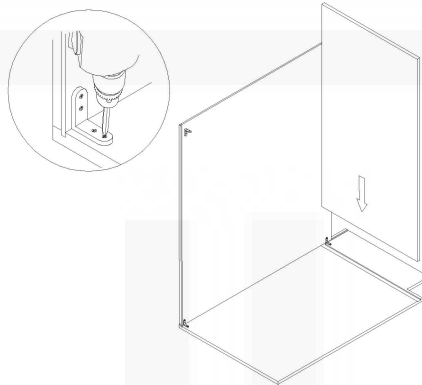


STEP
3

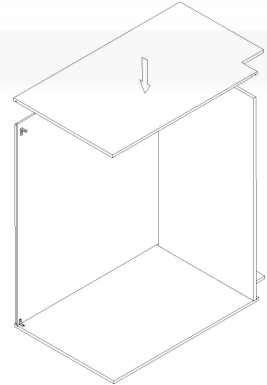


STEP
4

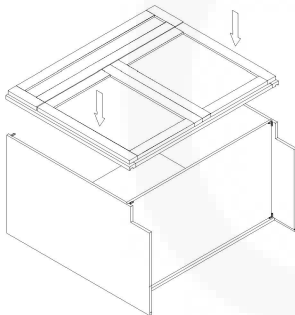

STEP
5

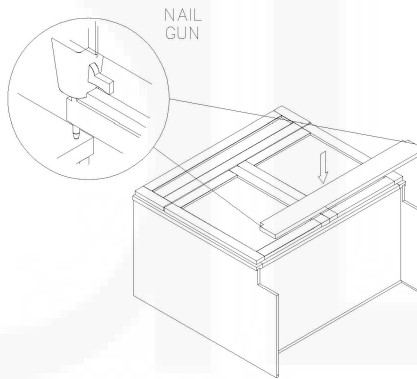


STEP
6

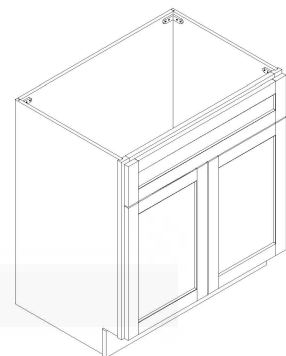


(Single false drawer)

STEP
7

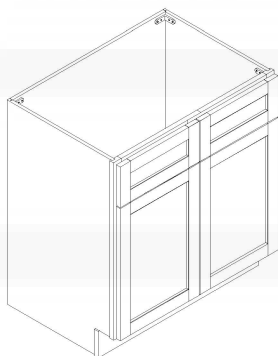


(Double false drawers)


ASSEMBLY INSTRUCTIONS - FARM SINK BASE CABINET

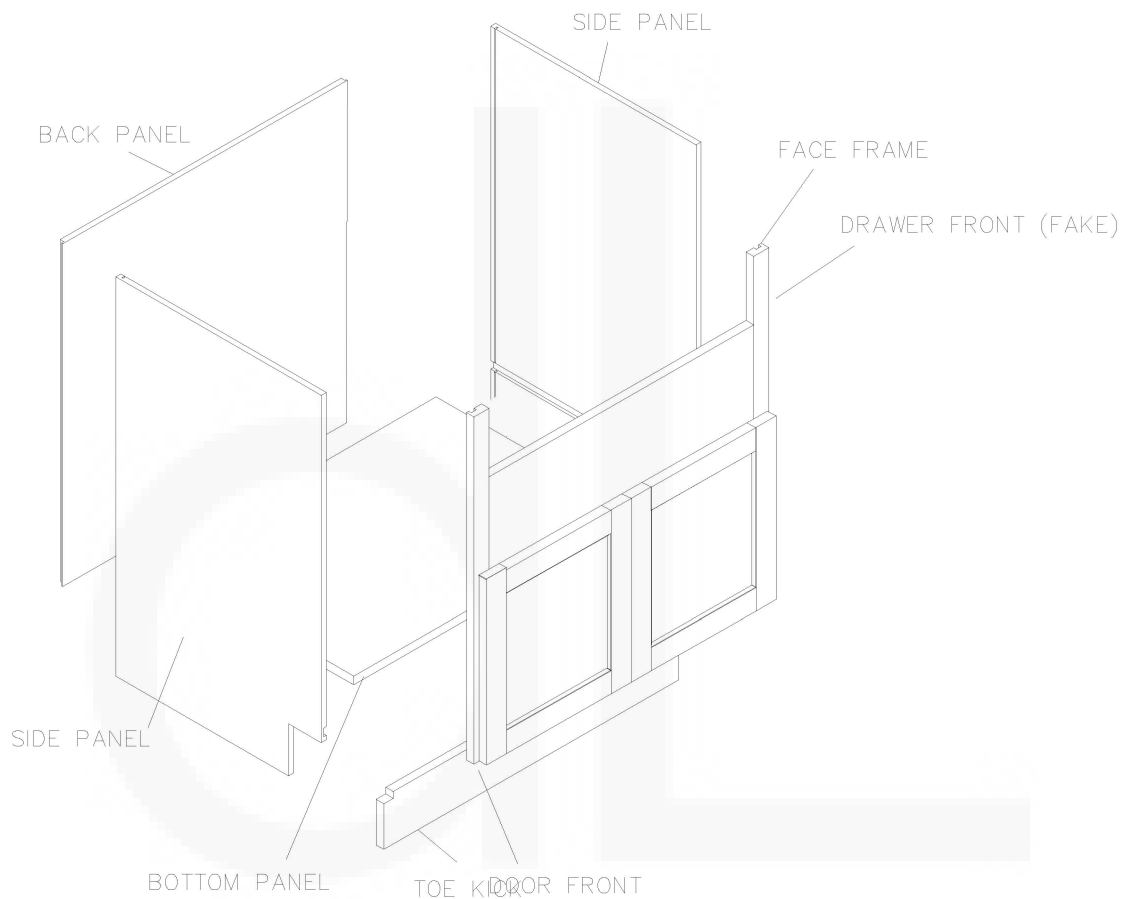

METAL BRACKETS



SCREWS



TOOLS




SCREW
DRIVER



RUBBER
MALLET




NAIL
GUN

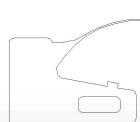


STAPLER

This instruction applies to the following items:
FSB36


STEP
1

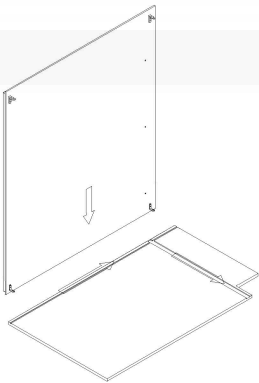


STEP
2

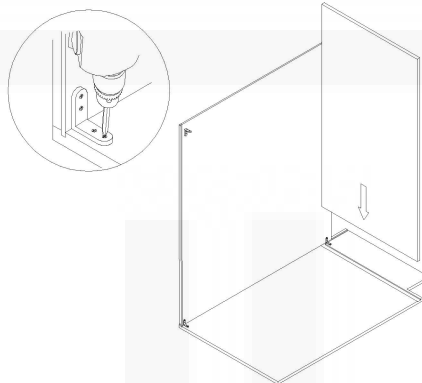


STEP
3

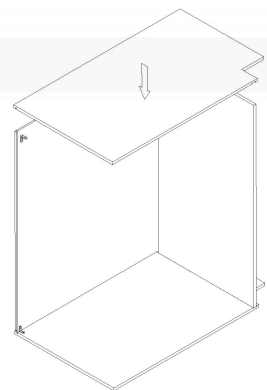


STEP
4

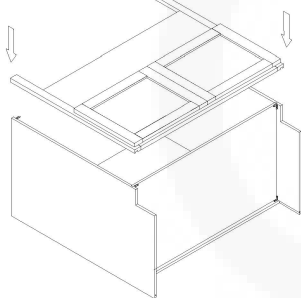




STEP
5

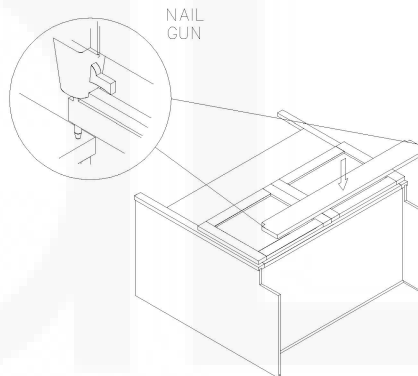

STEP
6

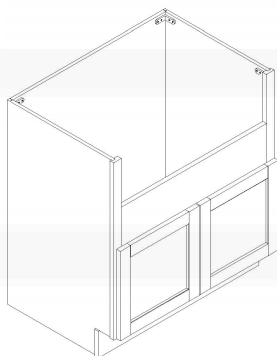


ASSEMBLY INSTRUCTIONS - FULL DOOR BASE CABINET

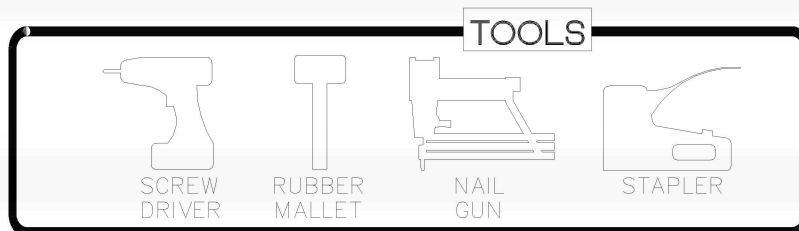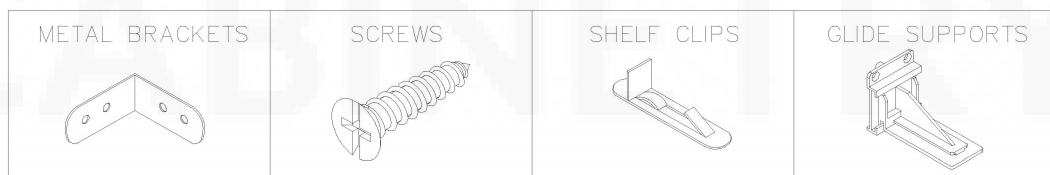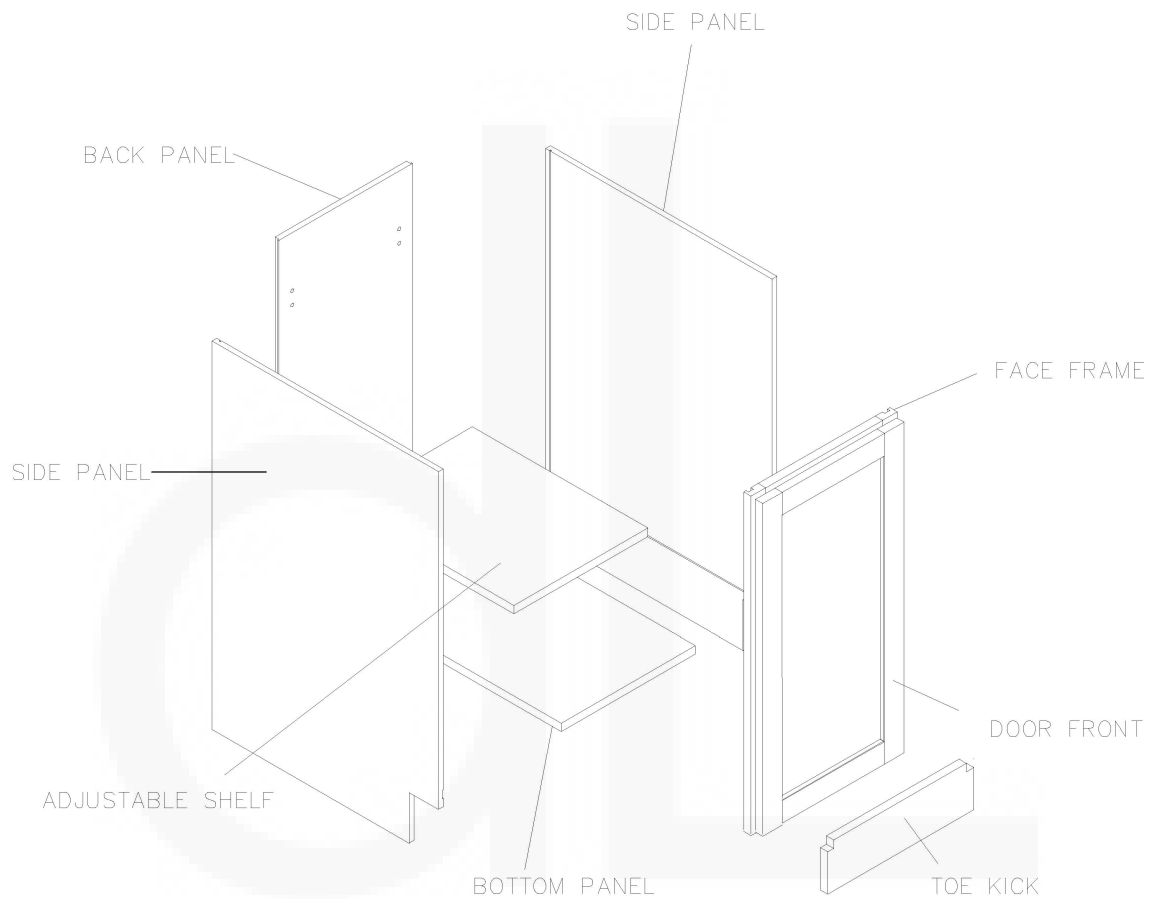


This instruction applies to the following items:
FDB18-FDB36


STEP
1

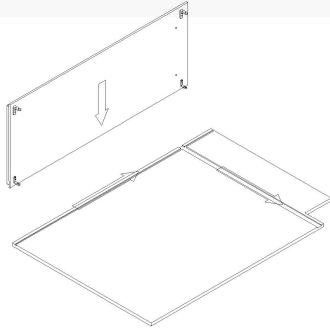


STEP
2

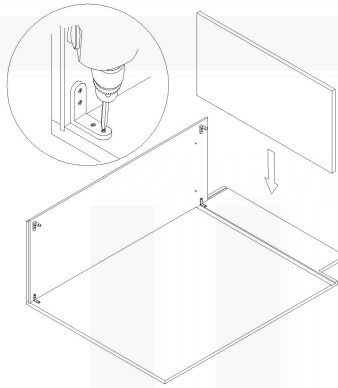


STEP
3

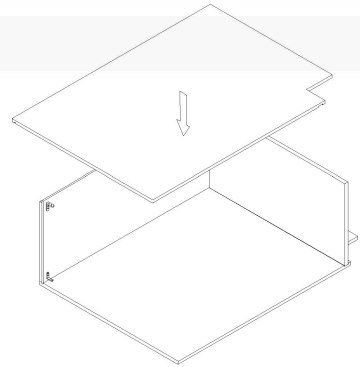


STEP
4

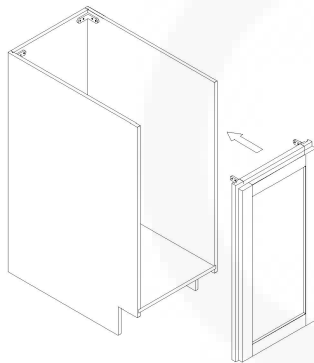


STEP
5

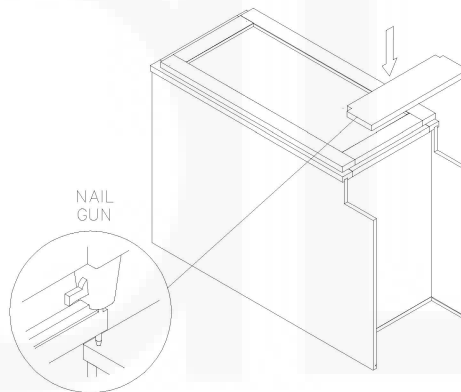


STEP
6

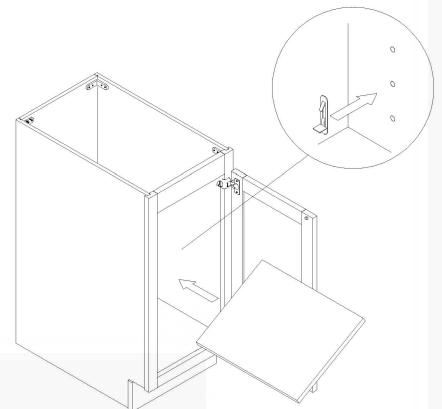


STEP
7

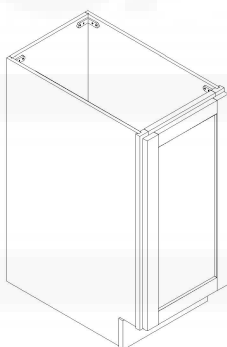


STEP
8

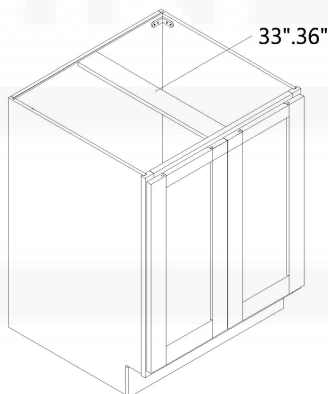

ASSEMBLY INSTRUCTIONS - BASE CABINET

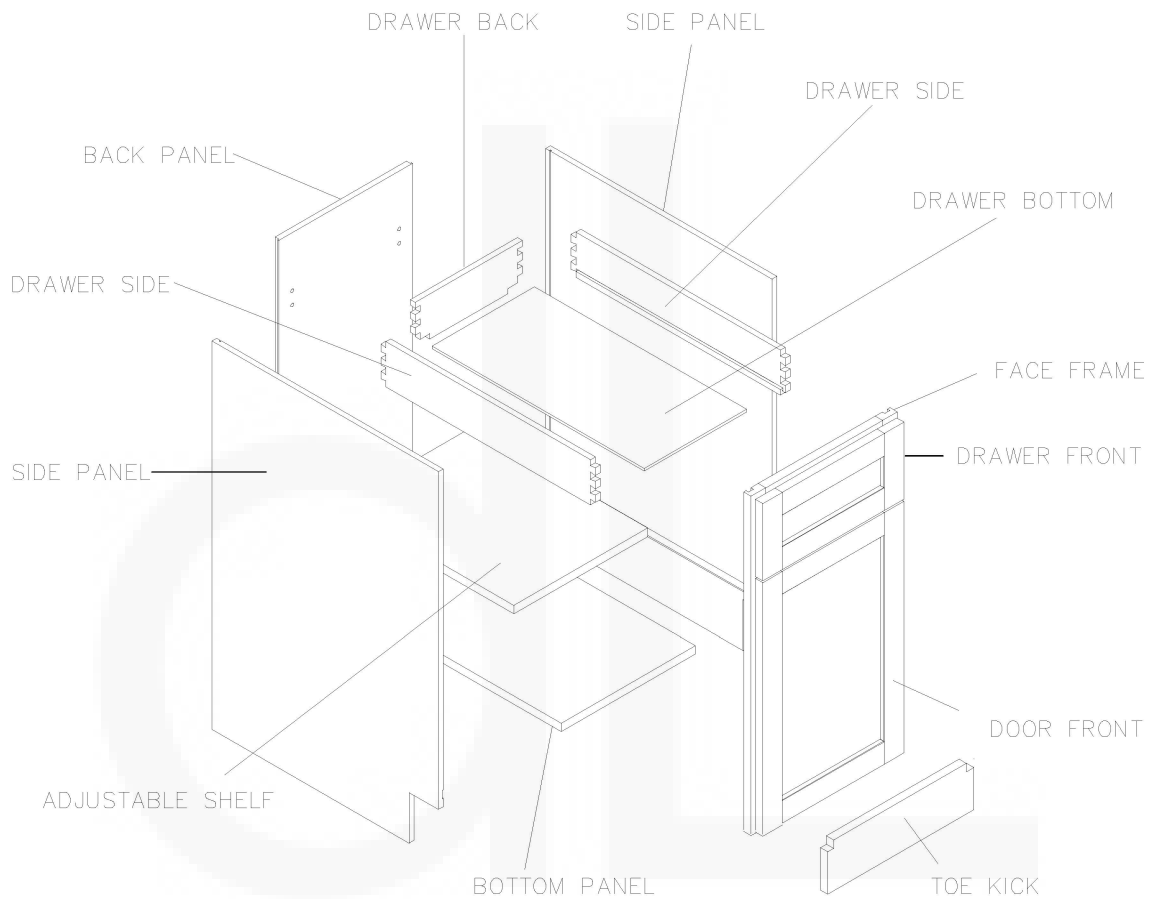


GLIDES	METAL BRACKETS	SCREWS	SHELF CLIPS	GLIDE SUPPORTS

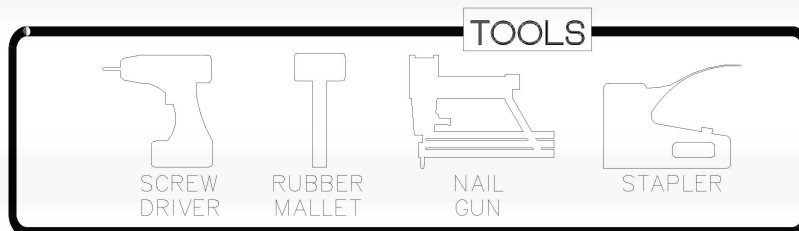


This instruction applies to the following items:
 B09、B12、B15、B18、B21、B24、
 B27、B30、B33、B36、B39、B42、


STEP 1

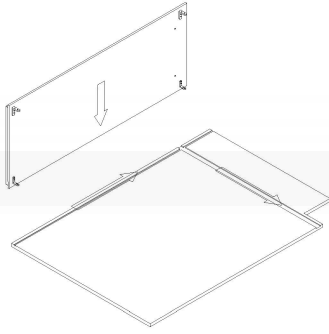


STEP 2

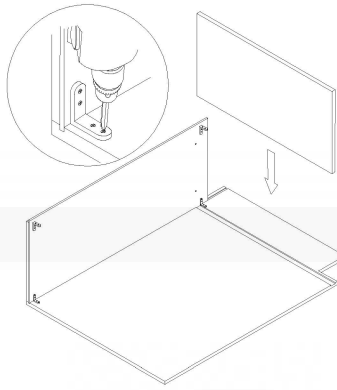


STEP 3

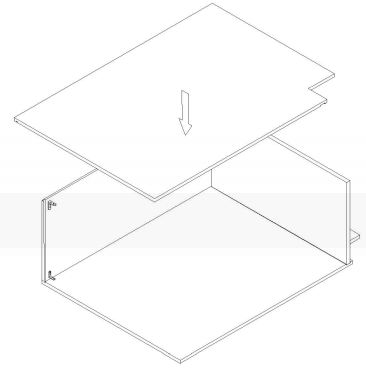


STEP 4

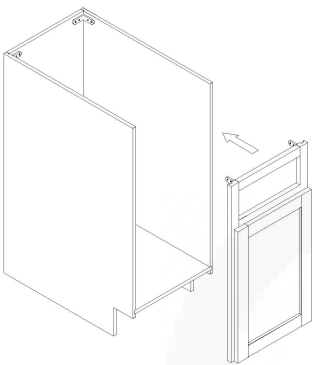


STEP 5

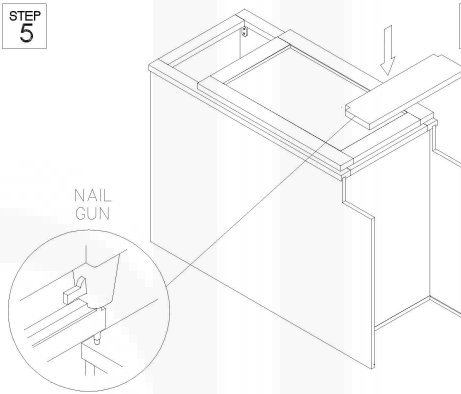


STEP 6

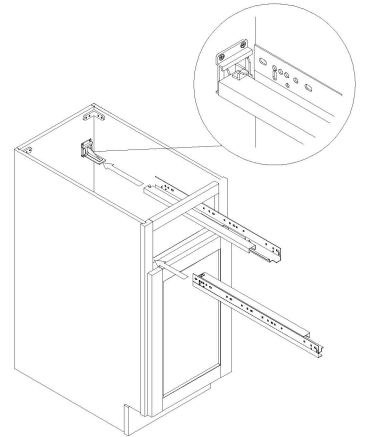


STEP 7

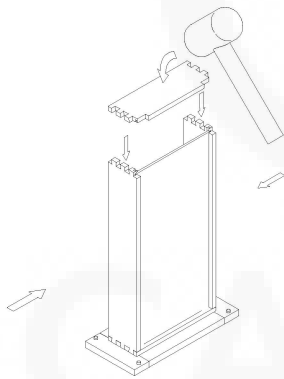


STEP 8

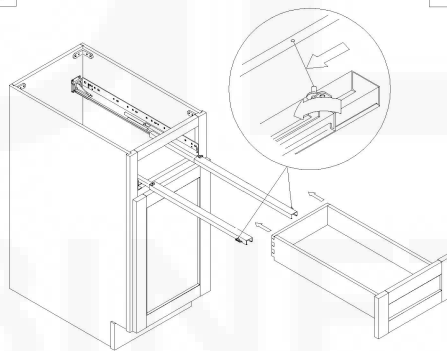


STEP 9

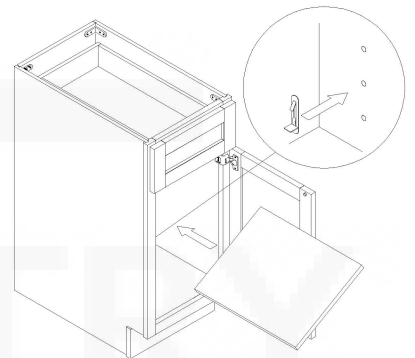


STEP 10

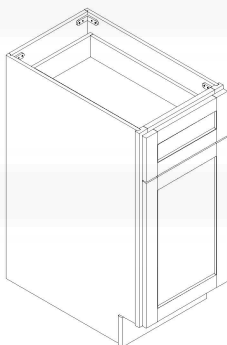




STEP 11

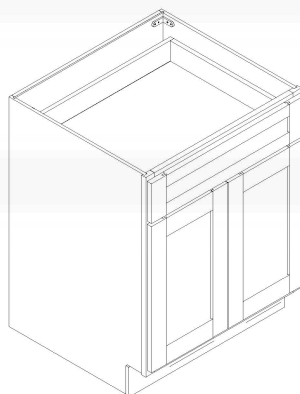

STEP 12

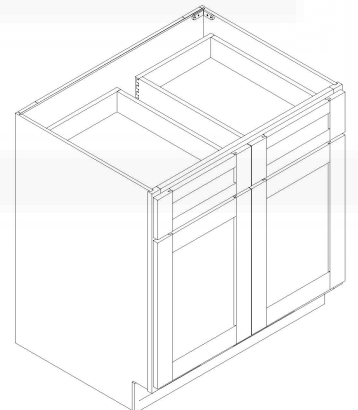


ASSEMBLY INSTRUCTIONS – DRAWER BASE CABINET (2 DRAWERS)

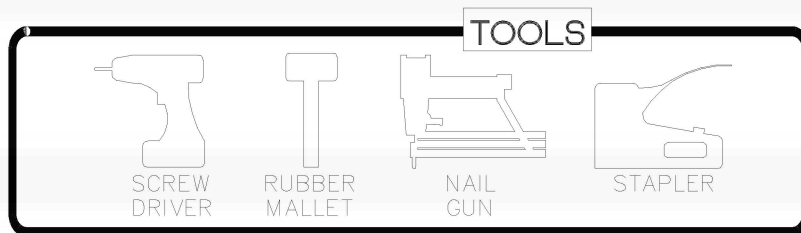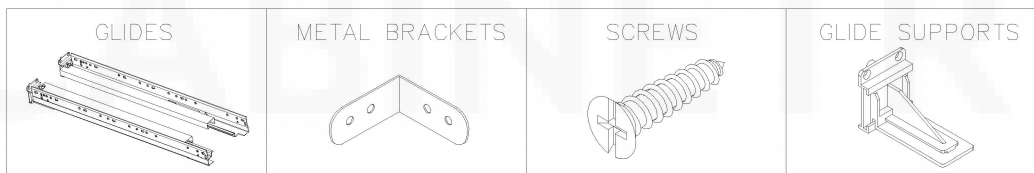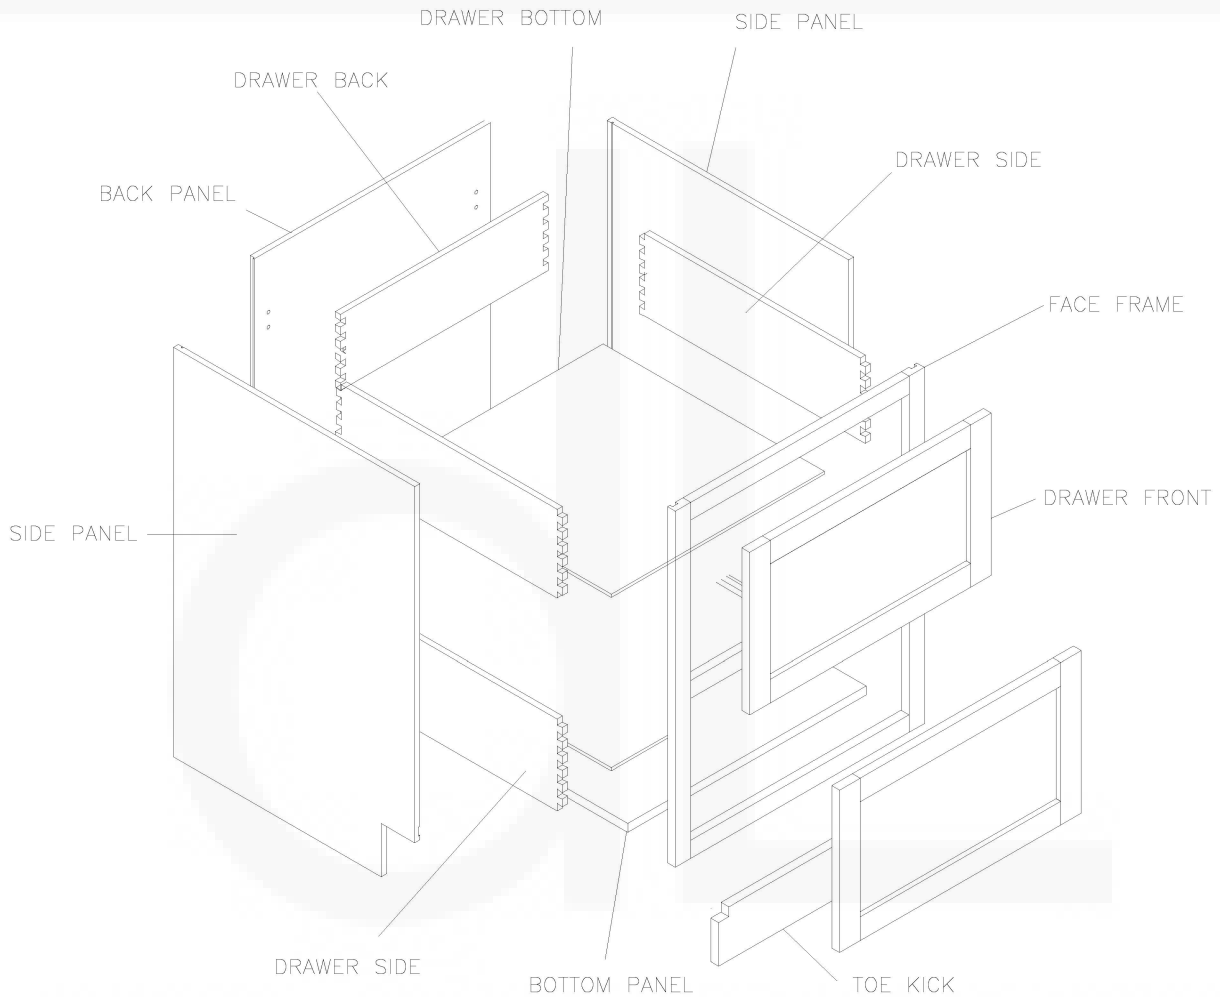


This instruction applies to the following items:
2DB30, 2DB33, 2DB36


STEP
1

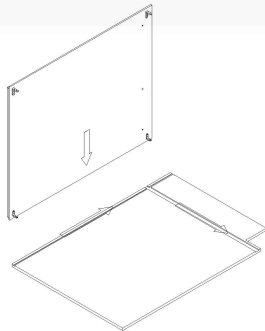


STEP
2

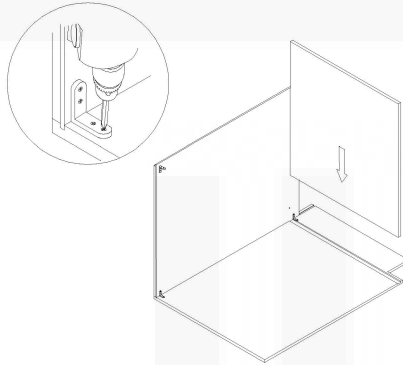


STEP
3

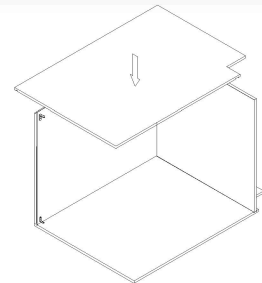


STEP
4

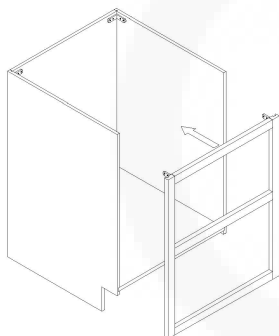


STEP
5

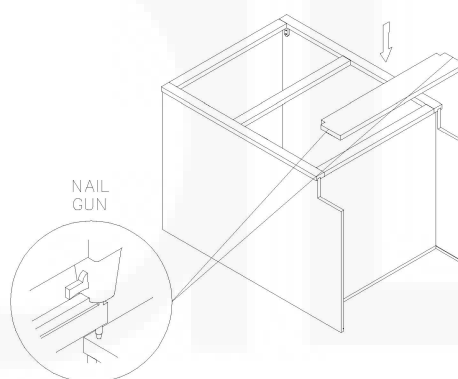


STEP
6

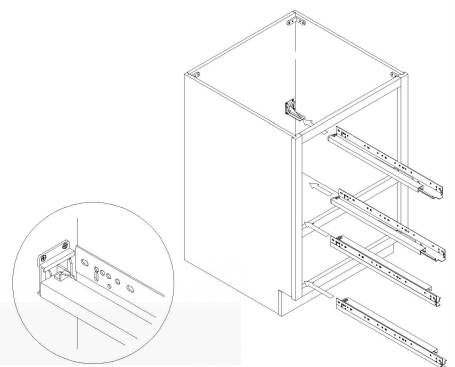


STEP
7

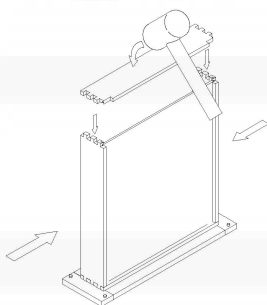




STEP
8

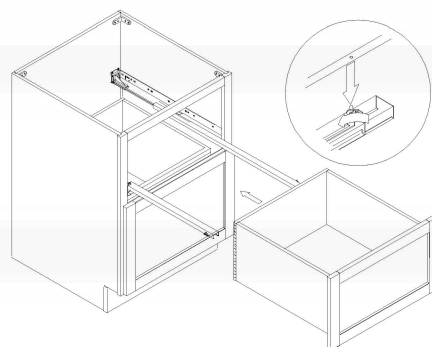

STEP
9

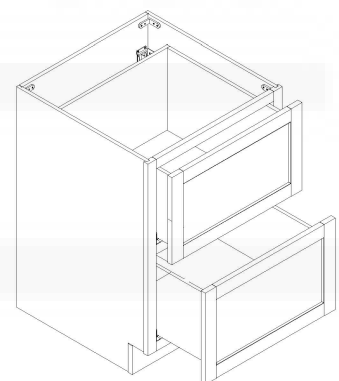


ASSEMBLY INSTRUCTIONS - DRAWER BASE CABINET (3 DRAWERS)

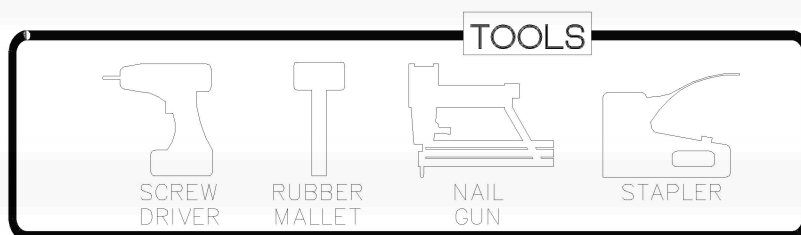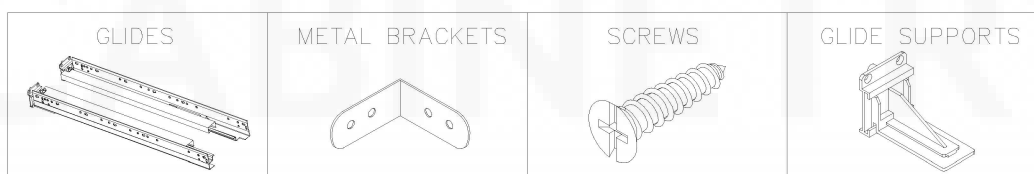
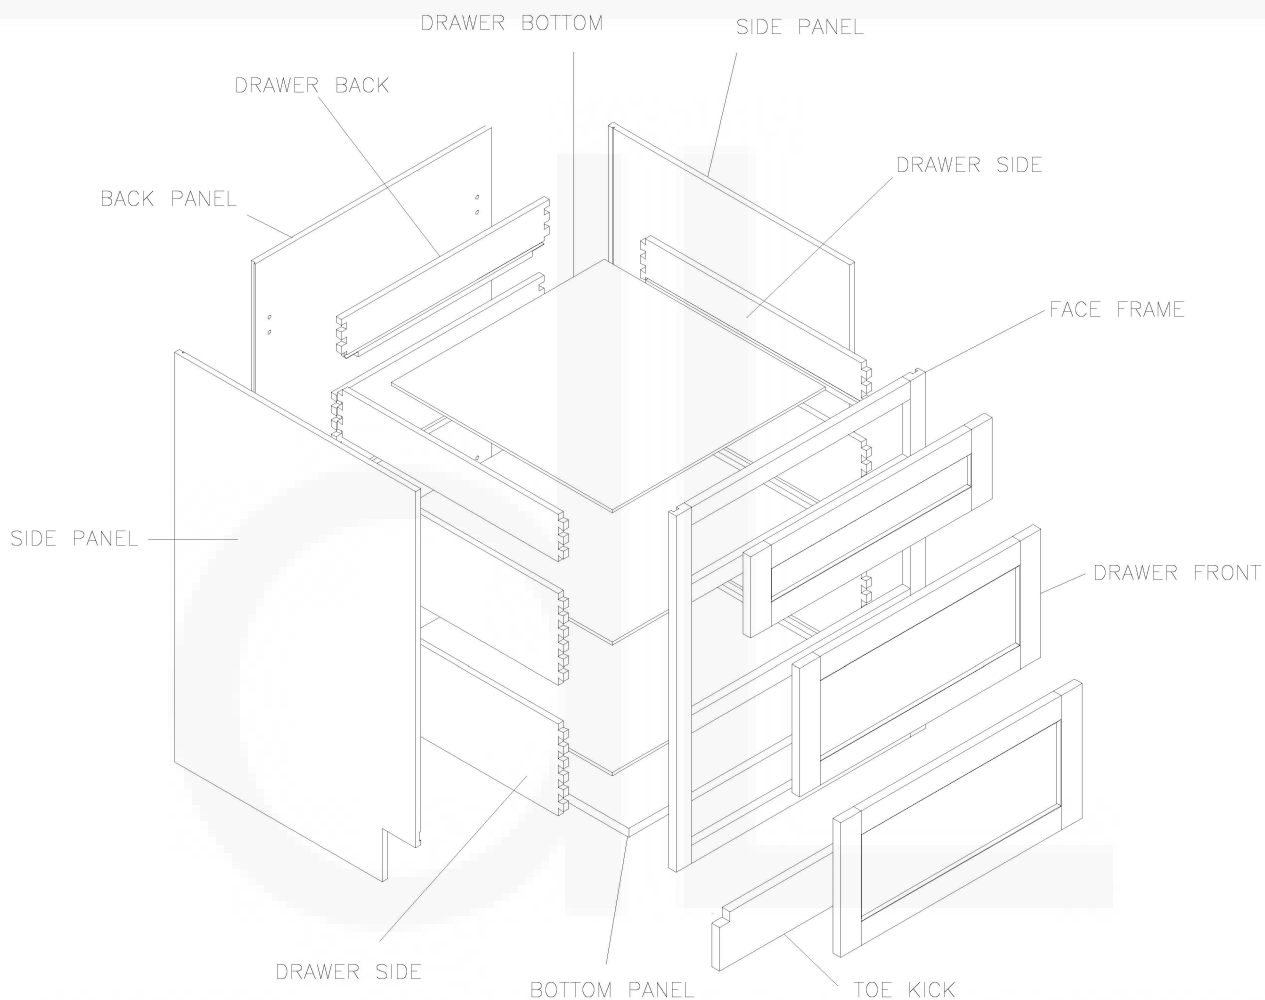


This instruction applies to the following items:
 DB12、DB15、DB18、DB21
 DB24、DB27、DB30、DB33、DB36


STEP
1

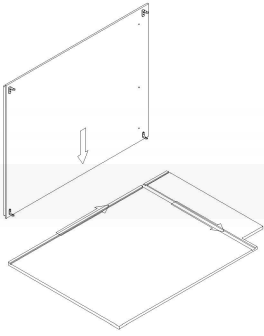


STEP
2

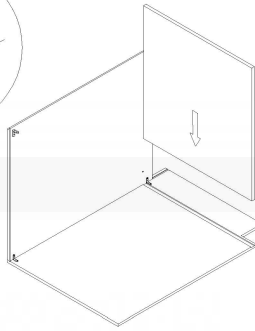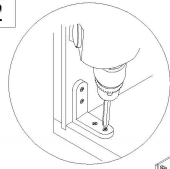


STEP
3

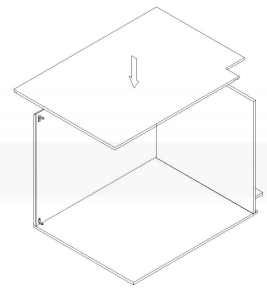


STEP
4

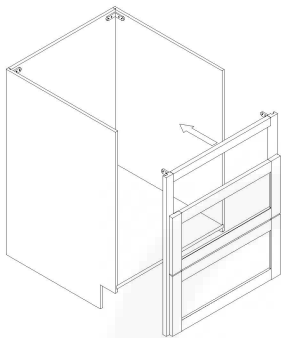


STEP
5

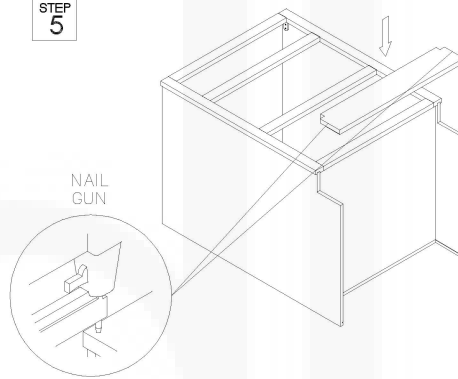


STEP
6

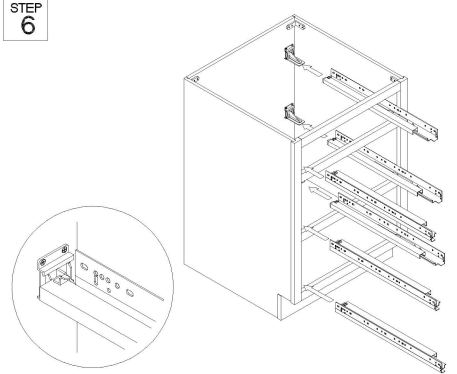


STEP
7

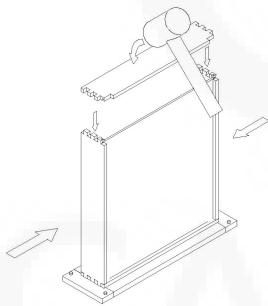


STEP
8

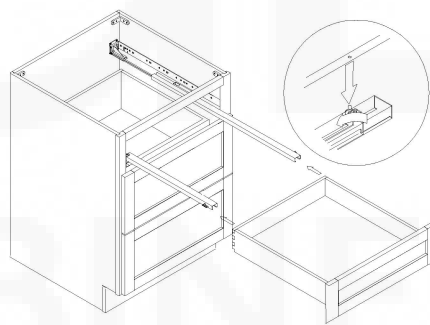




STEP
9

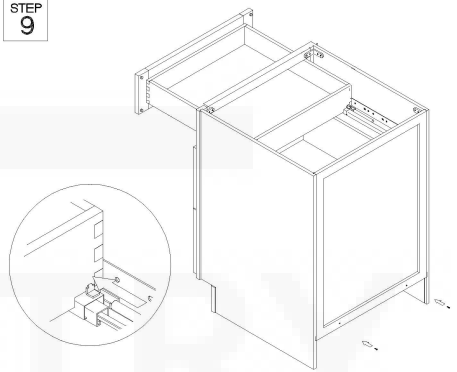

STEP
10

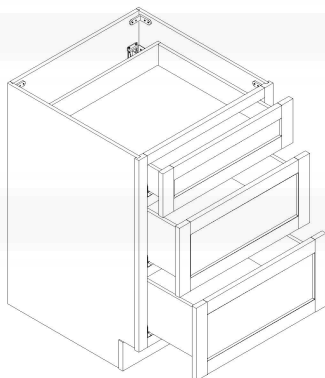


ASSEMBLY INSTRUCTIONS - BLIND BASE CORNER CABINET

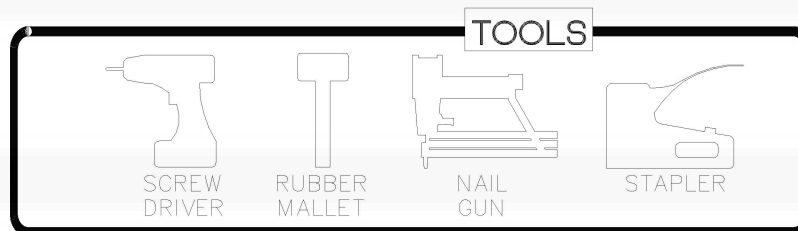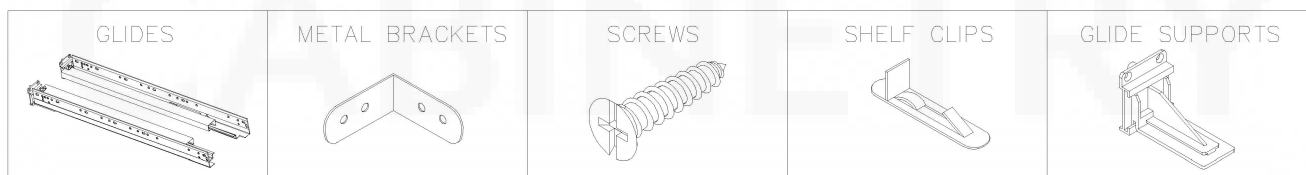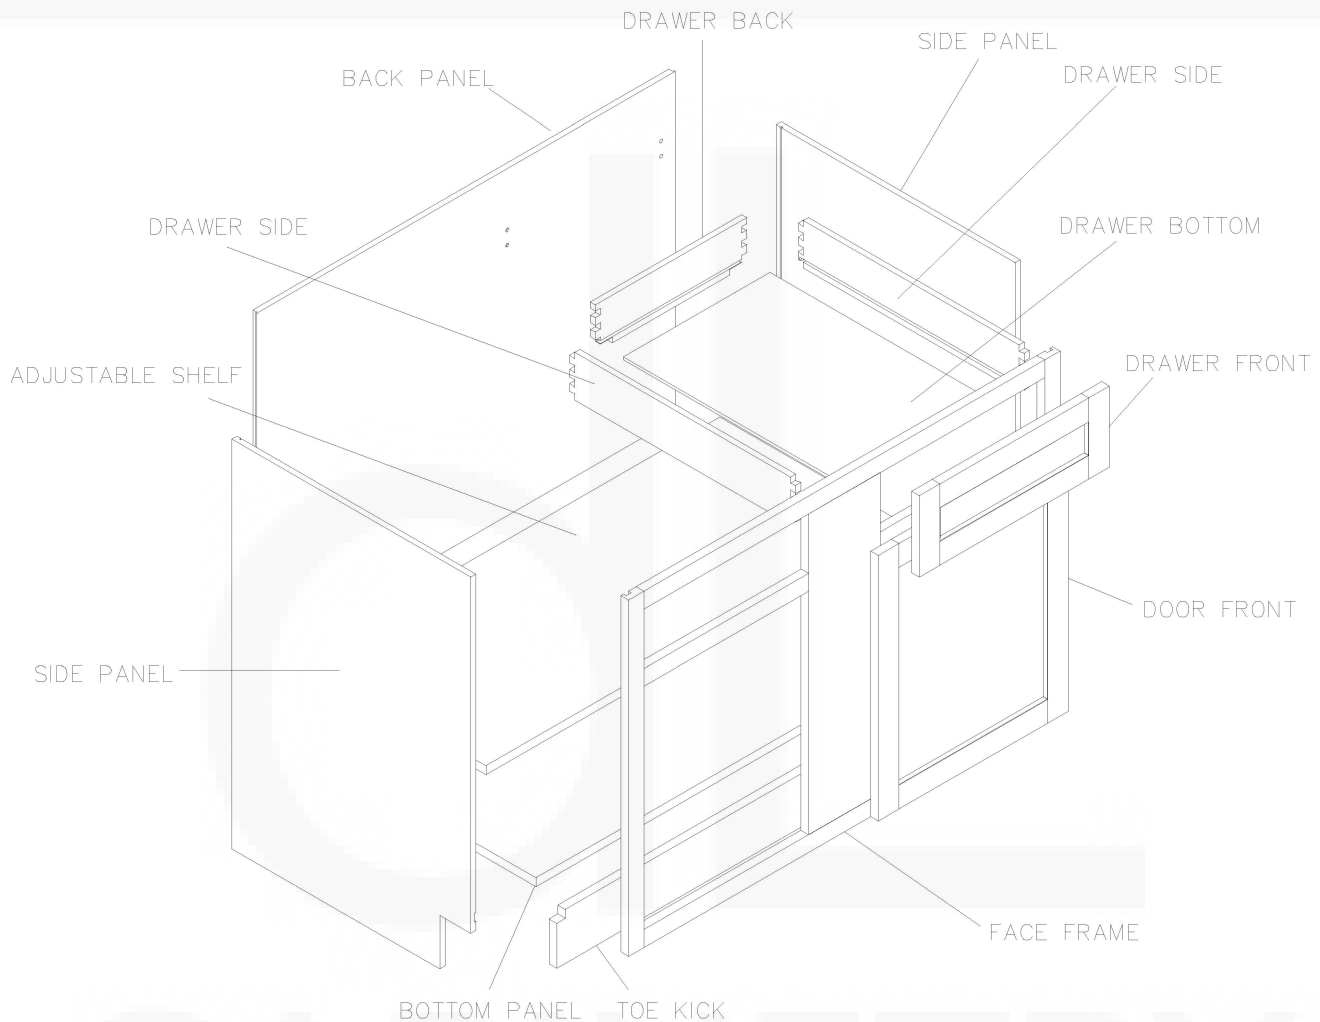


This instruction applies to the following items:
BBC33-9


STEP
1

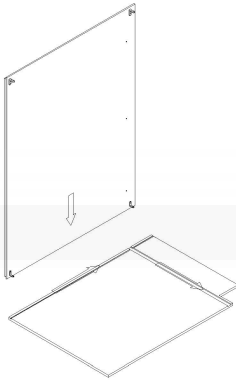


STEP
2

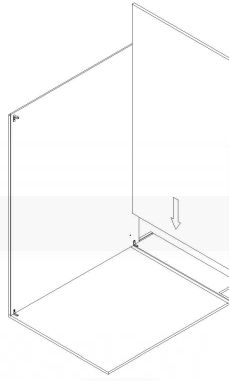


STEP
3

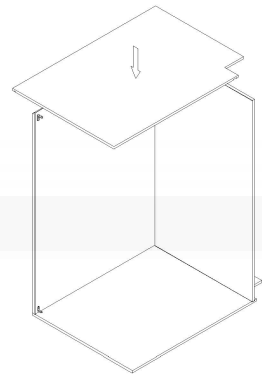


STEP
4

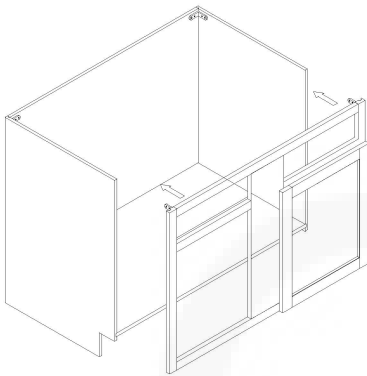



STEP
5

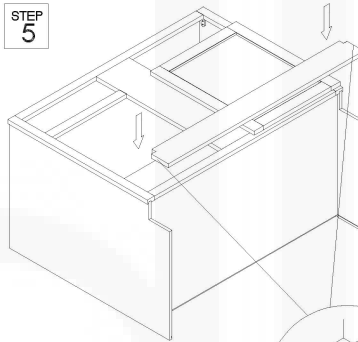


NAIL
GUN

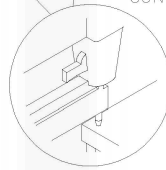



STEP
6

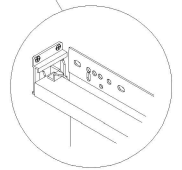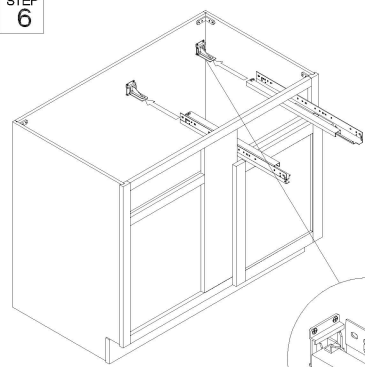



STEP
7

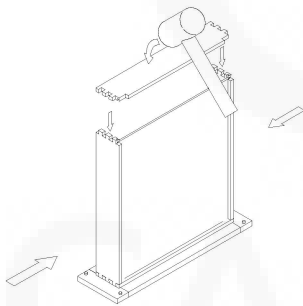


STEP
8

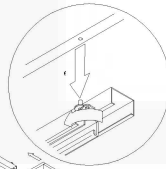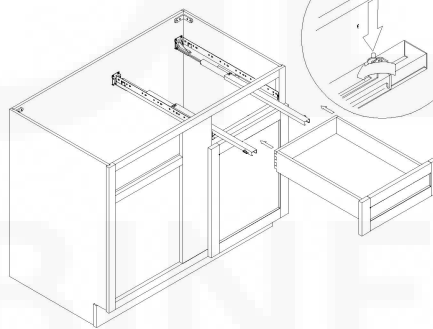




STEP
9

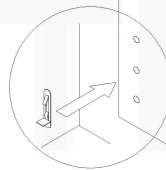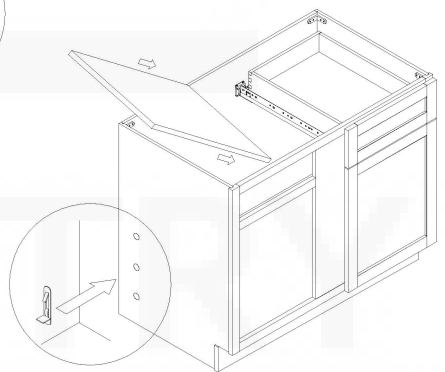

STEP
10

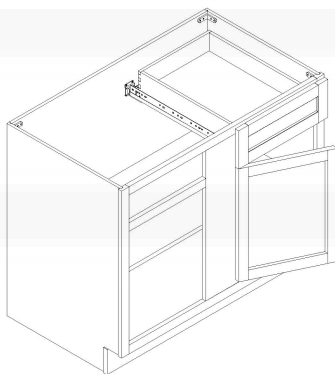


ASSEMBLY INSTRUCTIONS - LAZY SUSAN CORNER CABINET

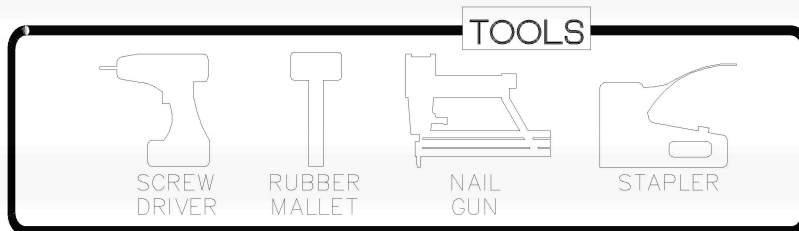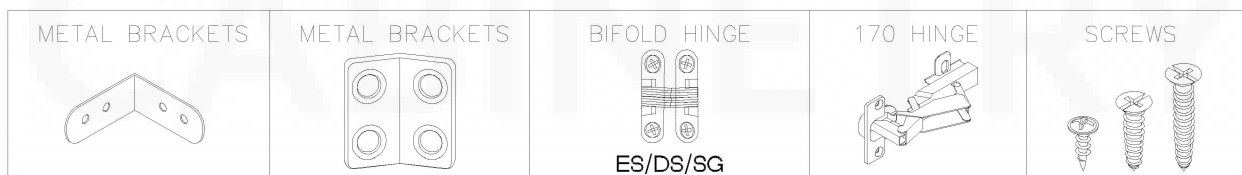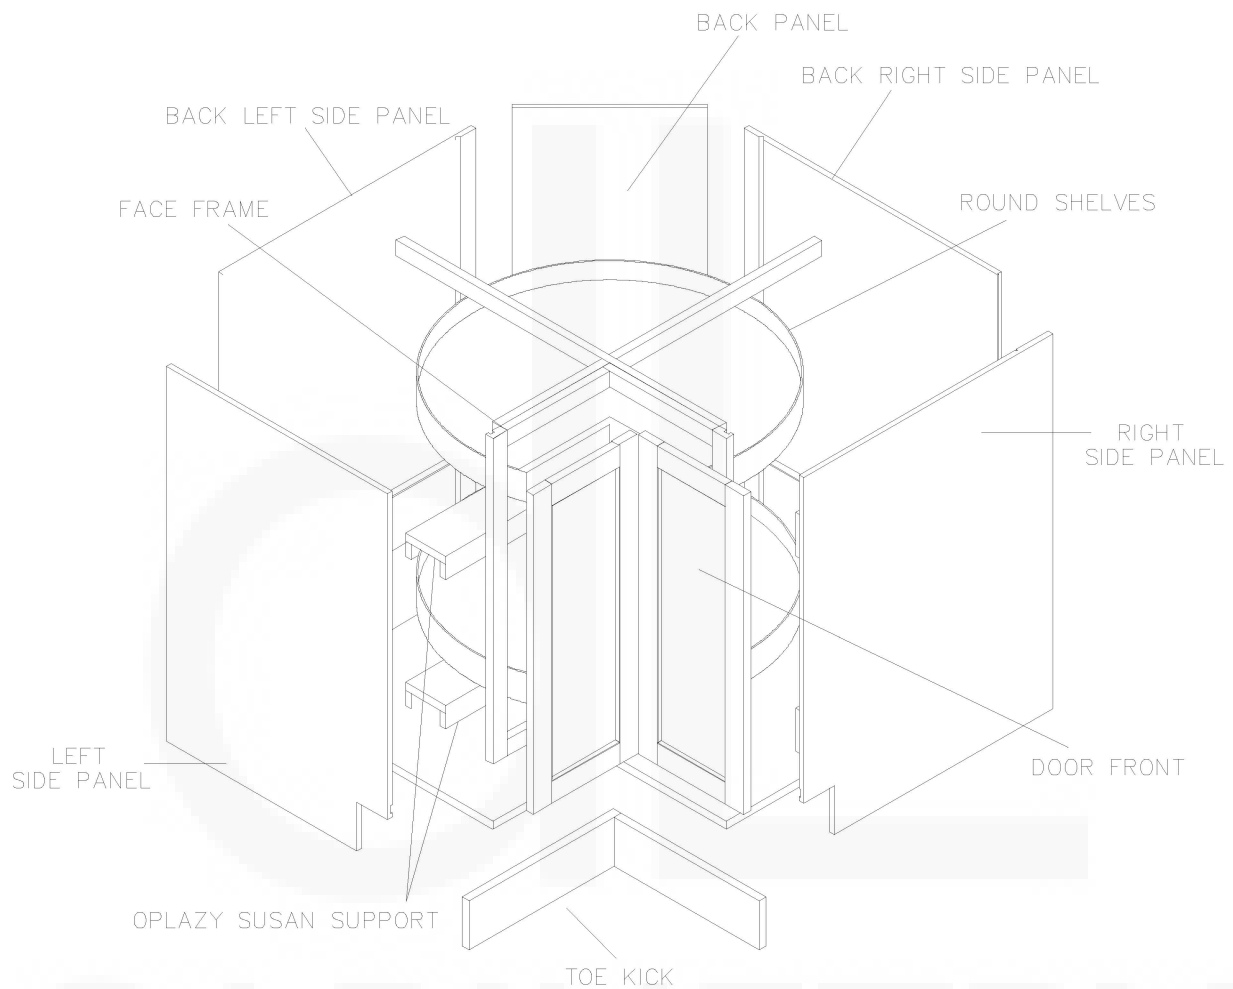


This instruction applies to the following items:
LZS33、LZS3612


STEP
1

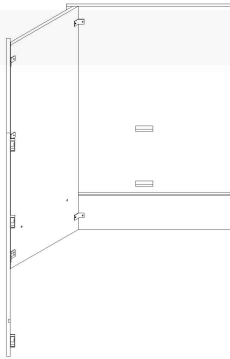


STEP
2

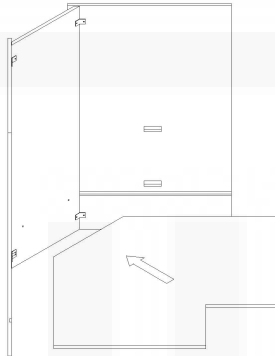


STEP
3

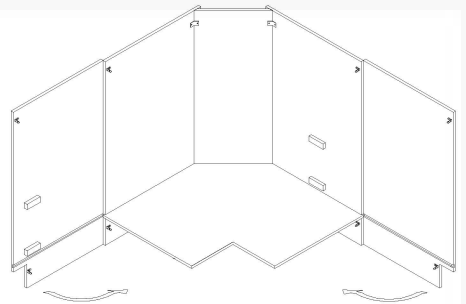


STEP
4

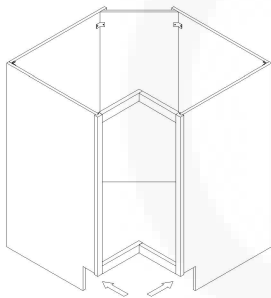


STEP
5

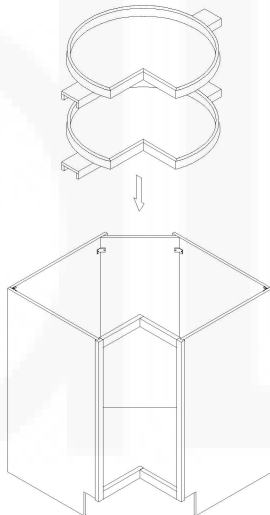


STEP
6

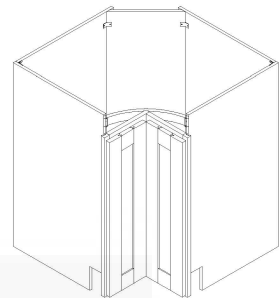

STEP
7



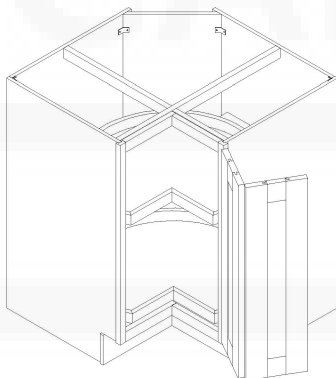


STEP
8

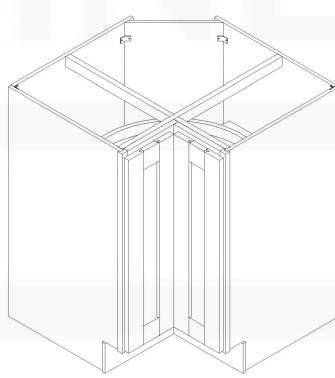


Slim Shaker Lazy Susan

ASSEMBLING INSTRUCTIONS – LAZY SUSAN CORNER CABINET

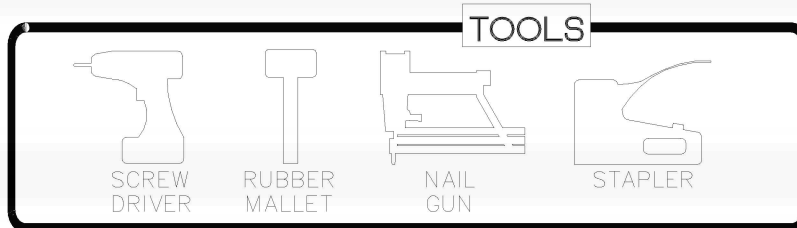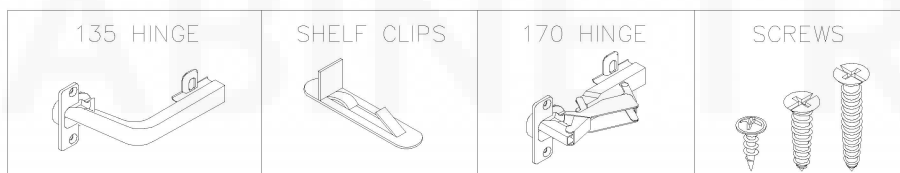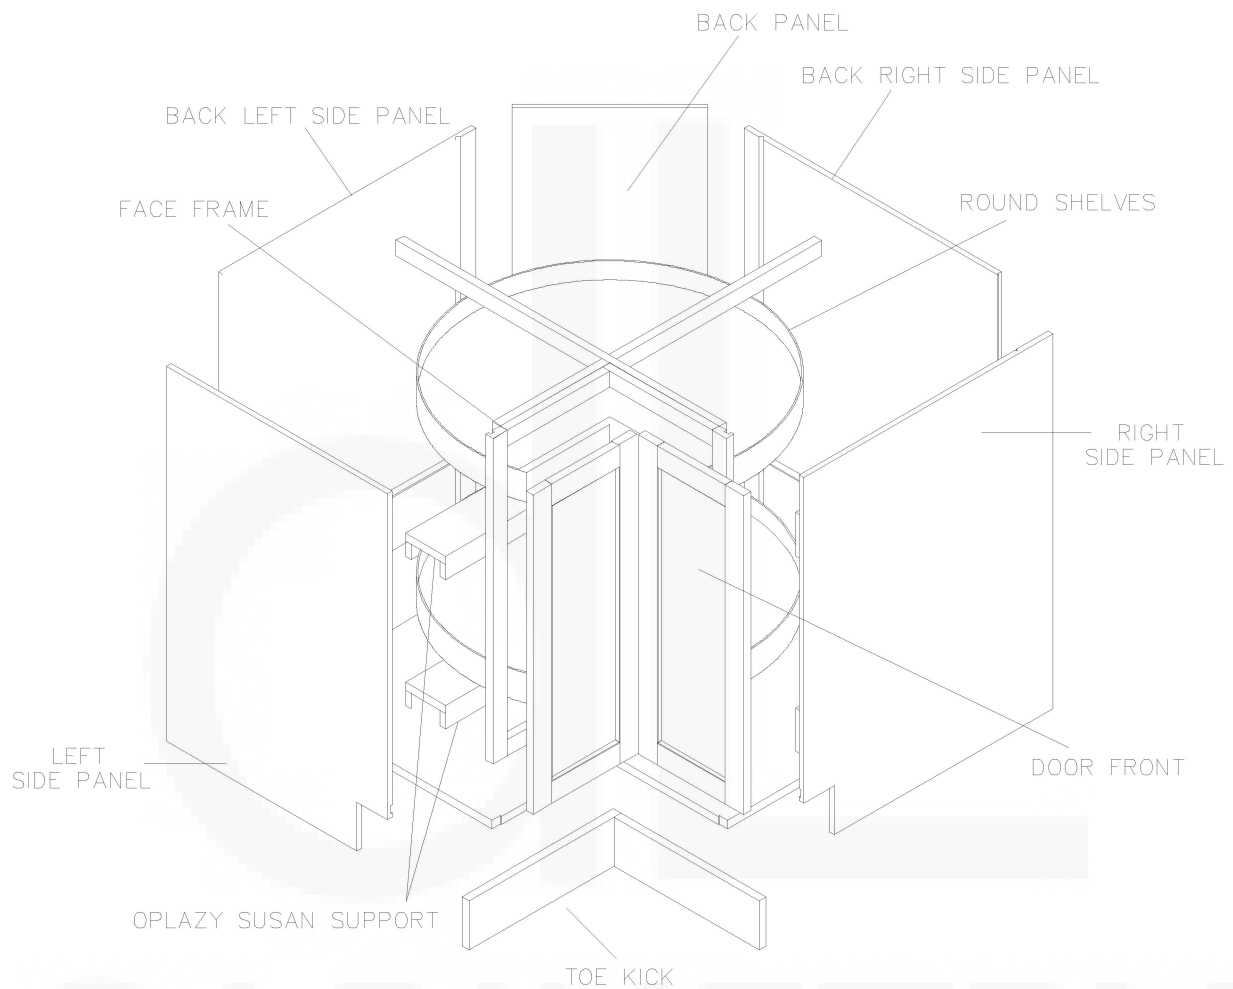


This instruction applies to the following items:
LZS33、LZS3612


STEP
1

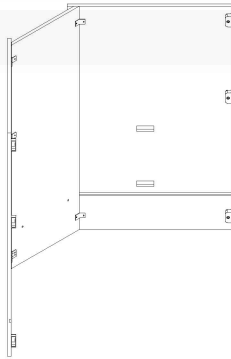


STEP
2

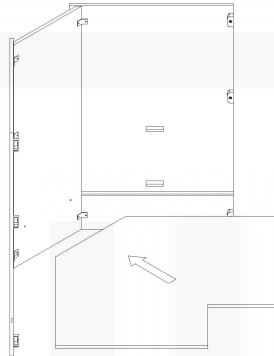


STEP
3

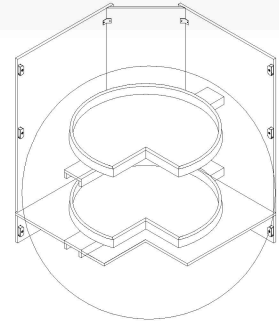


STEP
4

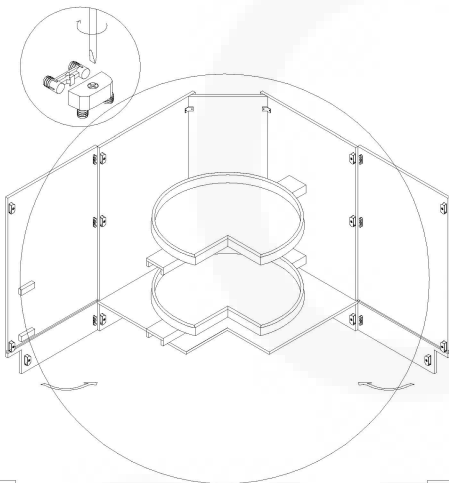


STEP
5

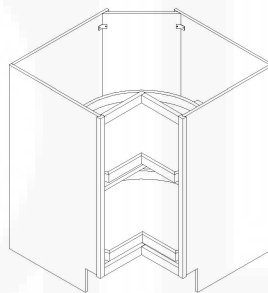


STEP
6

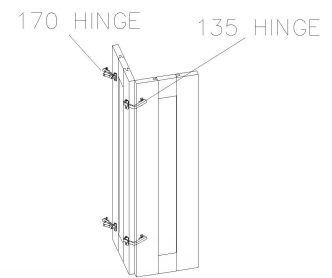




STEP
7

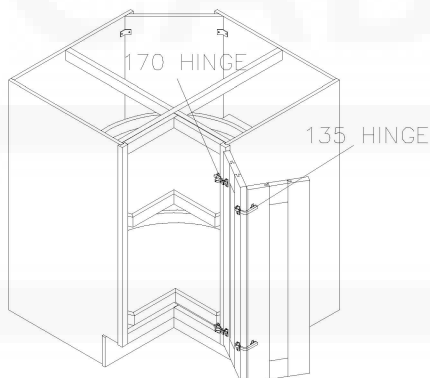

STEP
8

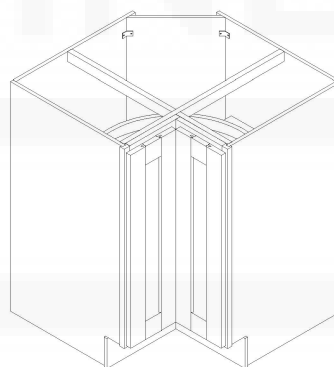


ASSEMBLY INSTRUCTIONS - BASE MICROWAVE CABINET

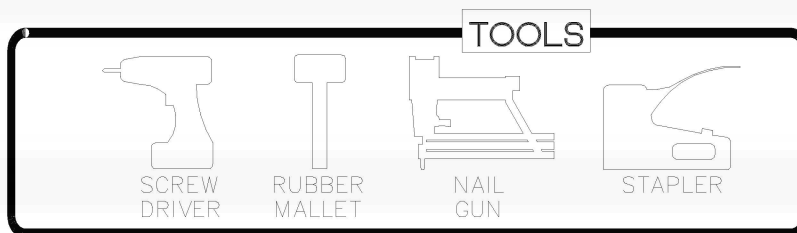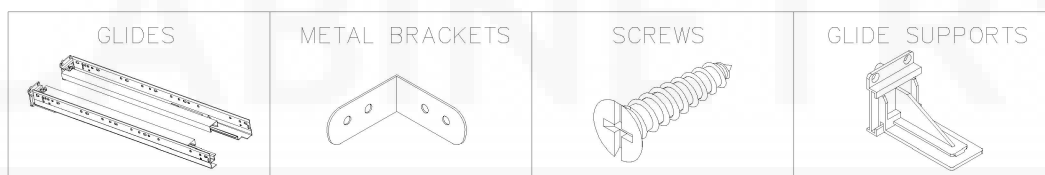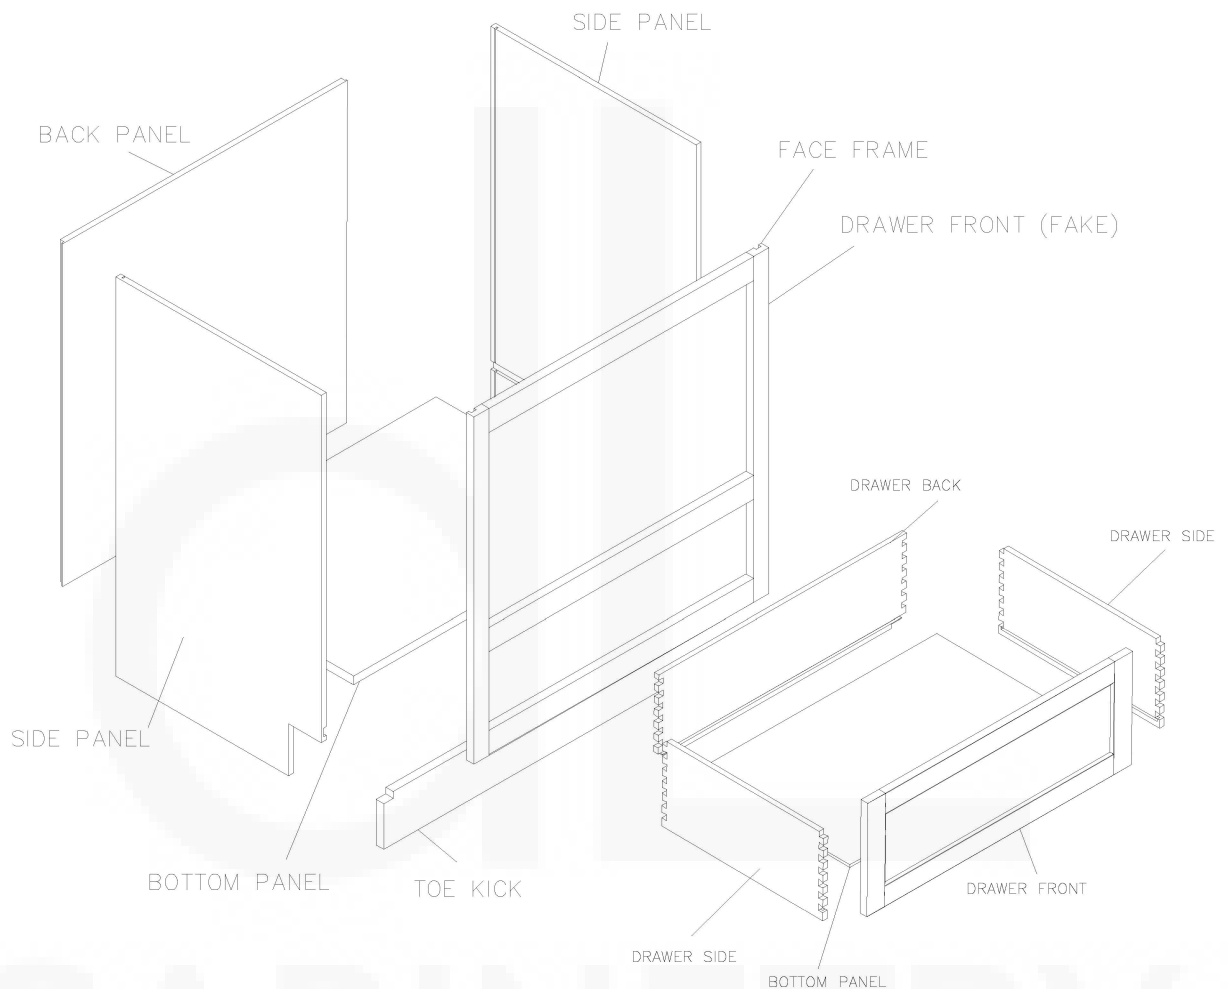


This instruction applies to the following items:
BMC30


STEP
1

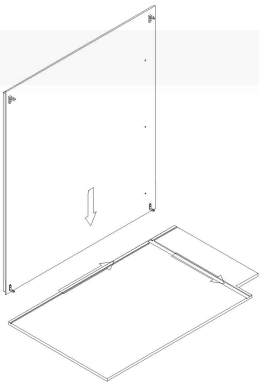


STEP
2

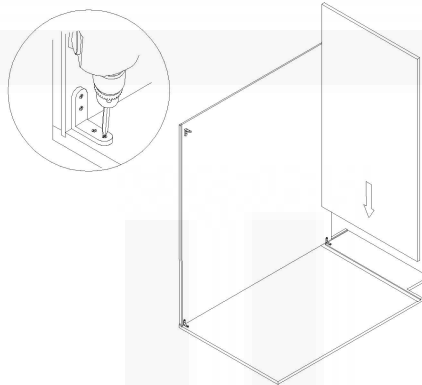


STEP
3

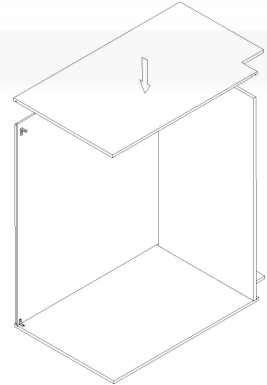


STEP
4

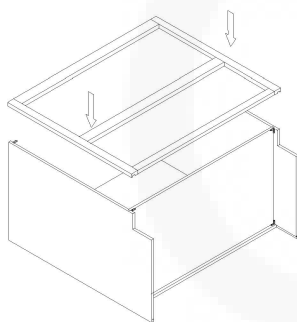


STEP
5

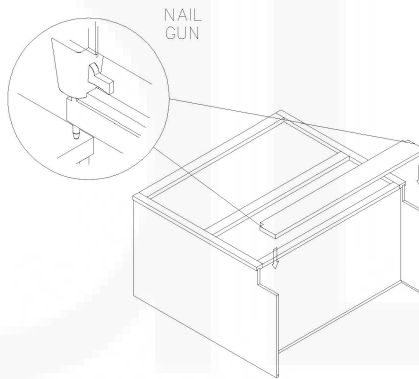


STEP
6

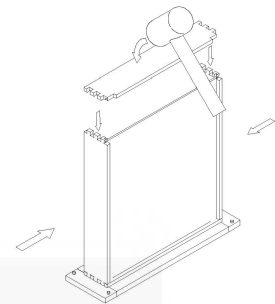




STEP
7

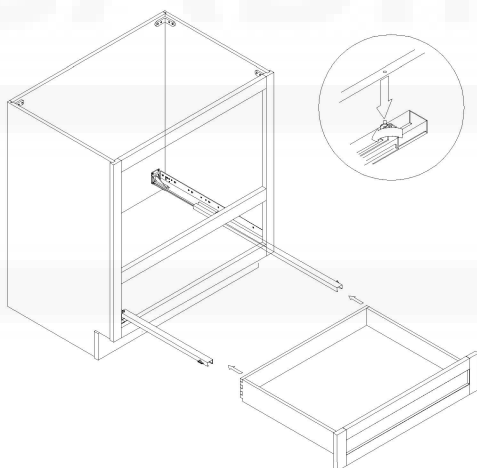

STEP
8

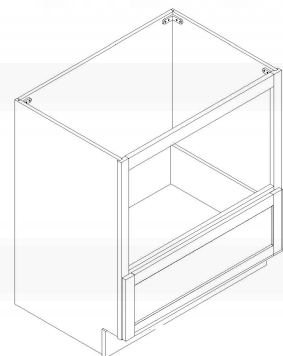


ASSEMBLY INSTRUCTIONS - BASE WASTE BASKET CABINET

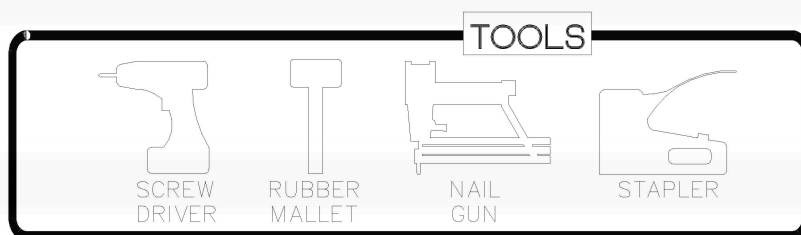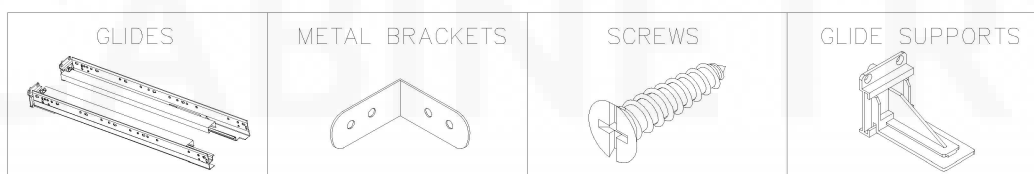
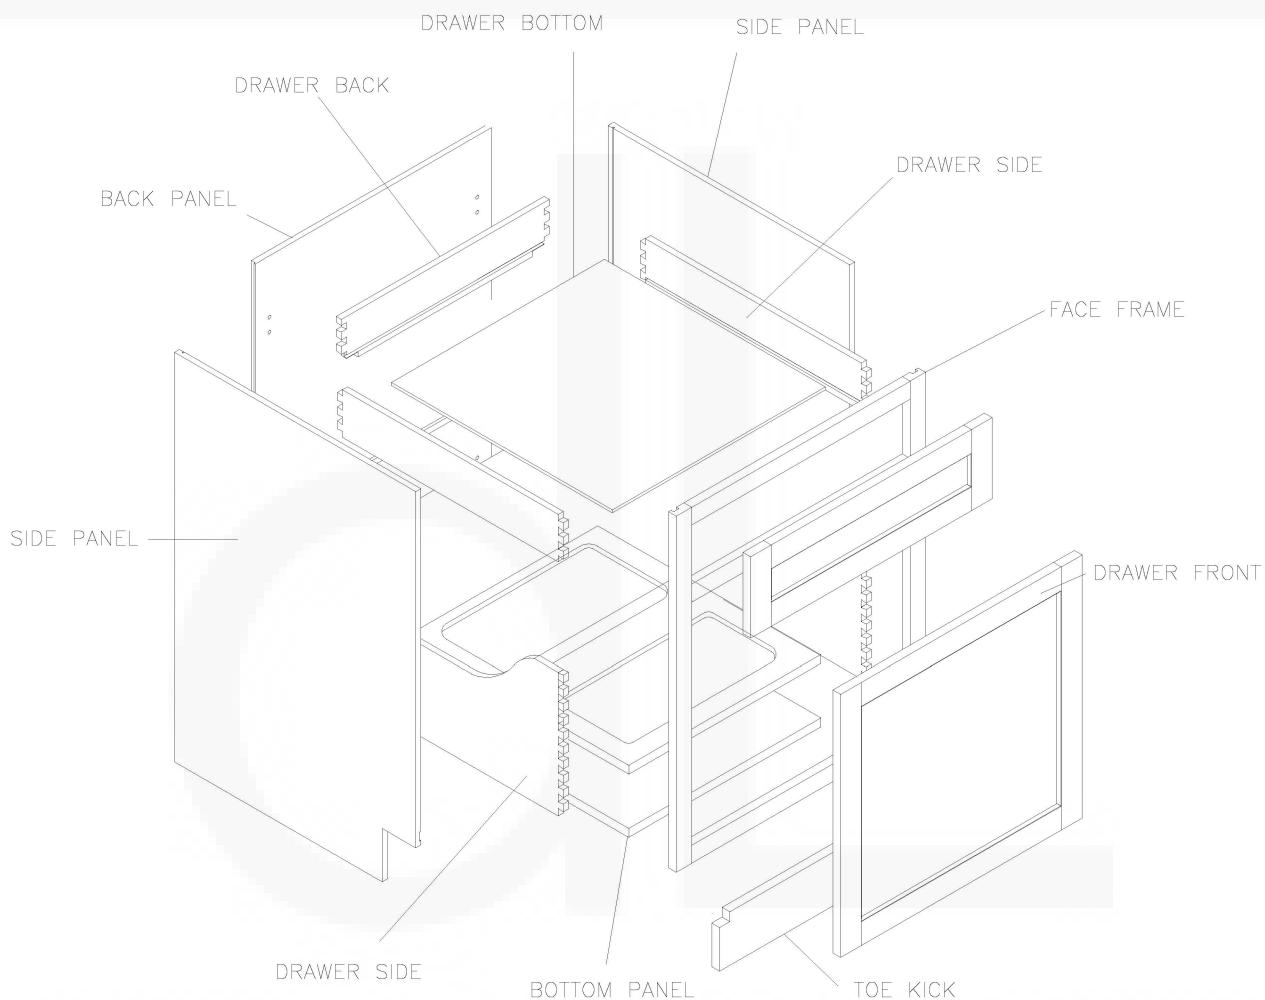


This instruction applies to the following items:
BWBKT18


STEP
1

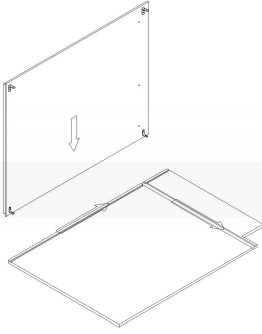


STEP
2

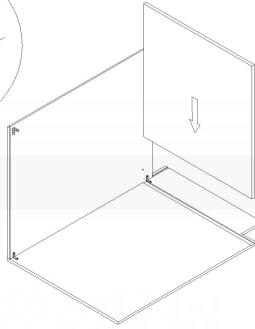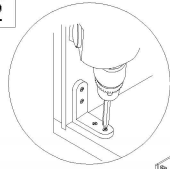


STEP
3

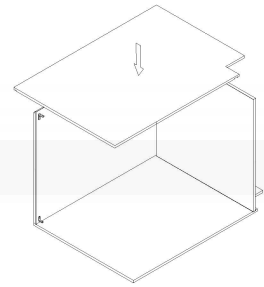


STEP
4

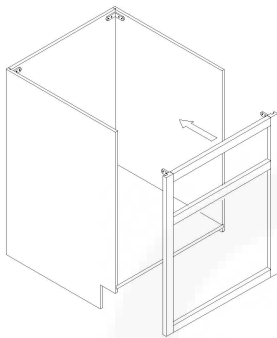


STEP
5

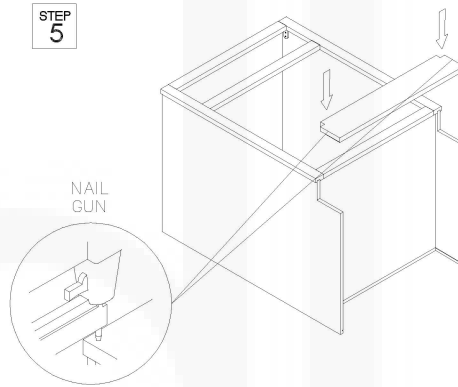


STEP
6

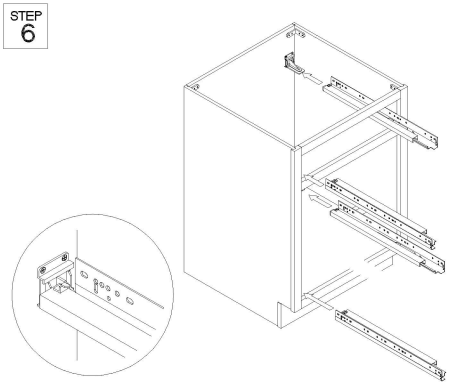


STEP
7

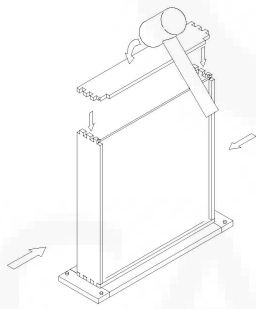


STEP
8

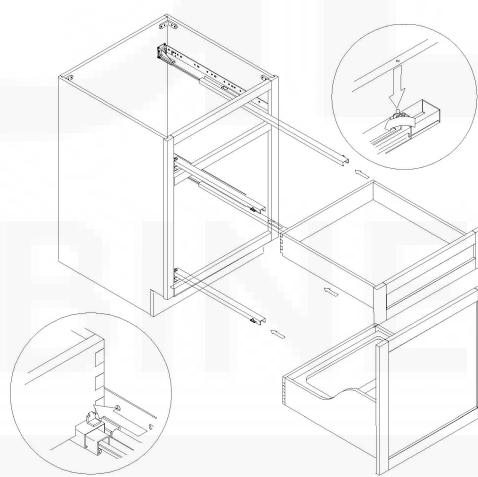


STEP
9

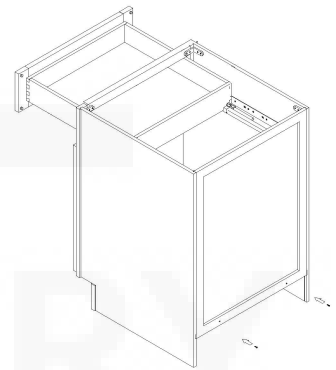

STEP
10

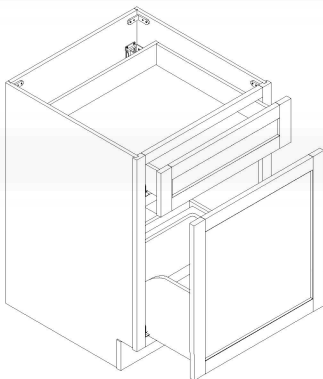

ASSEMBLY INSTRUCTIONS - WALL CABINET (WITH SHELVES)

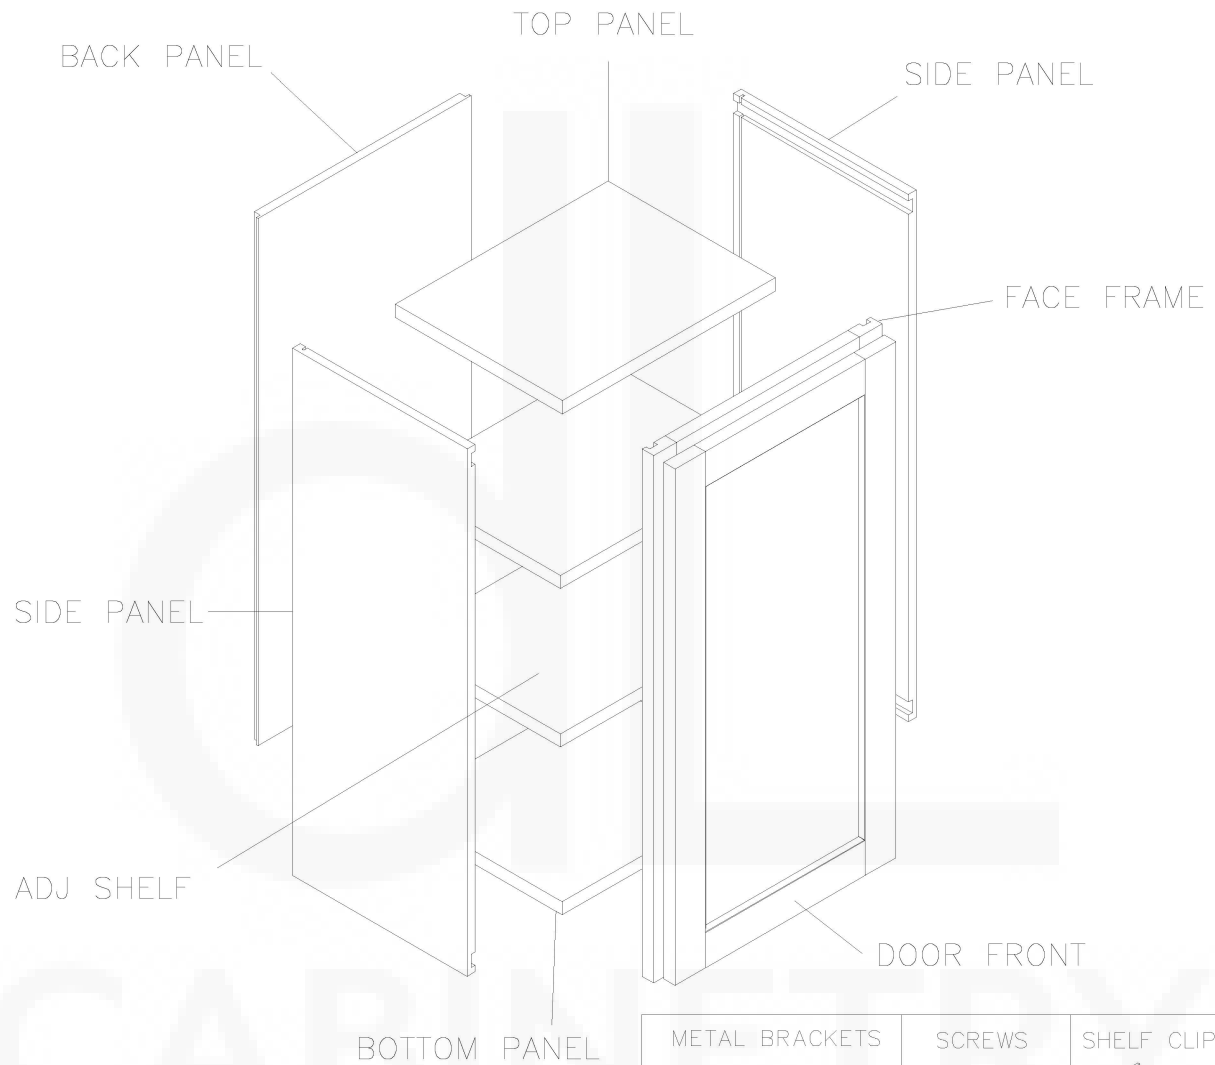


TOOLS



SCREW
DRIVER



NAIL
GUN

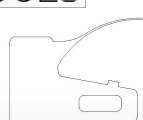

STAPLER




SPOTNAILS
XC1008


This instruction applies to the following items:

W1224-W2724	W0930-W2130	W2430-W3630
W3024-W3624	W0936-W2136	W2436-W3636
W302427-W362427	W0942-W2142	W2442-W3642


STEP
1

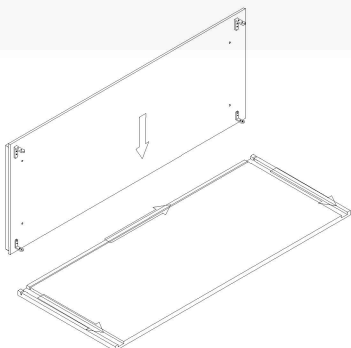


STEP
2

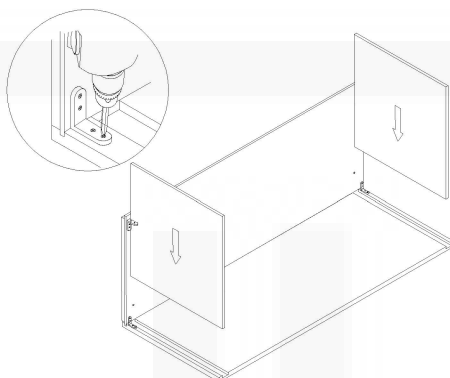


STEP
3

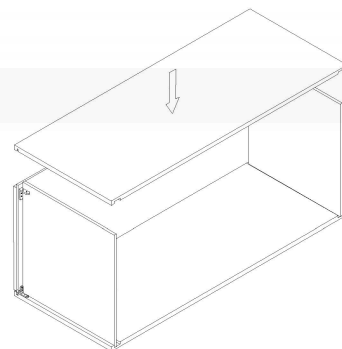


STEP
4

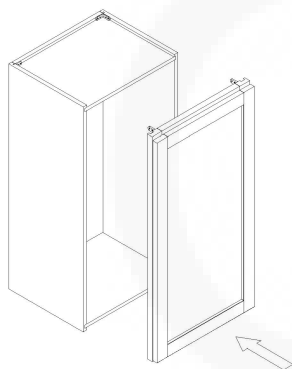

STEP
5

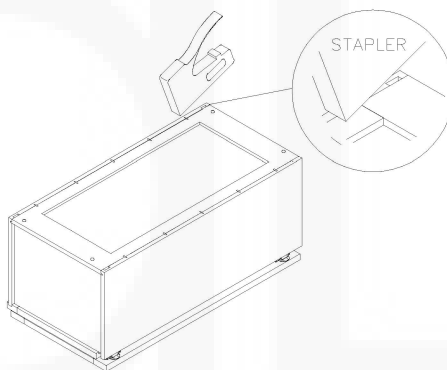


STEP
6

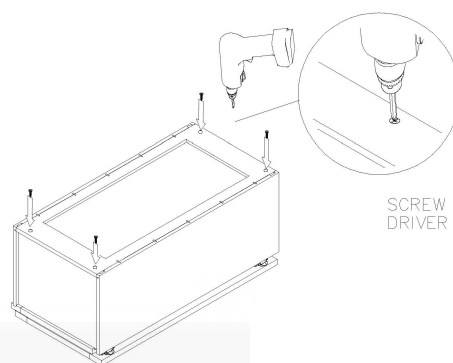


SCREW
DRIVER

STEP
7

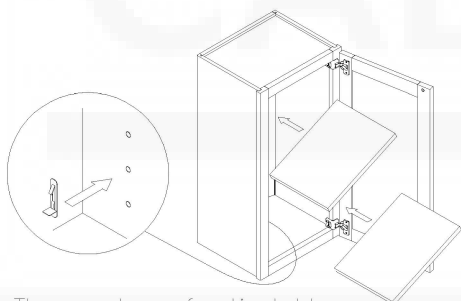


The number of adjustable
shelf depends on the actual
cabinet type

STEP
8



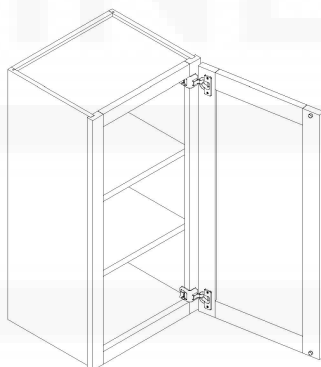


STEP
9

Double door installation
method is the same as above

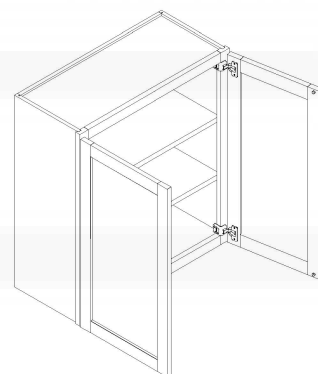


ASSEMBLY INSTRUCTIONS - WALL CABINET (WITHOUT SHELVES)

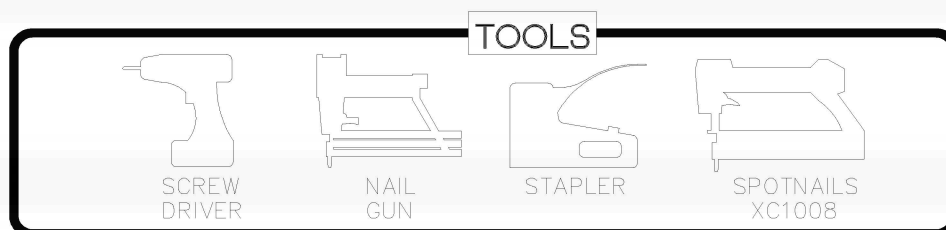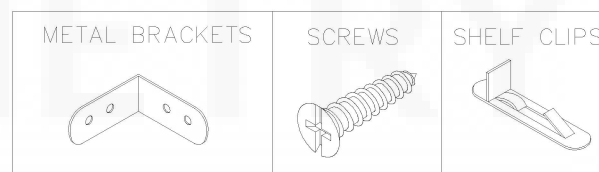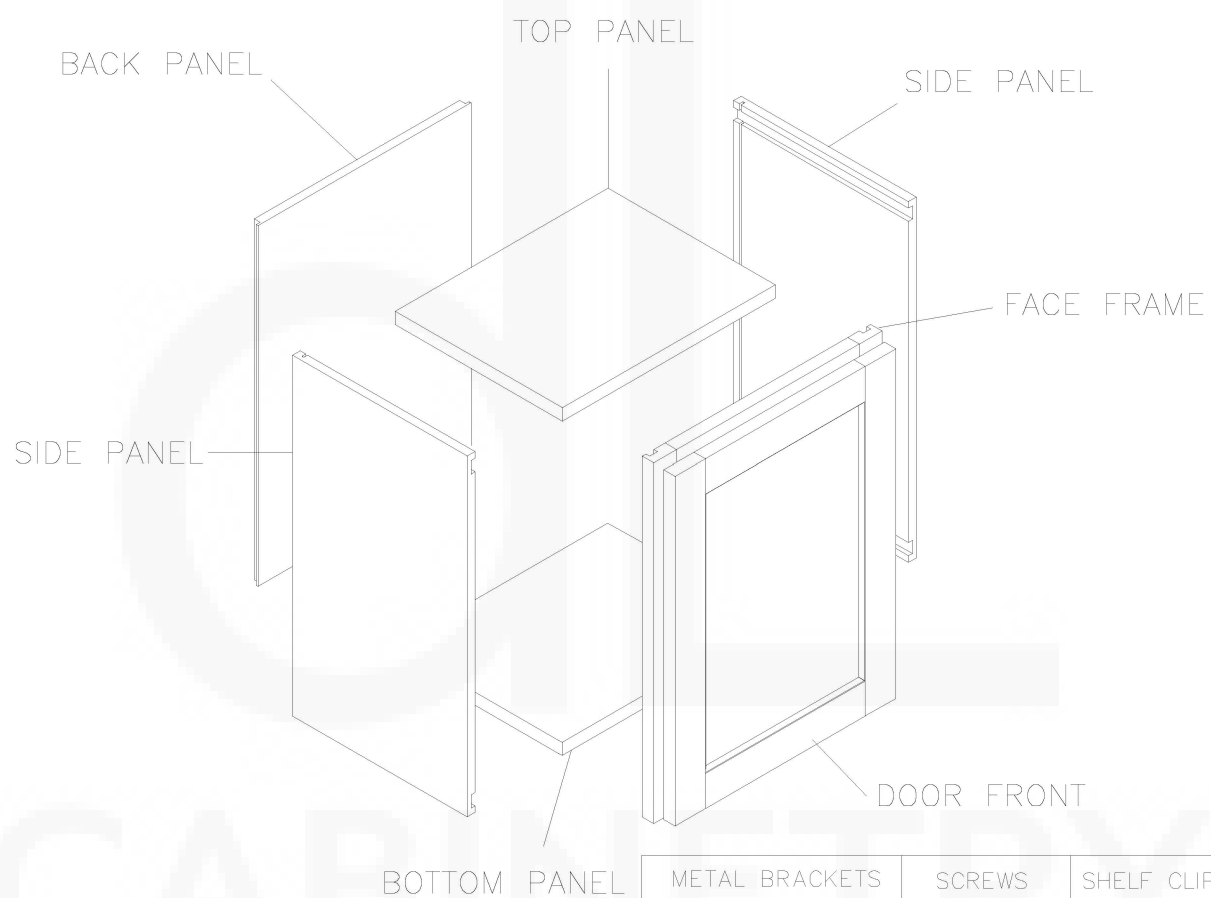


This instruction applies to the following items:

W2412-W2418	W3012-W3612	W3015-W3615	W3018-W3618
W301227-W361227	W301527-W361527	W301827-W361827	


STEP
1

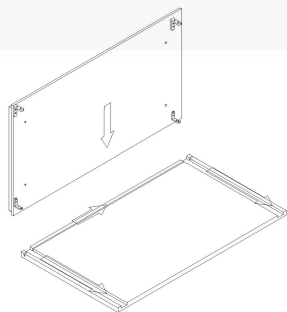


STEP
2

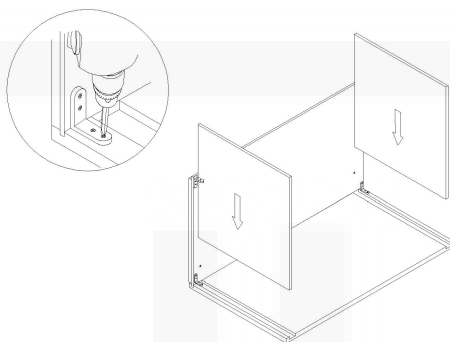


STEP
3

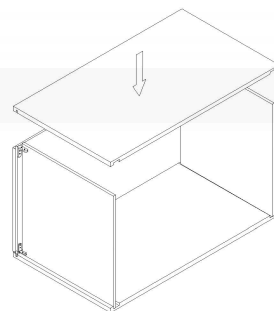


STEP
4

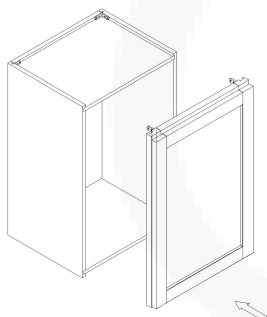


STEP
5

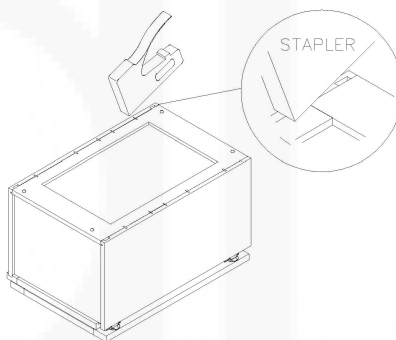

STEP
6

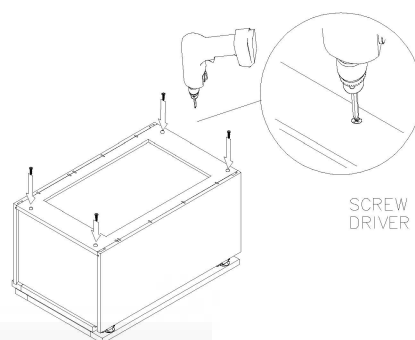


STEP
7



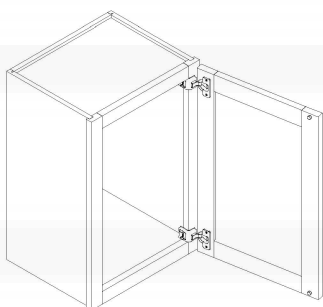


STEP
8

Double door installation
method is the same as above

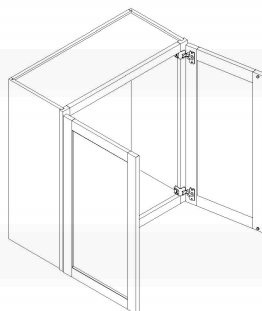


ASSEMBLY INSTRUCTIONS - WALL BLIND CORNER CABINET

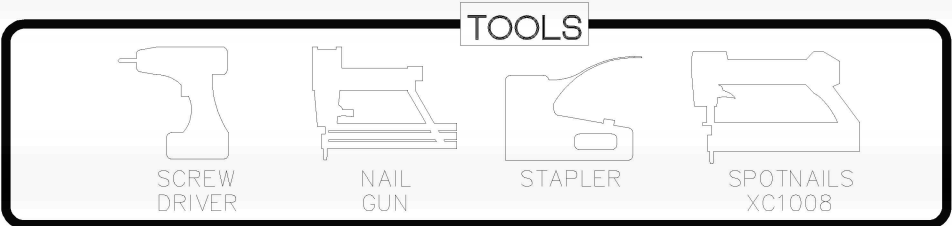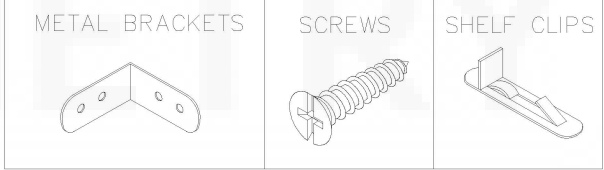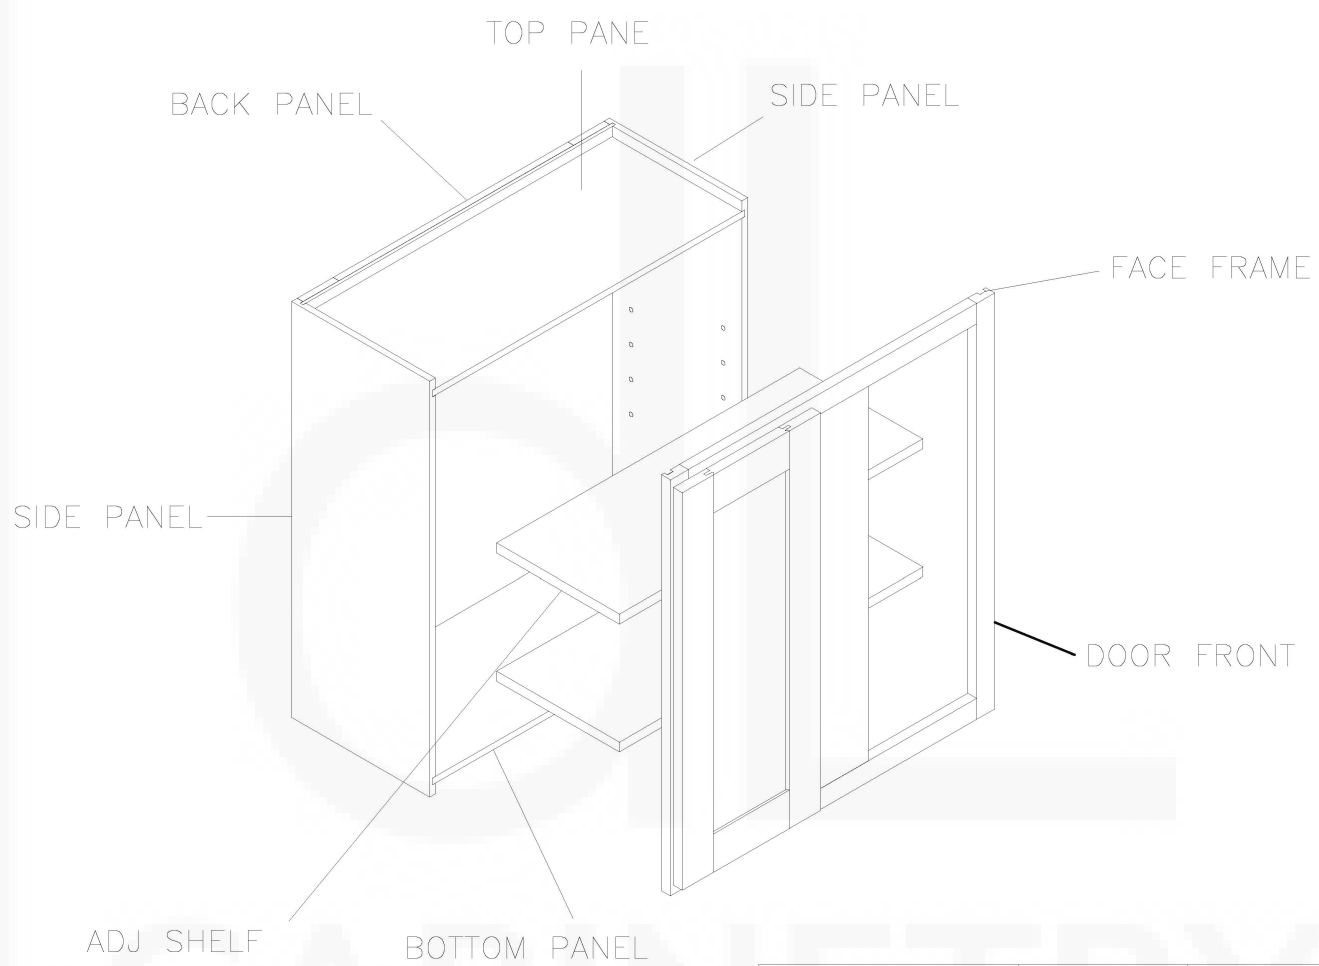


This instruction applies to the following items:
WBC2730-WBC2742


STEP
1

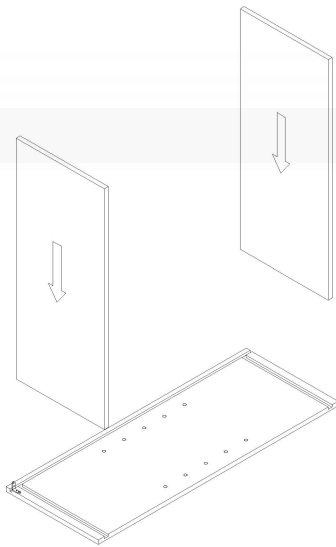

STEP
2

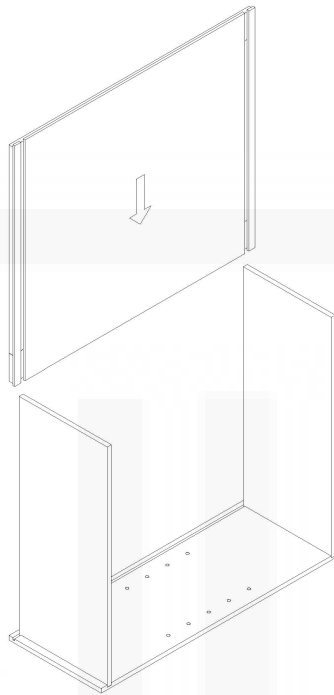


STEP
3

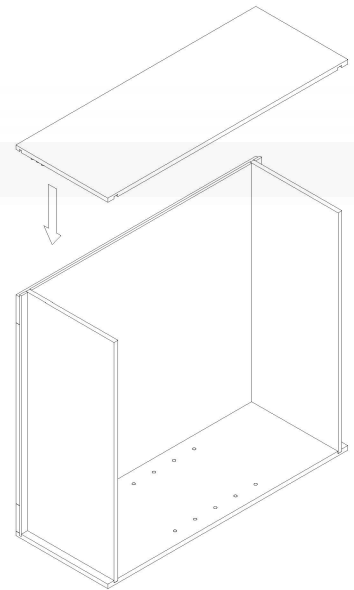


STEP
4


The number of adjustable shelf depends on the actual cabinet type

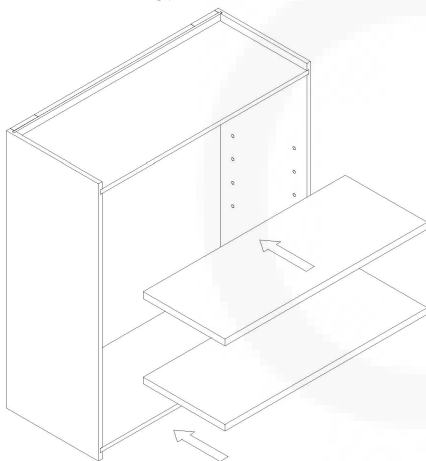


STEP
5

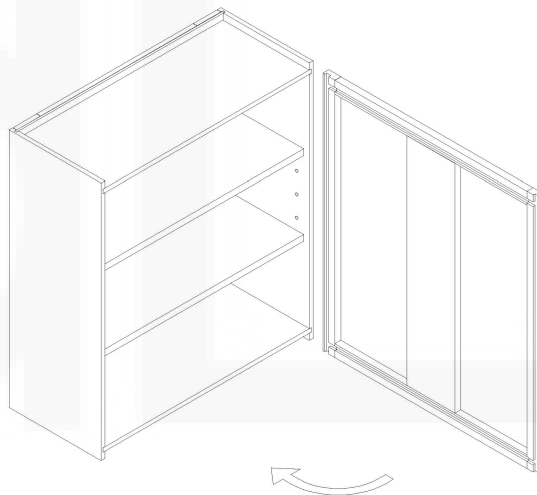



STEP
6

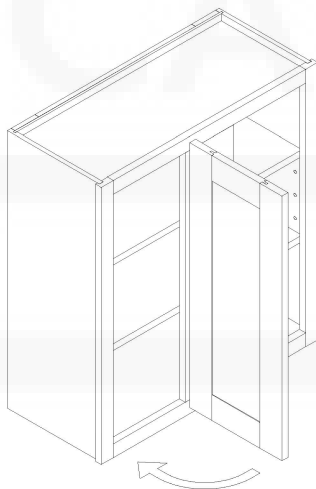


STEP
7

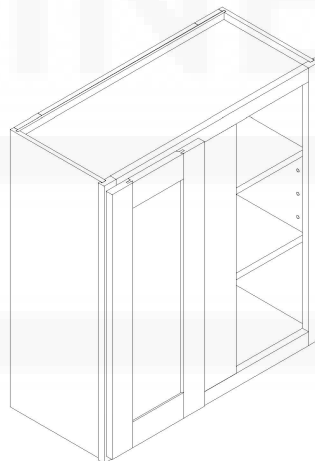

ASSEMBLY INSTRUCTIONS - WALL DIAGONAL CORNER CABINET

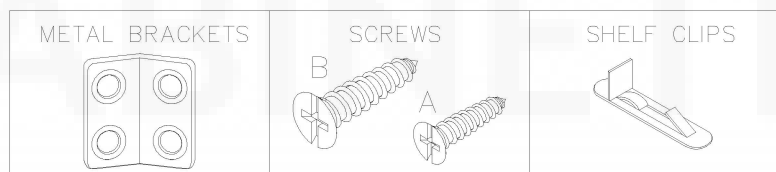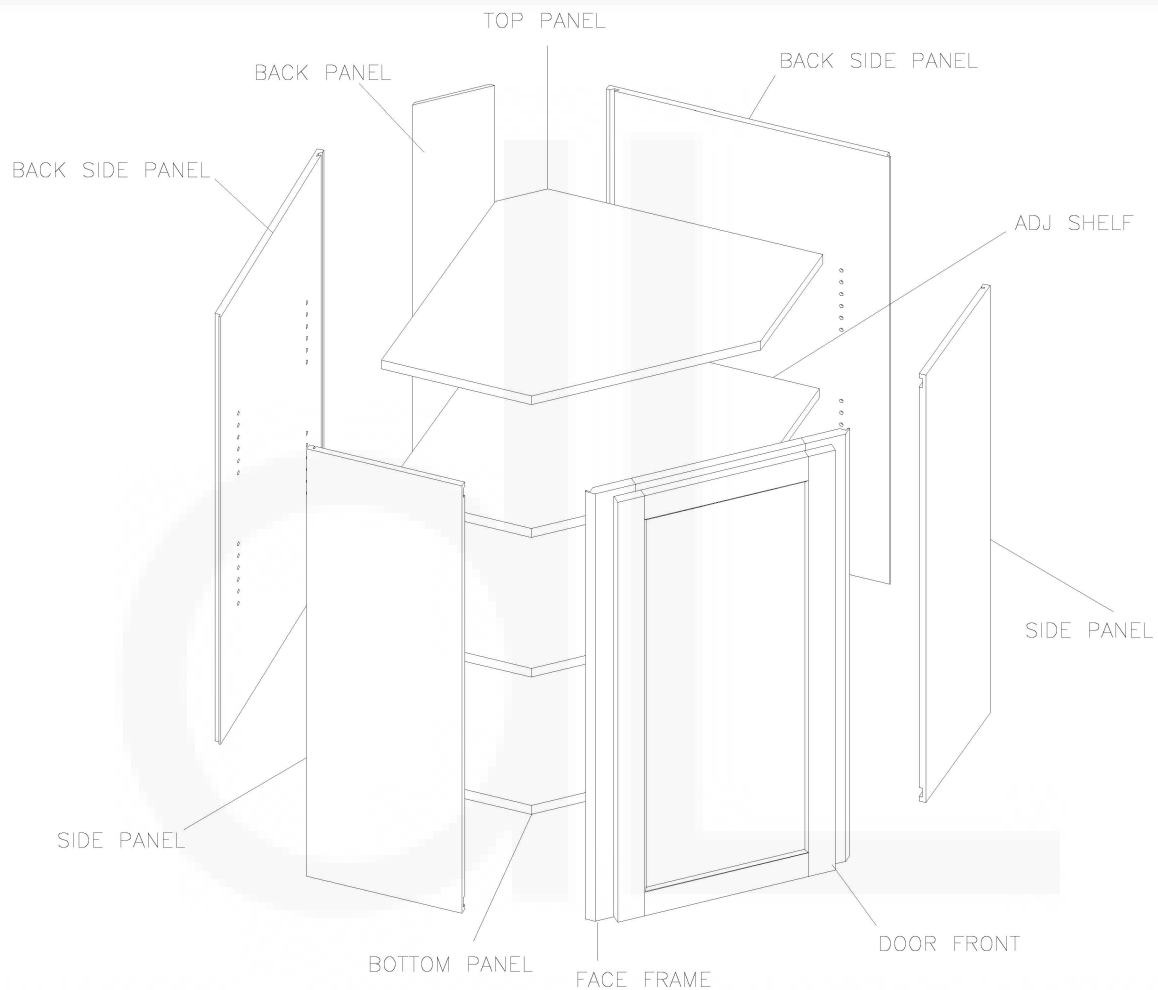


TOOLS

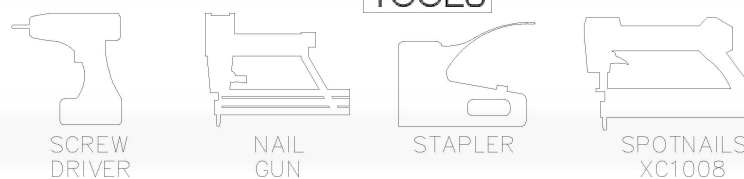


This instruction applies to the following items:

WDC243012, WDC243612, WDC244212


STEP 1

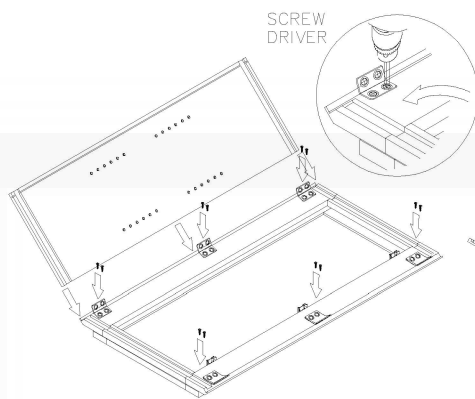


STEP 2

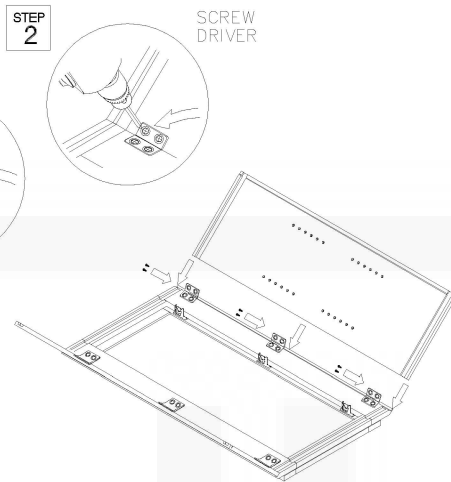


STEP 3

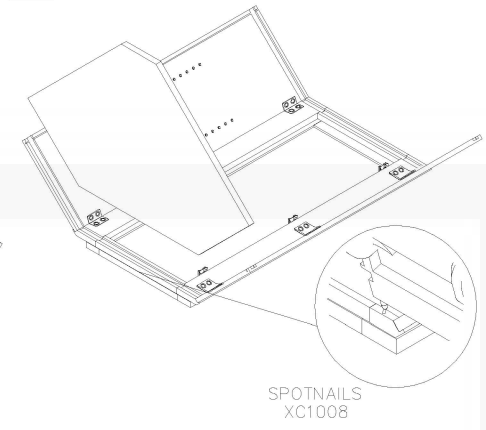


STEP 4

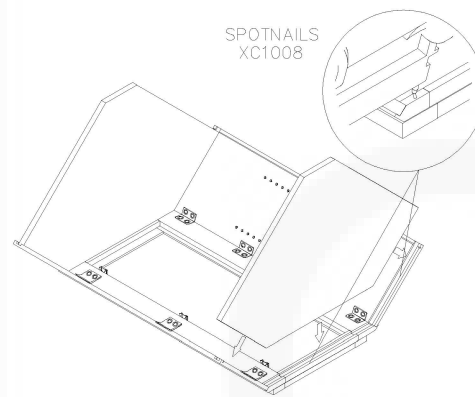


STEP 5

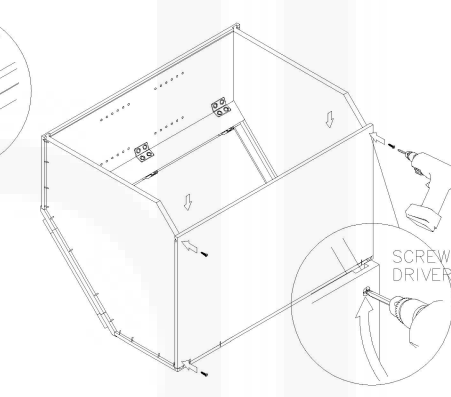


STEP 6

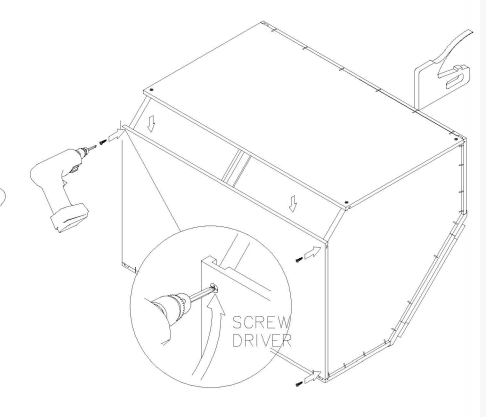


STEP 7

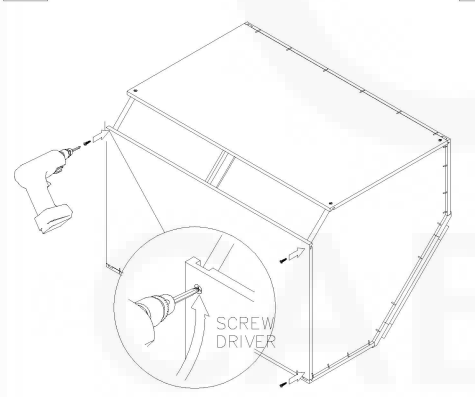


STEP 8

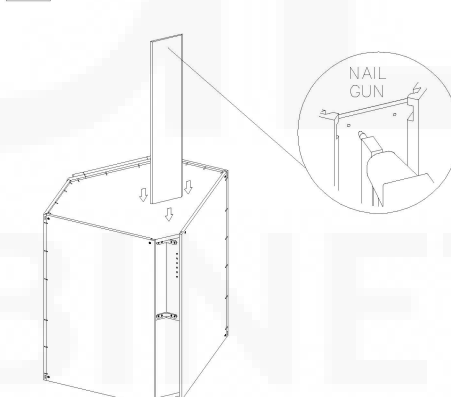



STEP 9

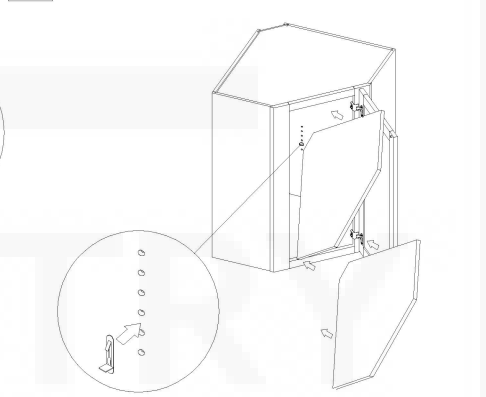

STEP 10

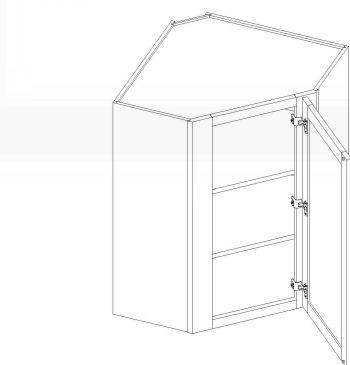

ASSEMBLY INSTRUCTIONS – WALL MICROWAVE CABINET

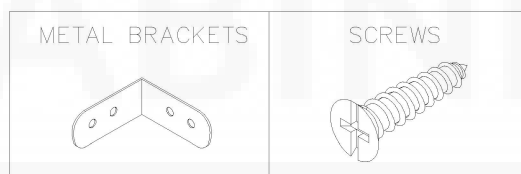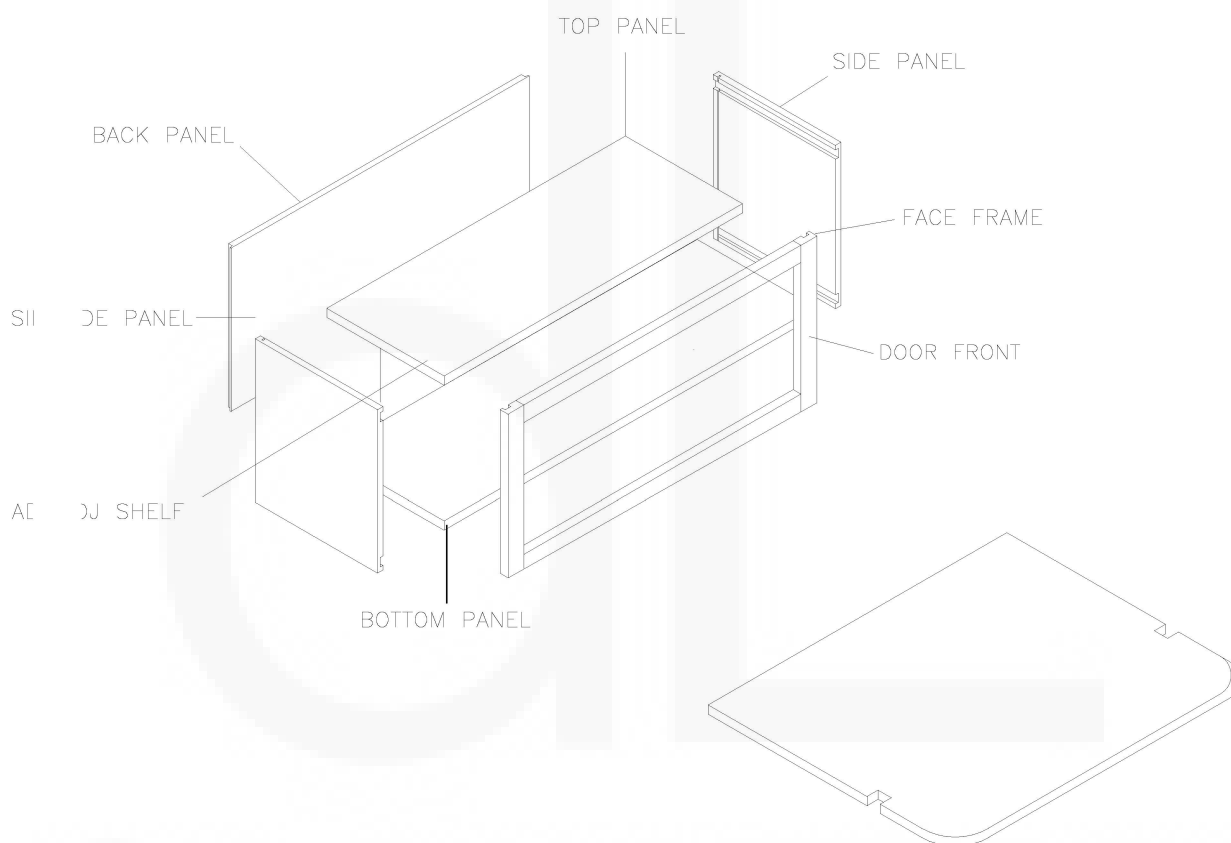

TOOLS



SCREW DRIVER



NAIL GUN



STAPLER




SPOTNAILS XC1008


This instruction applies to the following items:

WMC3018




STEP
1

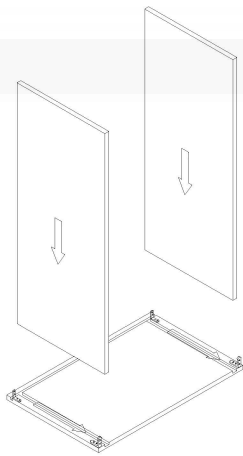


STEP
2

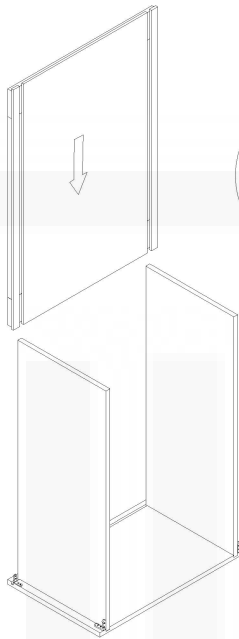


STEP
3

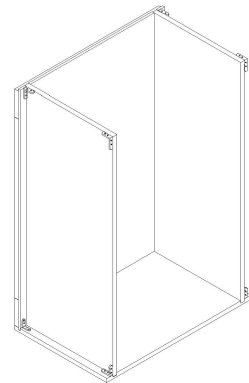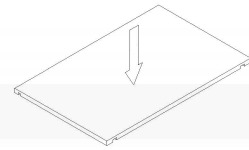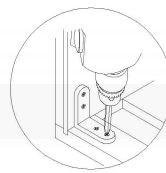


STEP
4

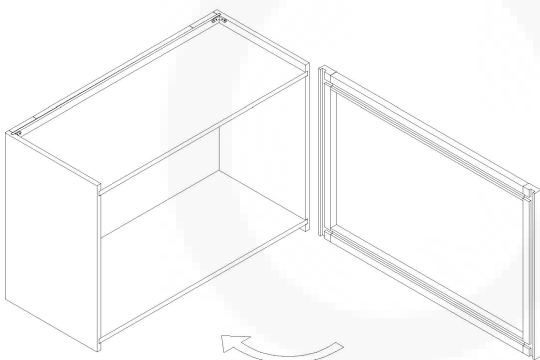




STEP
5

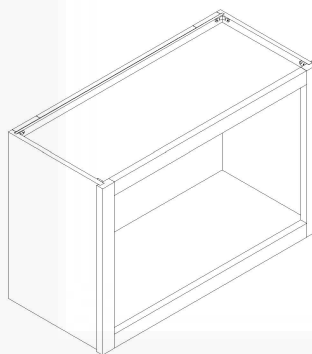

STEP
6

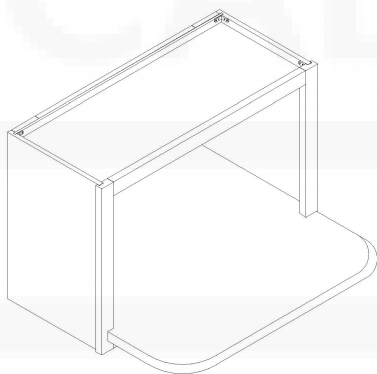


ASSEMBLY INSTRUCTIONS – WALL WINE RACK CABINET

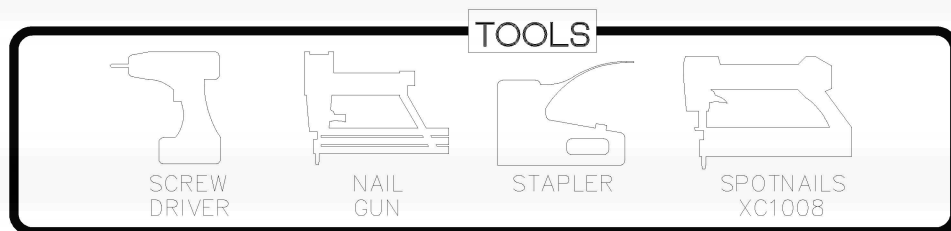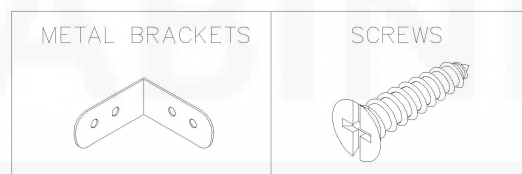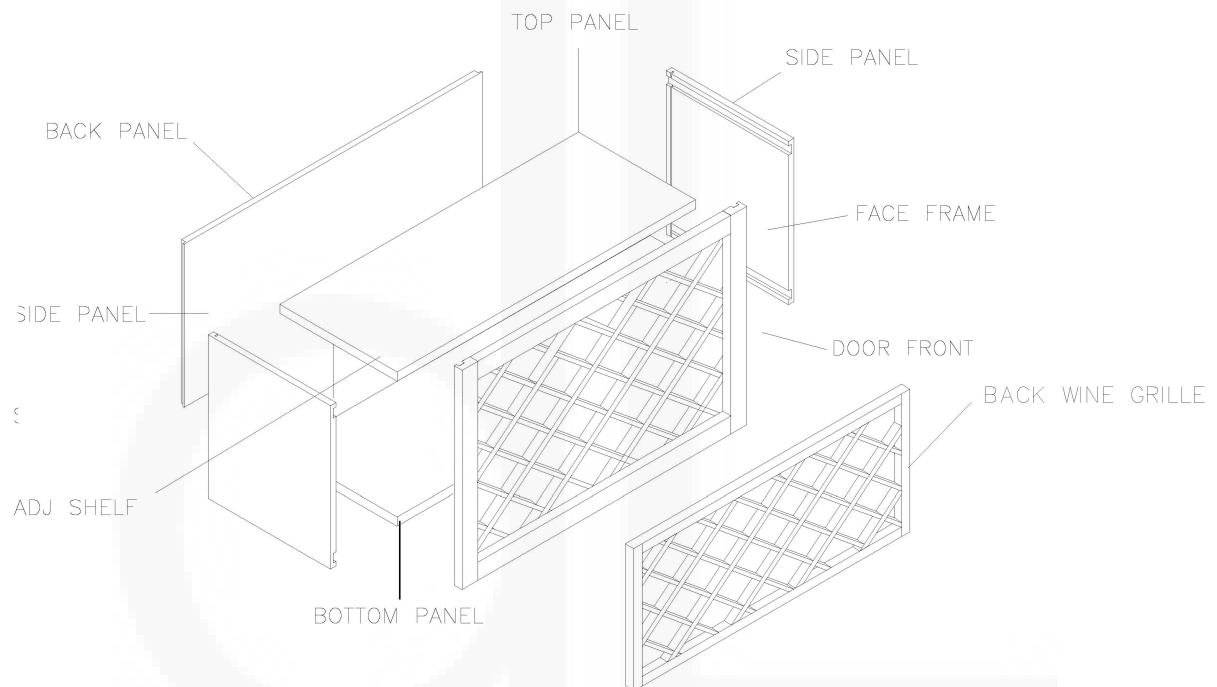


This instruction applies to the following items:

WRC3018



STEP
1

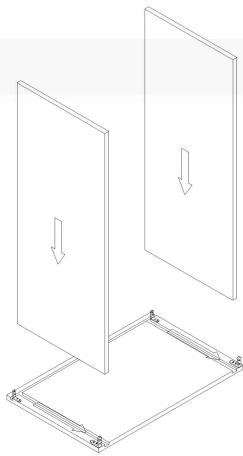


STEP
2

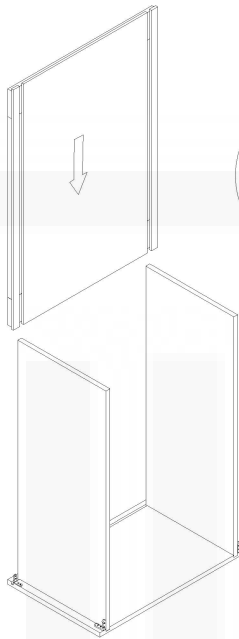


STEP
3

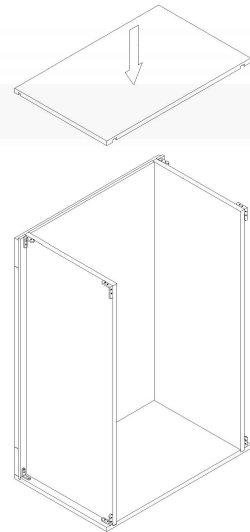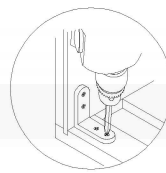


STEP
4

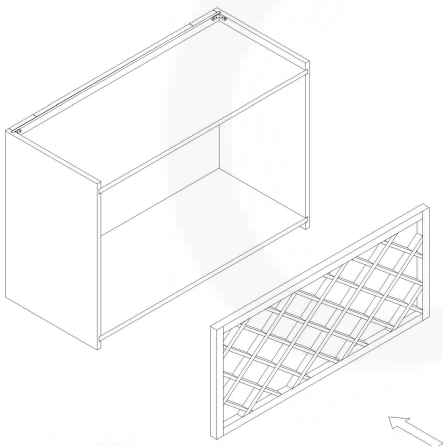


STEP
5

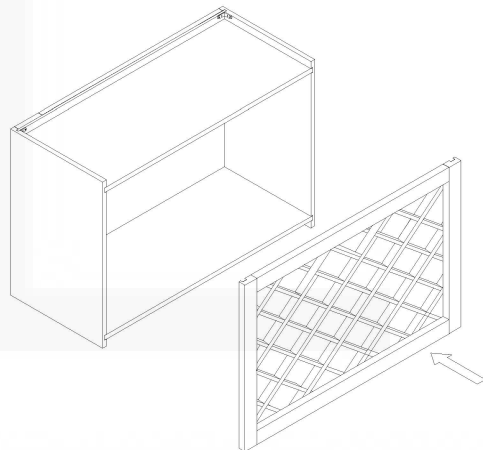

STEP
6

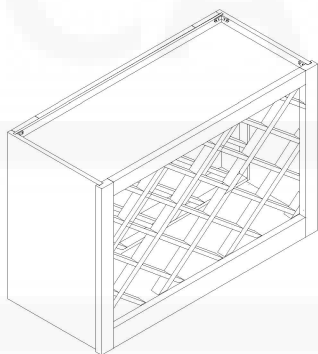

ASSEMBLY INSTRUCTIONS - WALL PANTRY CABINET

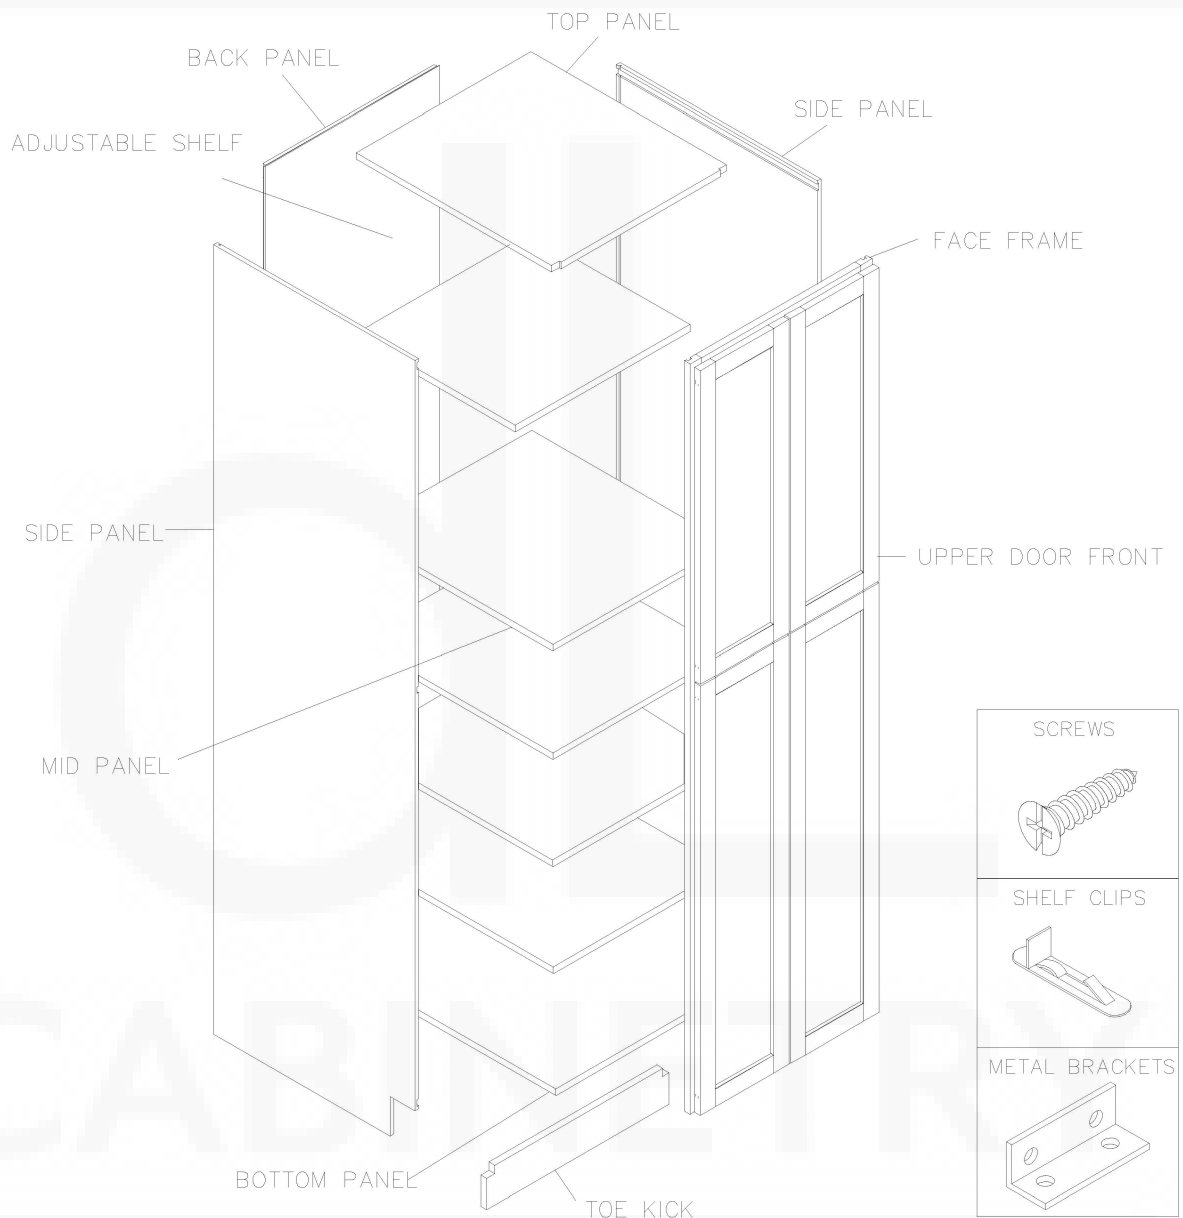

TOOLS




SCREW
DRIVER



RUBBER
MALLET



NAIL
GUN




STAPLER


This instruction applies to the following items:

WP188427, WP248427, WP189027, WP249027, WP189627, WP249627
WP308427, WP309027, WP309627,


STEP 1

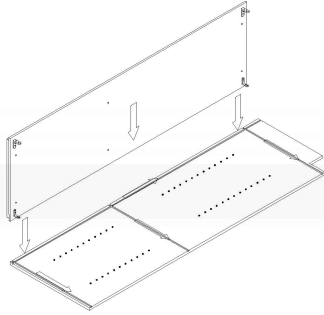


STEP 2

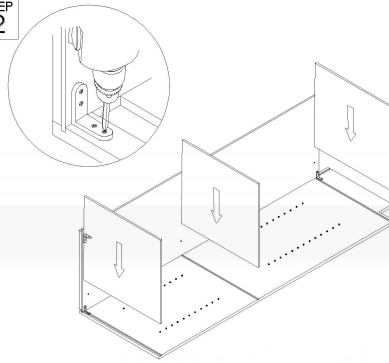


STEP 3

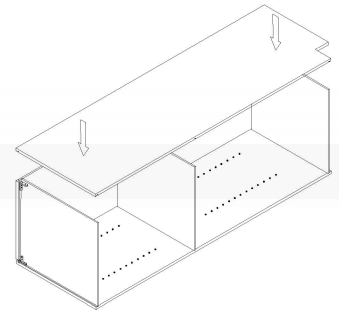


STEP 4

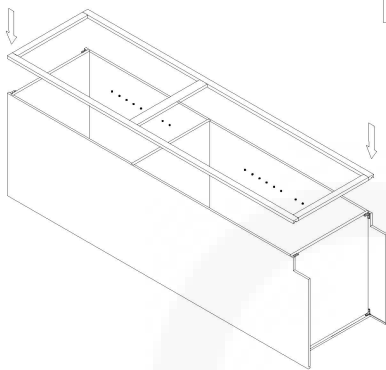


STEP 5

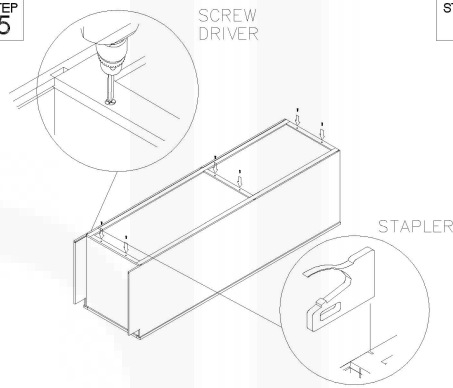


STEP 6

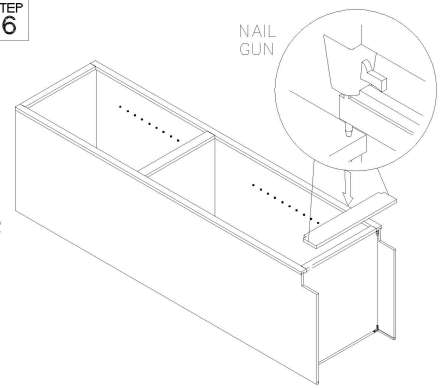


STEP 7

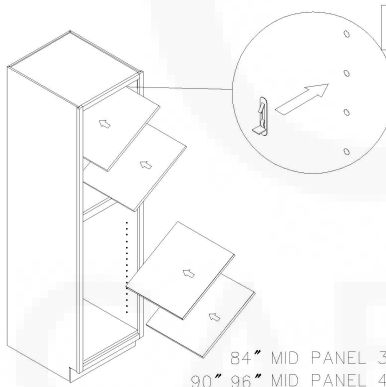


STEP 8

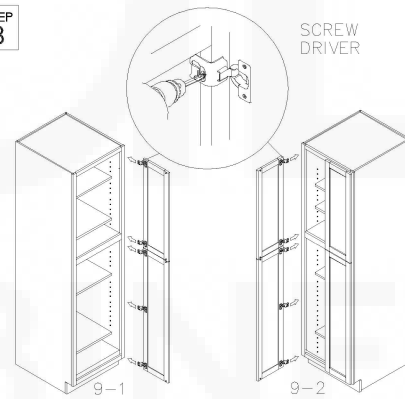

STEP 9

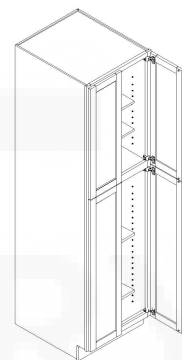

STEP 10



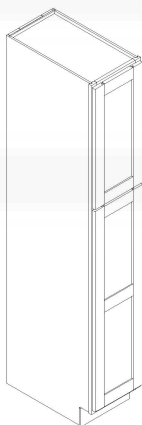


84" MID PANEL 3
90" 96" MID PANEL 4

9-1

9-2

ASSEMBLY INSTRUCTIONS - DOUBLE OVEN CABINET

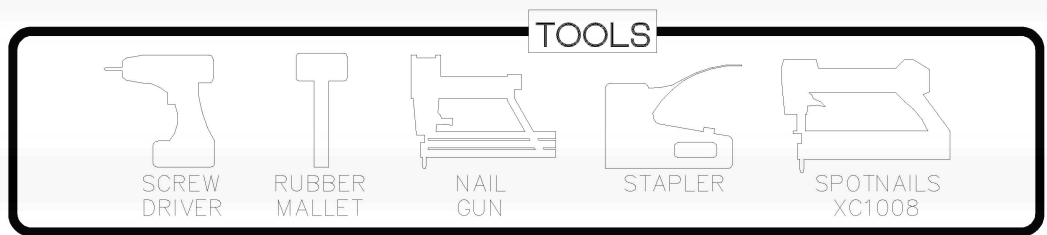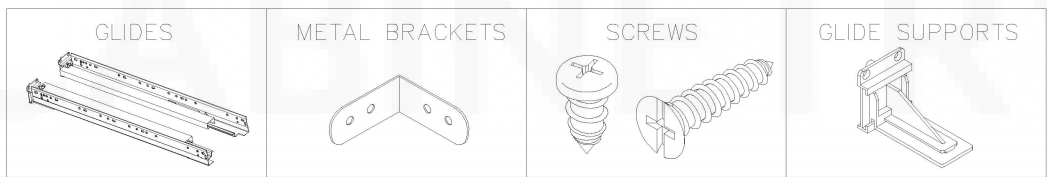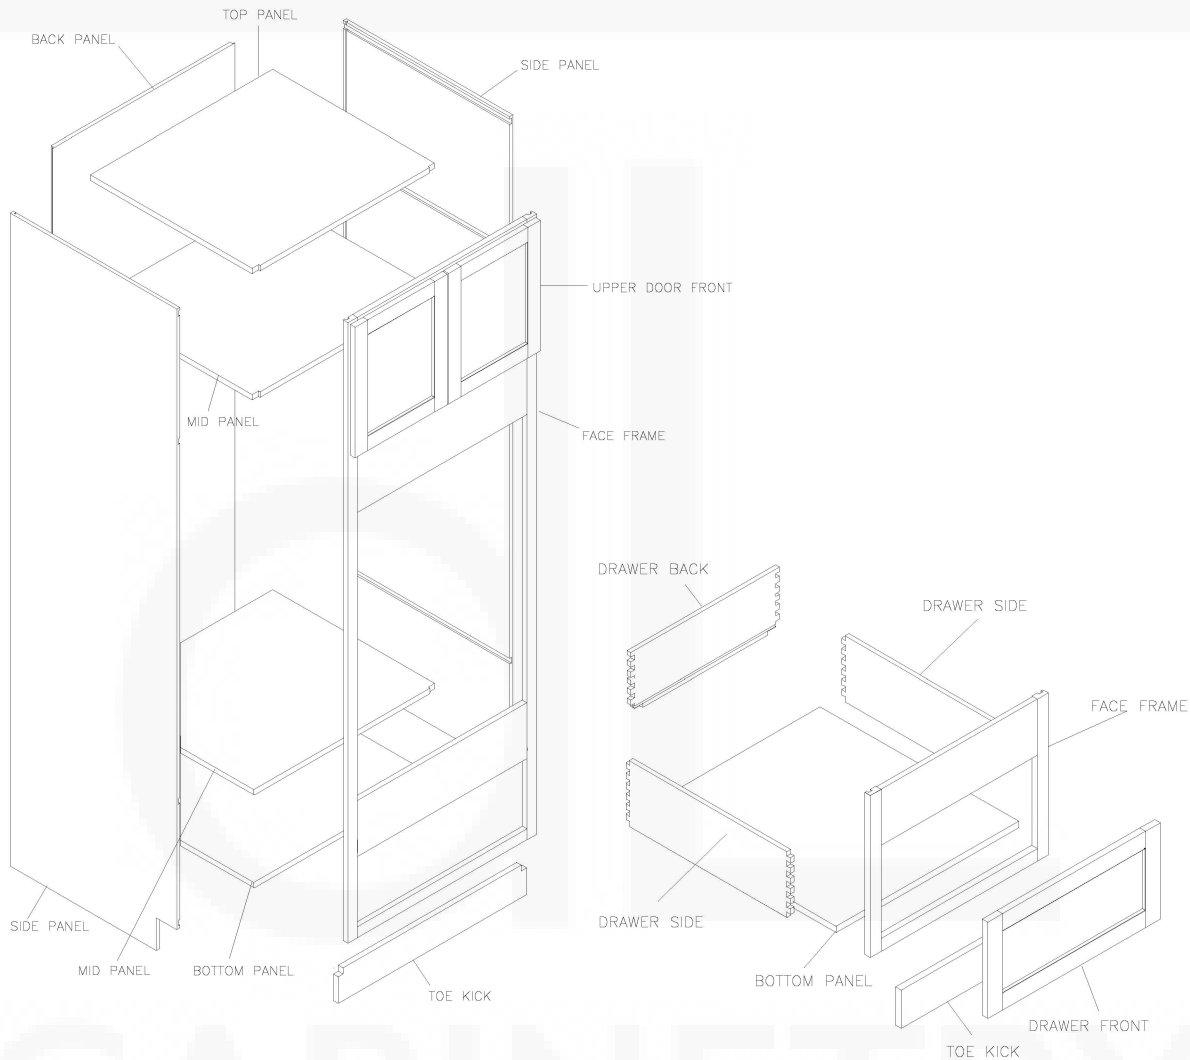


This instruction applies to the following items:
OVD338427,OVD339027,OVD339627


STEP 1




SCREW
DRIVER

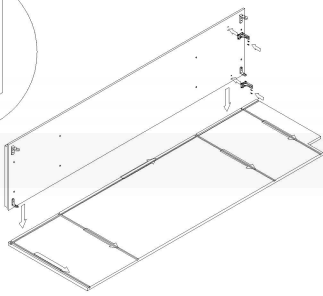


STEP 2

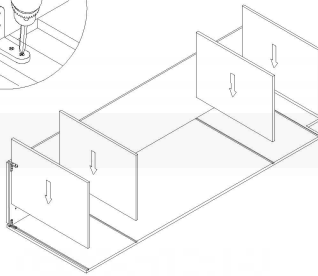


STEP 3

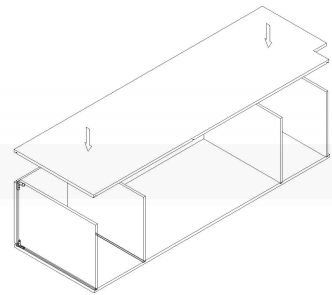

STEP 4

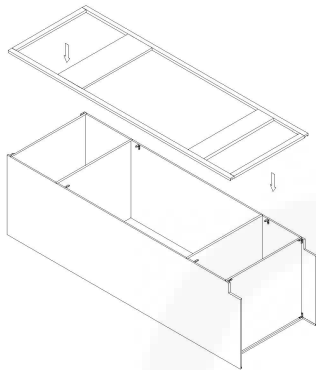


STEP 5

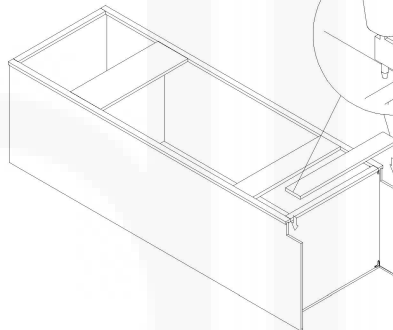


NAIL
GUN




STEP 6

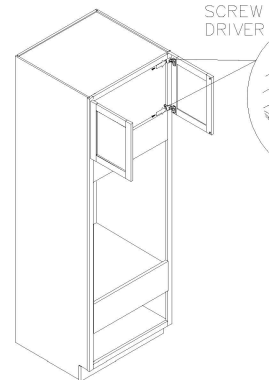


SCREW
DRIVER

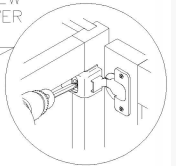




STEP 7

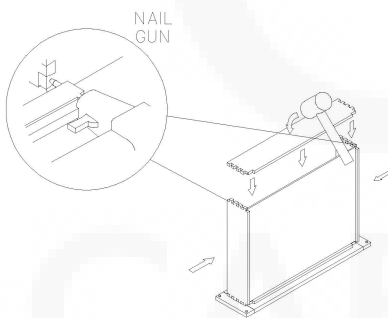



NAIL
GUN

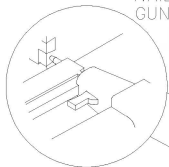


STEP 8

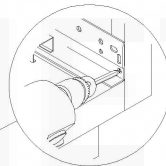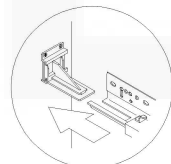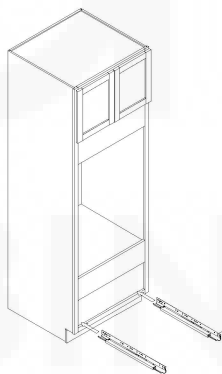




STEP 9

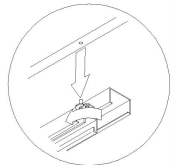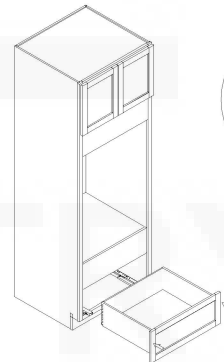

STEP 10

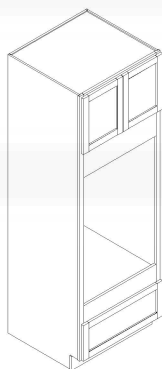


ASSEMBLY INSTRUCTIONS - COUNTER LINEN CABINET

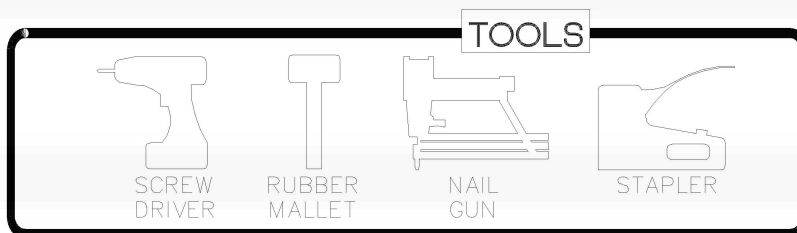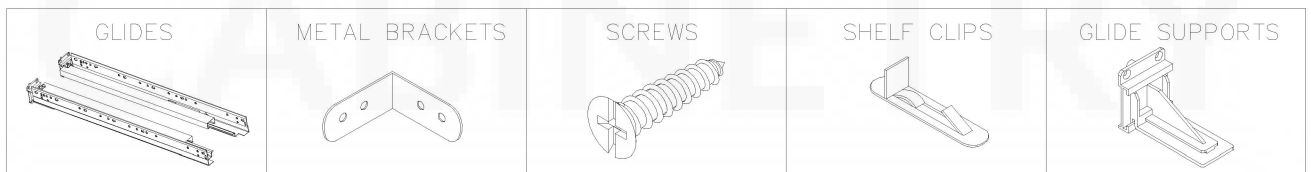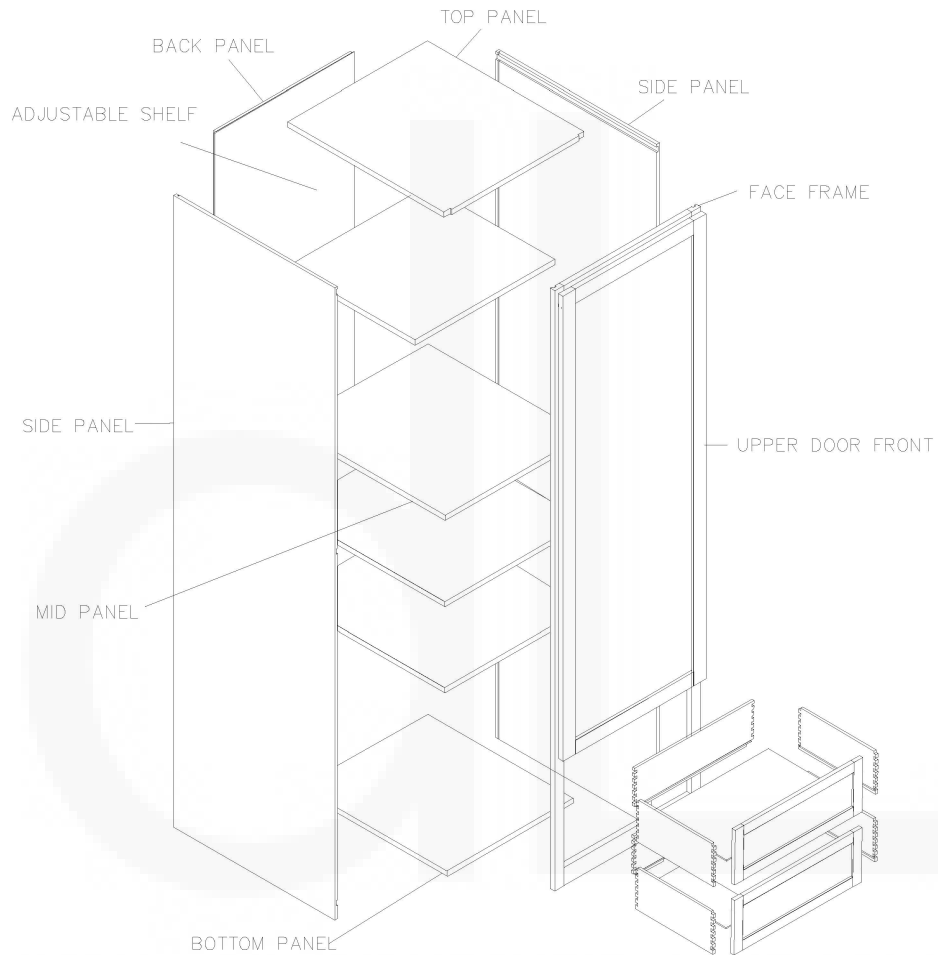


This instruction applies to the following items:
CL156012


STEP 1

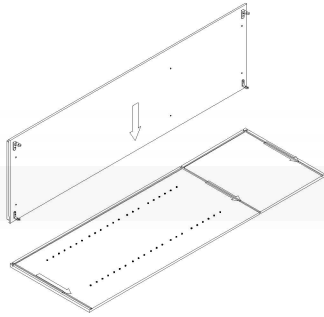


STEP 2

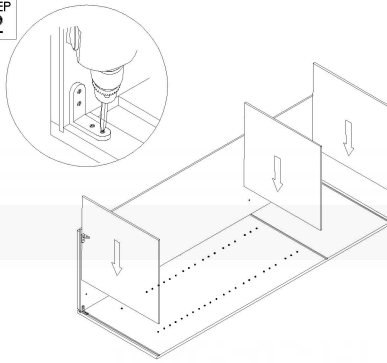


STEP 3

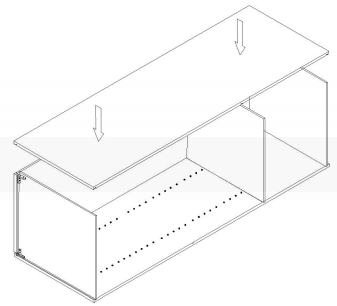


STEP 4

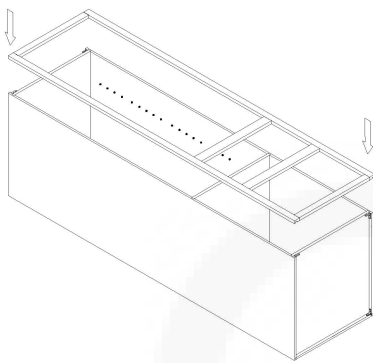


STEP 5

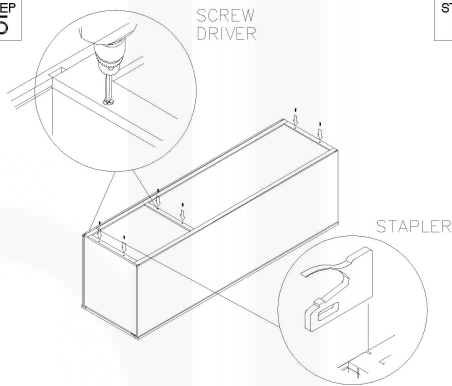


STEP 6

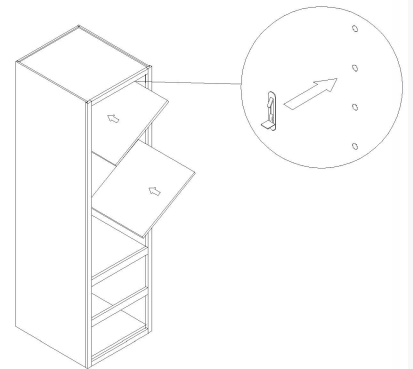


STEP 7

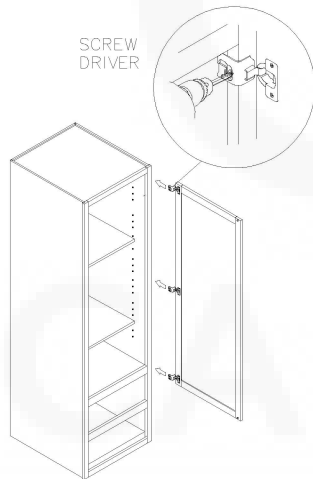


STEP 8

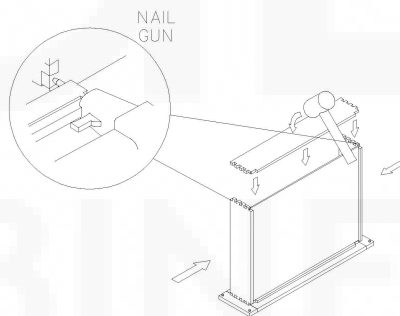

STEP 9

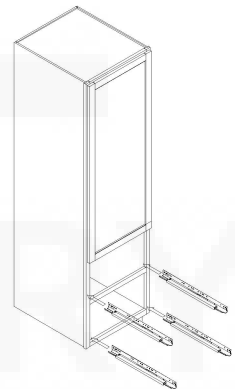


STEP 10

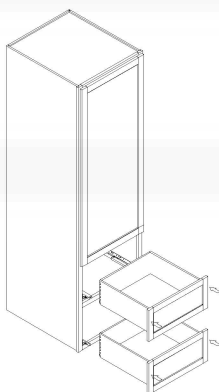


STEP 11




ASSEMBLY INSTRUCTIONS - VANITY CABINET

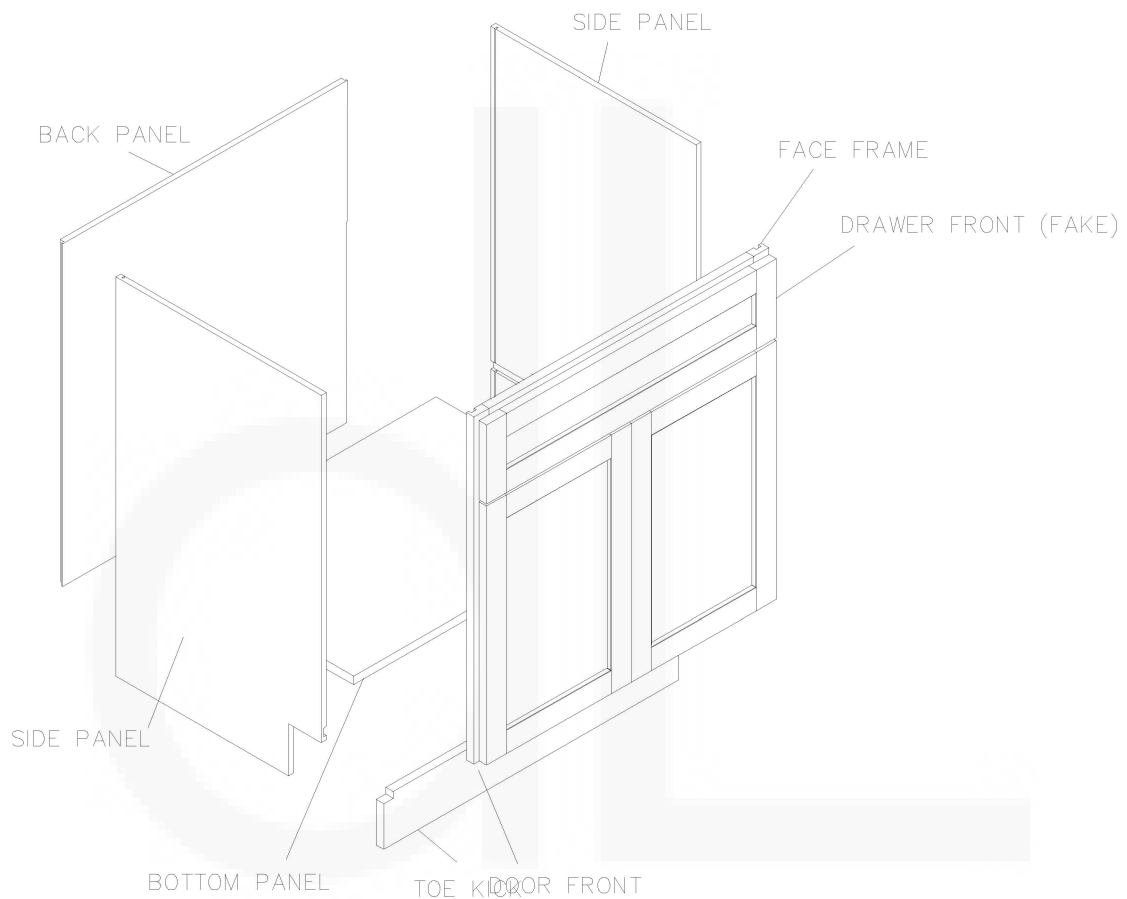

METAL BRACKETS



SCREWS



TOOLS




SCREW
DRIVER



RUBBER
Mallet




NAIL
GUN

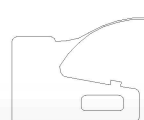


STAPLER

This instruction applies to the following items:
VAN24-VAN30 (Single false drawer)
VSB36 (Double false drawers)


STEP
1

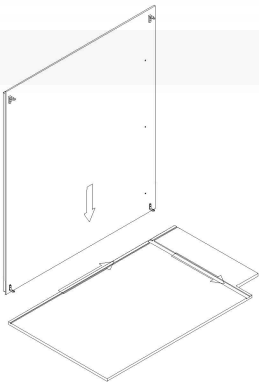


STEP
2

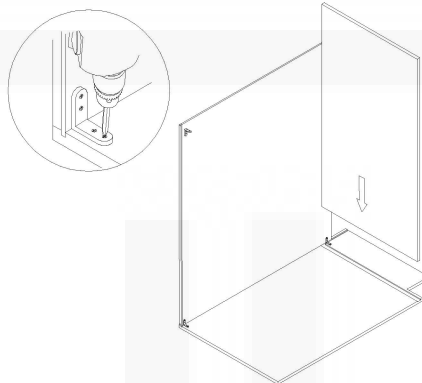


STEP
3

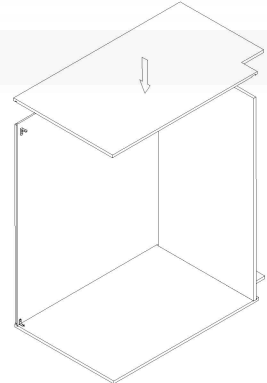


STEP
4

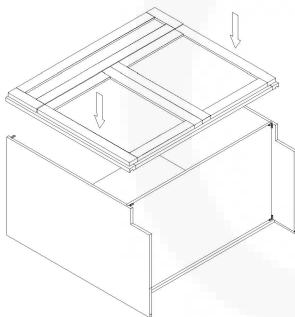

STEP
5

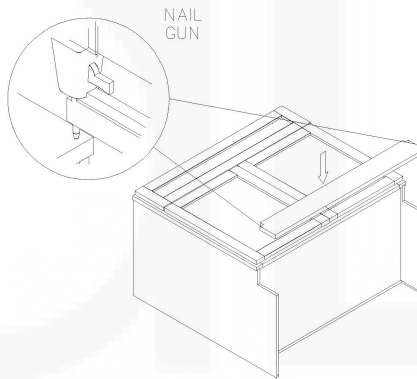


STEP
6

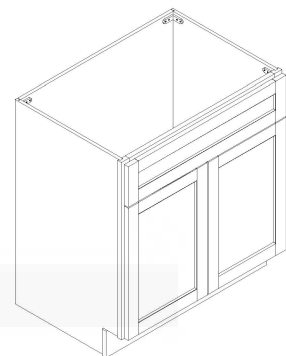




(Single false drawer)

STEP
7

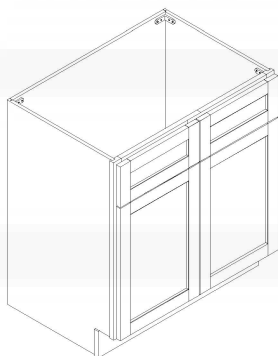


(Double false drawers)

ASSEMBLY INSTRUCTIONS - VANITY CABINET (WITH 2 DRAWERS)

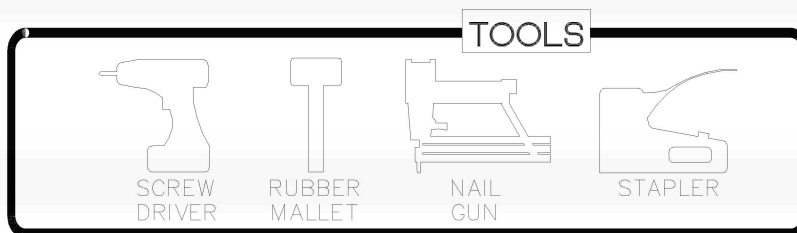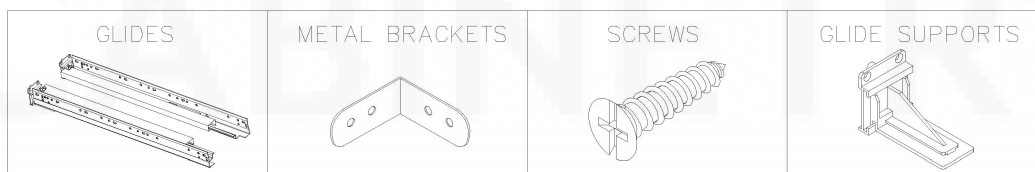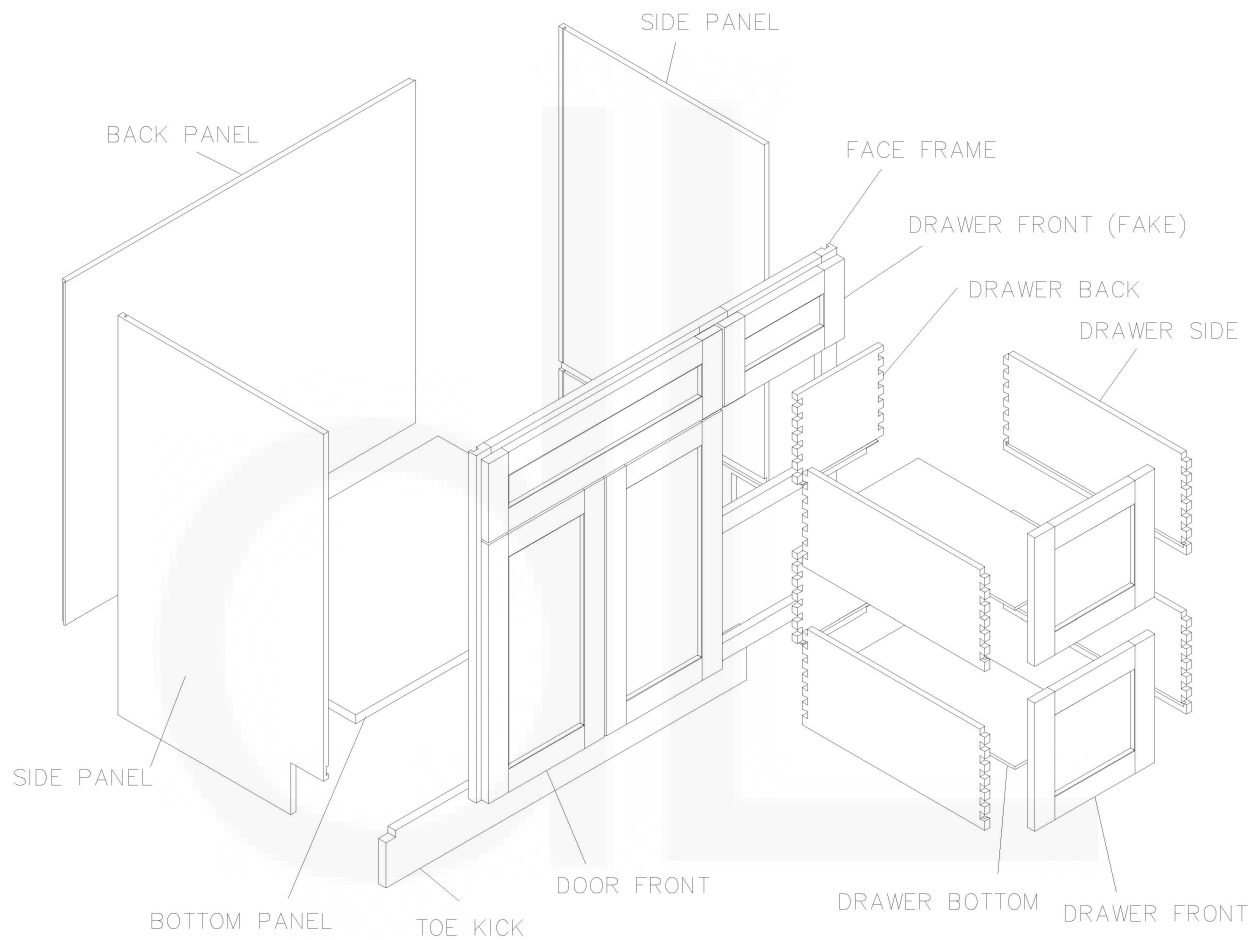


This instruction applies to the following items:
VAN36DL,VAN36DR ,VAN42DL,VAN42DR


STEP
1

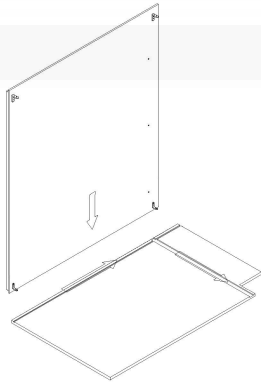


STEP
2

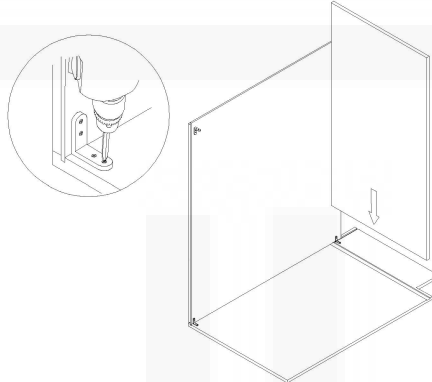


STEP
3

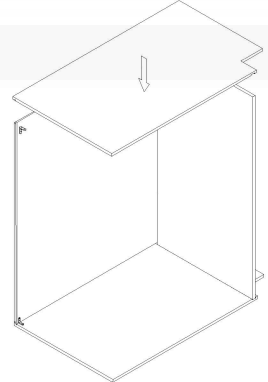


STEP
4

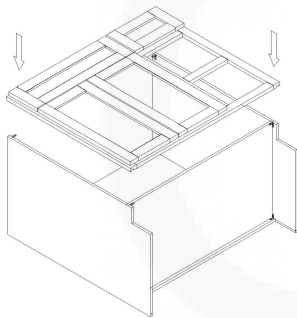


STEP
5

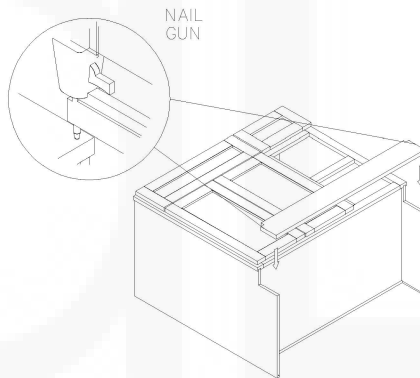


STEP
6

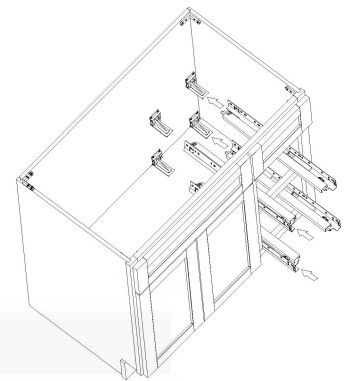


STEP
7

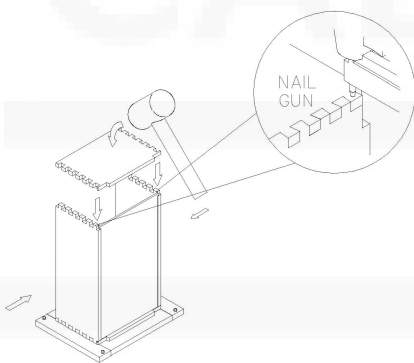




STEP
8

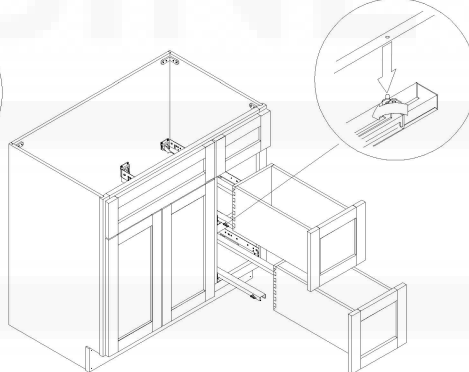

STEP
9

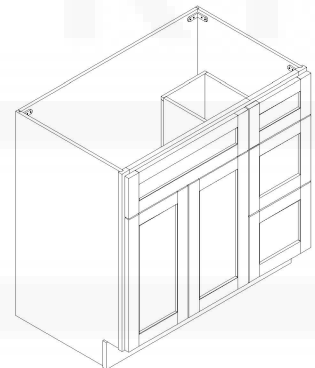


ASSEMBLY INSTRUCTIONS - VANITY CABINET (WITH 6 DRAWERS)

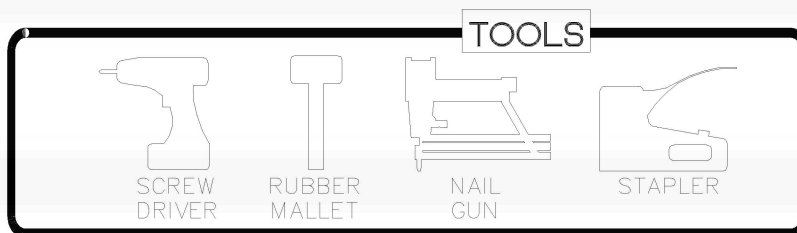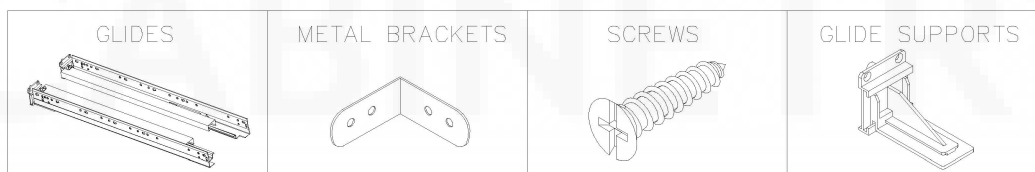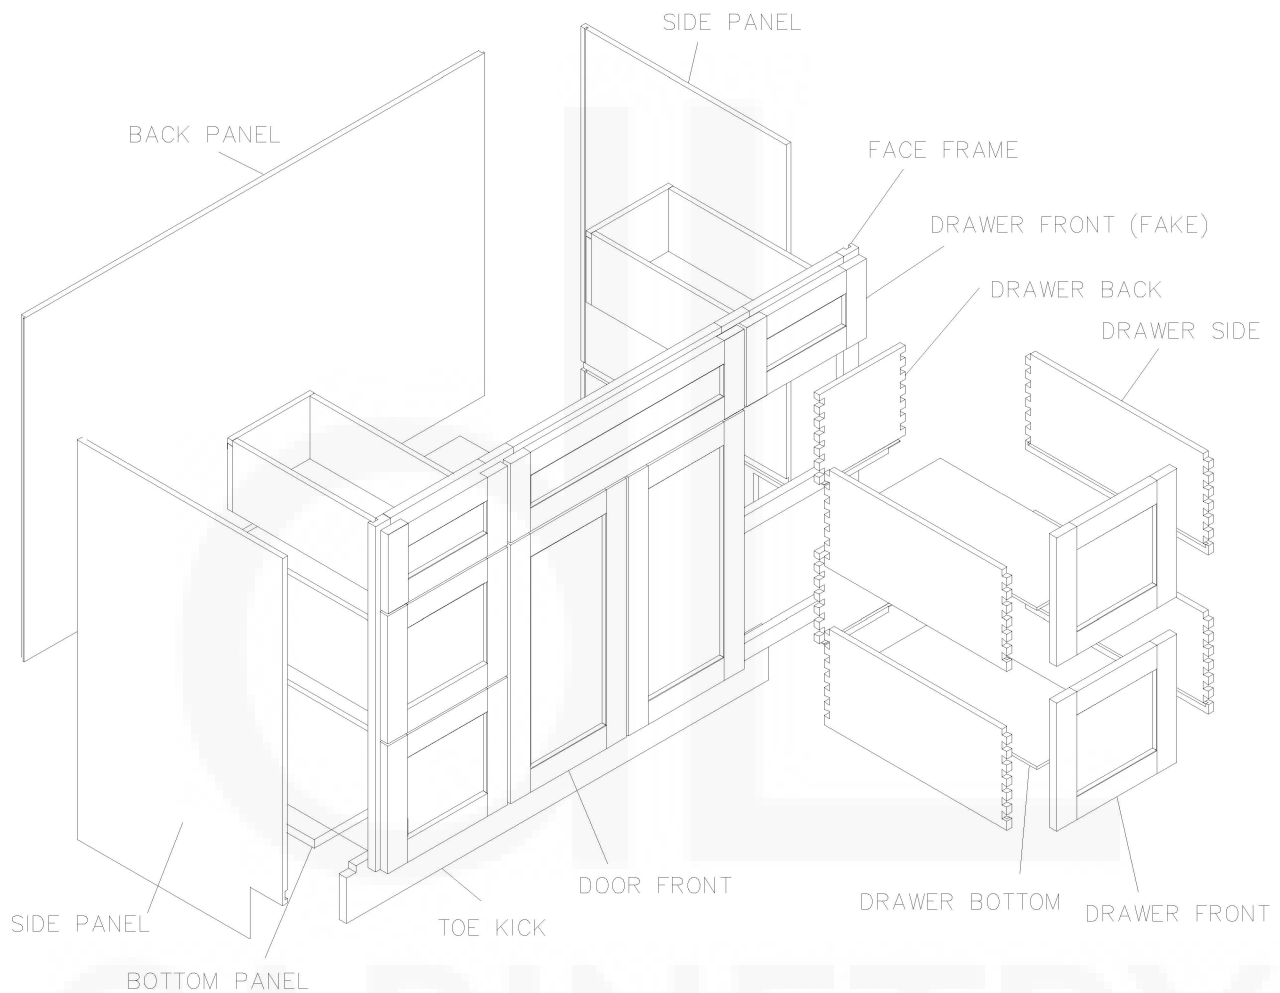


This instruction applies to the following items:
VAN48D-6, VAN60D-6


STEP
1

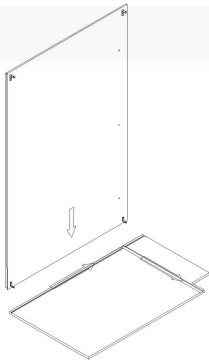


STEP
2

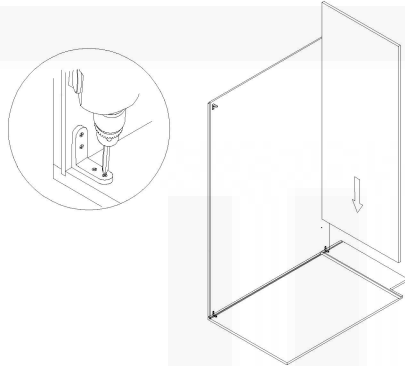


STEP
3

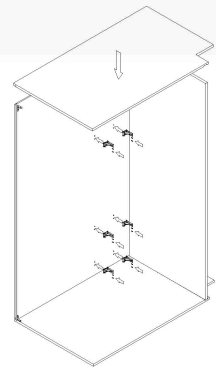


STEP
4

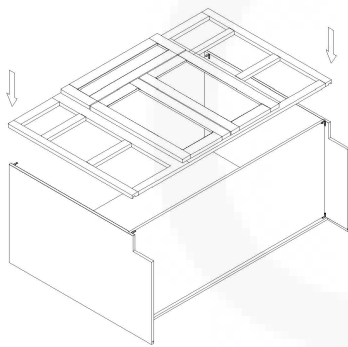


STEP
5

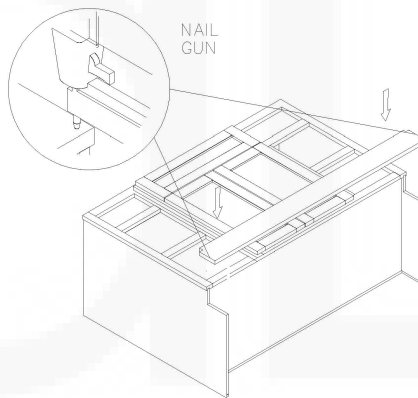


STEP
6

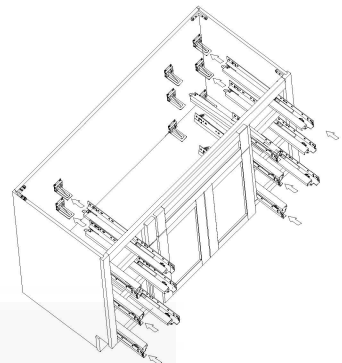


STEP
7

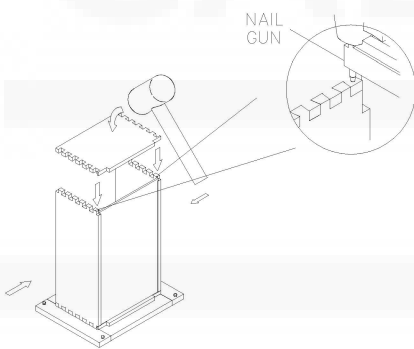




STEP
8

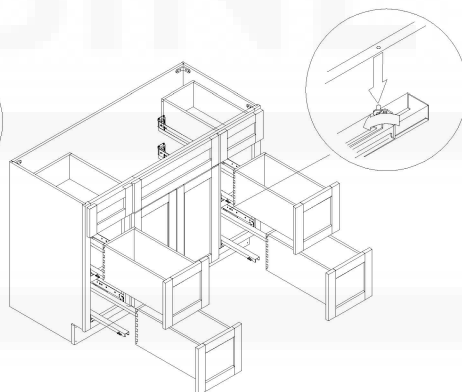

STEP
9

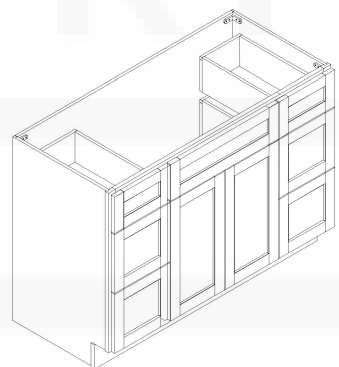


ASSEMBLY INSTRUCTIONS - VANITY CABINET (WITH 3 DRAWERS)

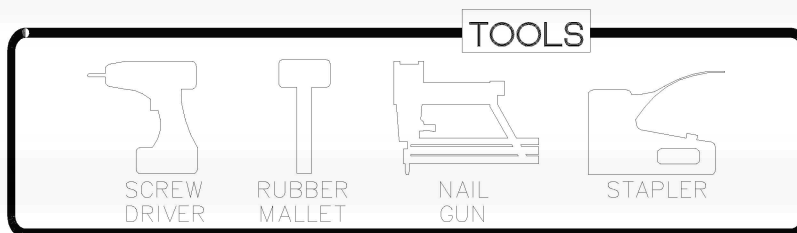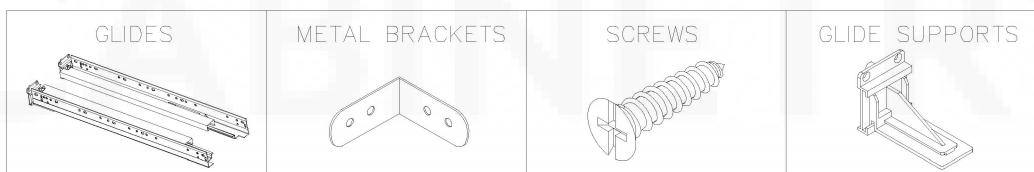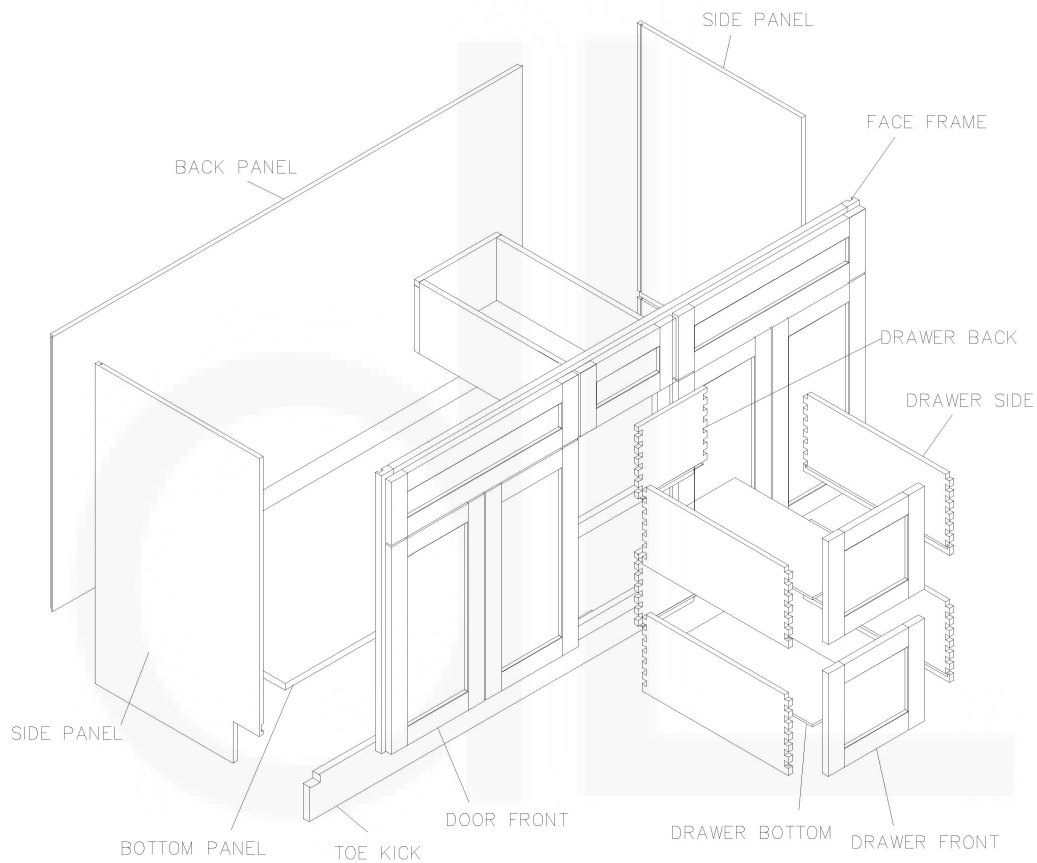


This instruction applies to the following items:
VAN60DD-3


STEP
1

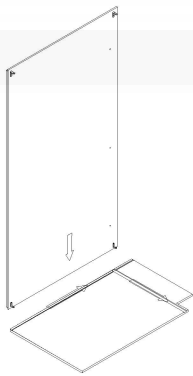


STEP
2

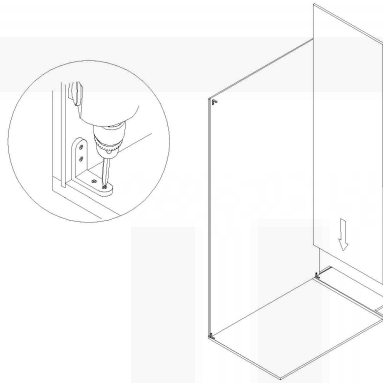


STEP
3

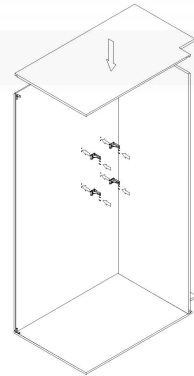


STEP
4

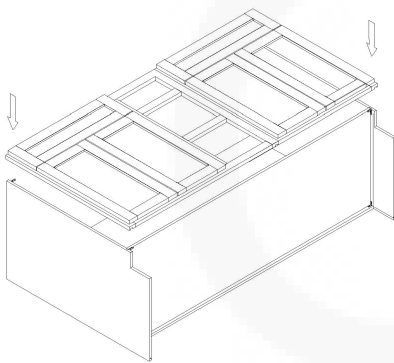


STEP
5

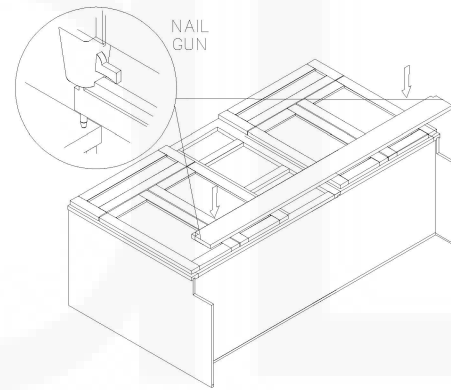


STEP
6

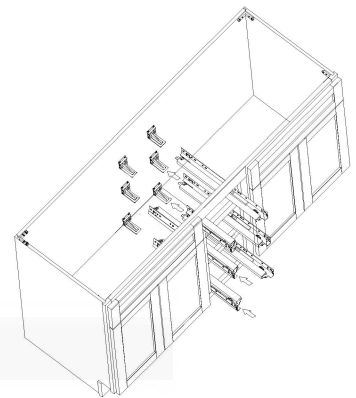


STEP
7

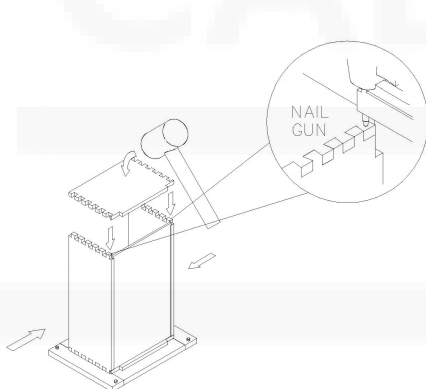




STEP
8

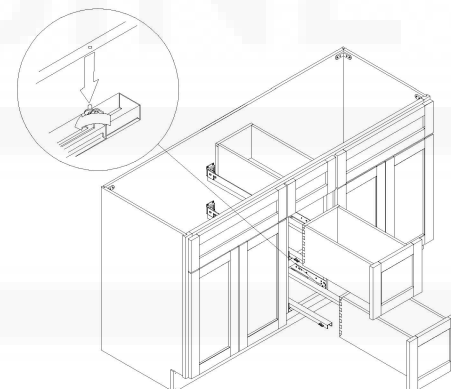

STEP
9

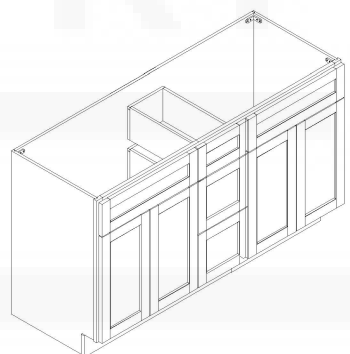


ASSEMBLY INSTRUCTIONS - VANITY DRAWER BASE CABINET (3 DRAWERS)

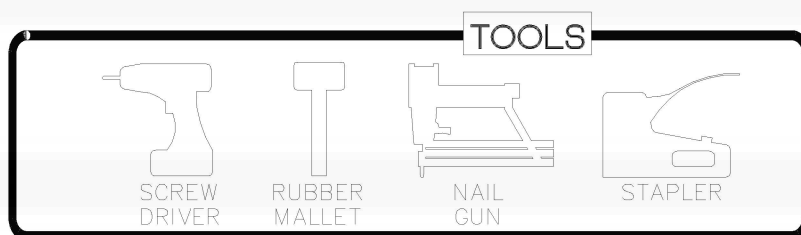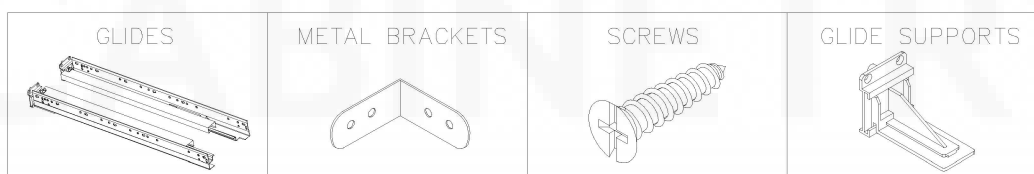
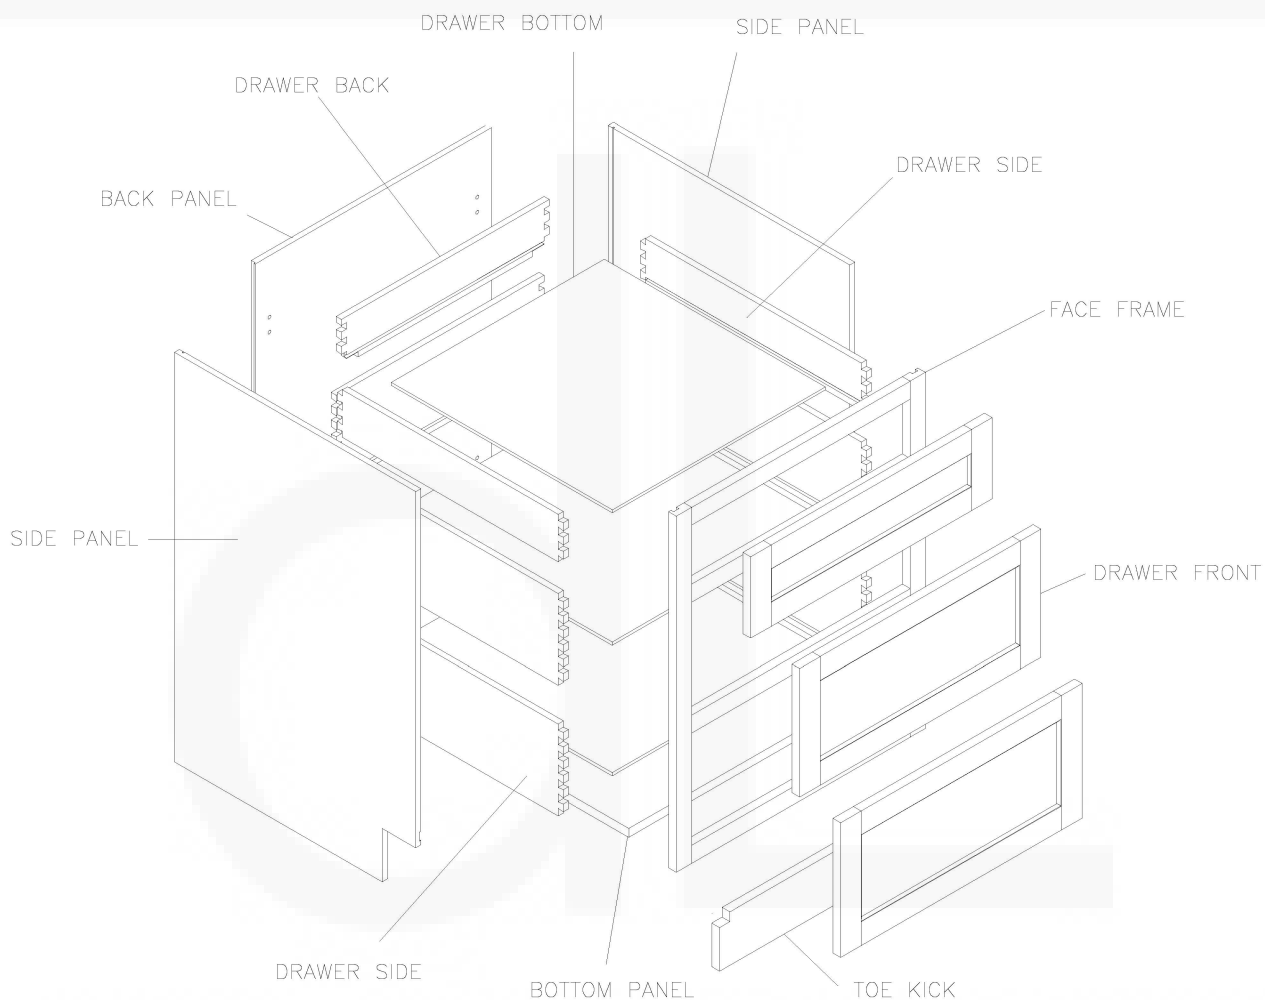


This instruction applies to the following items:
VDB12、VDB15、VDB18、VDB21
VDB24、VDB27、VDB30、VDB33、VDB36


STEP
1

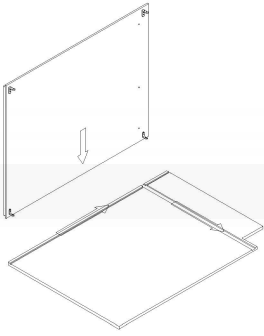


STEP
2

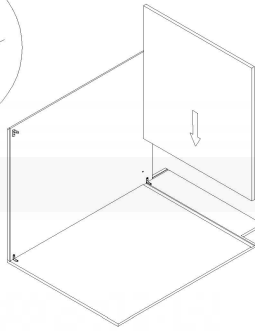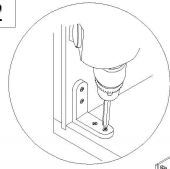


STEP
3

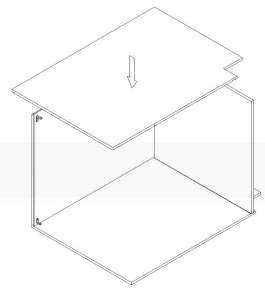


STEP
4

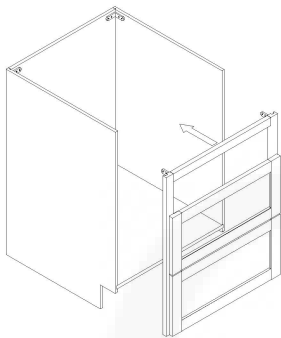


STEP
5

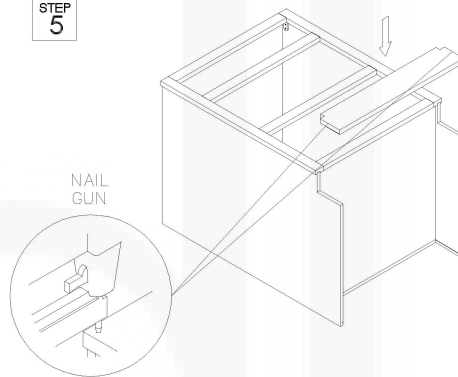


STEP
6

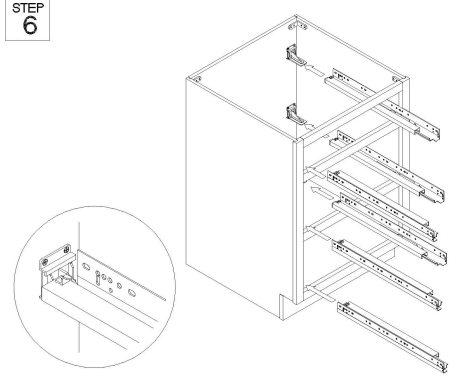


STEP
7

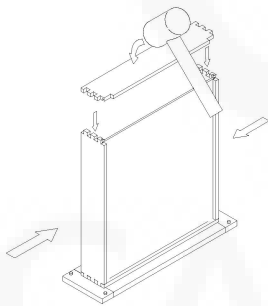


STEP
8

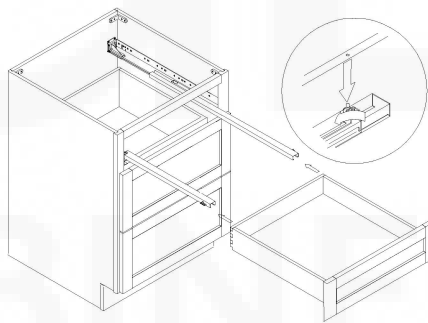


STEP
9

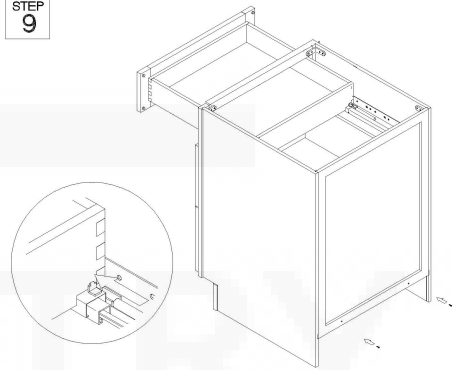

STEP
10

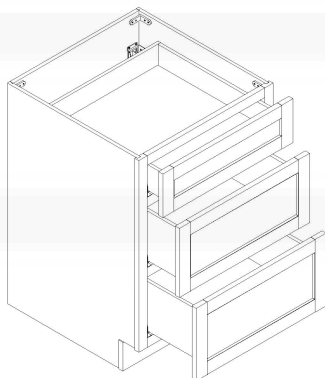

ASSEMBLY INSTRUCTIONS - PULLOUT TRAY

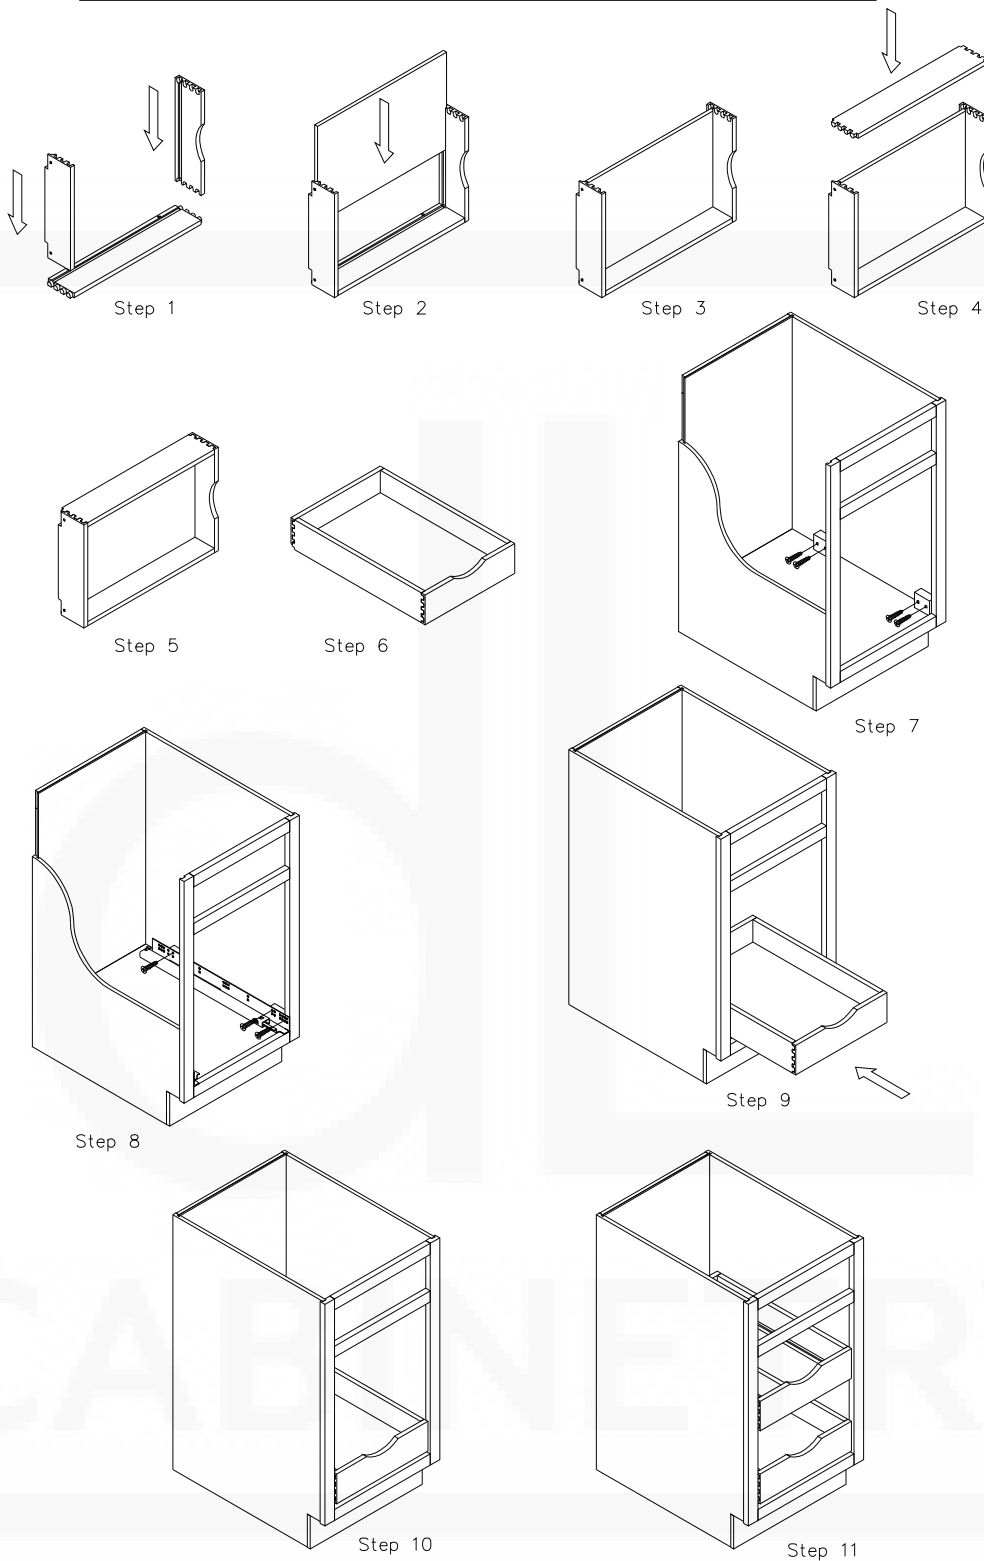

TOOLS




SCREW
DRIVER



RUBBER
Mallet



NAIL
GUN



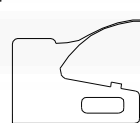


STAPLER

This instruction applies to the following items:

PULLOUT TRAY 18"
PULLOUT TRAY 24"
PULLOUT TRAY 30"
PULLOUT TRAY 36"


ASSEMBLY INSTRUCTIONS — KNEE DRAWER

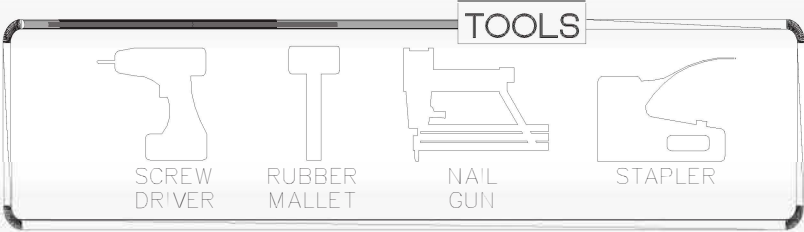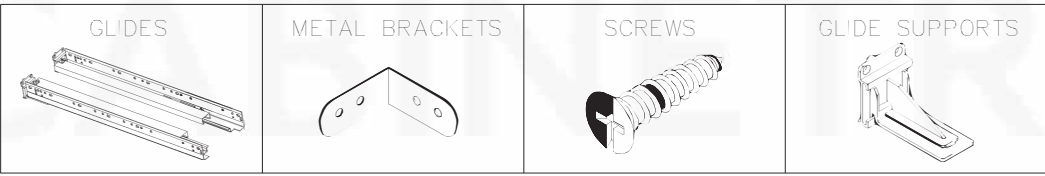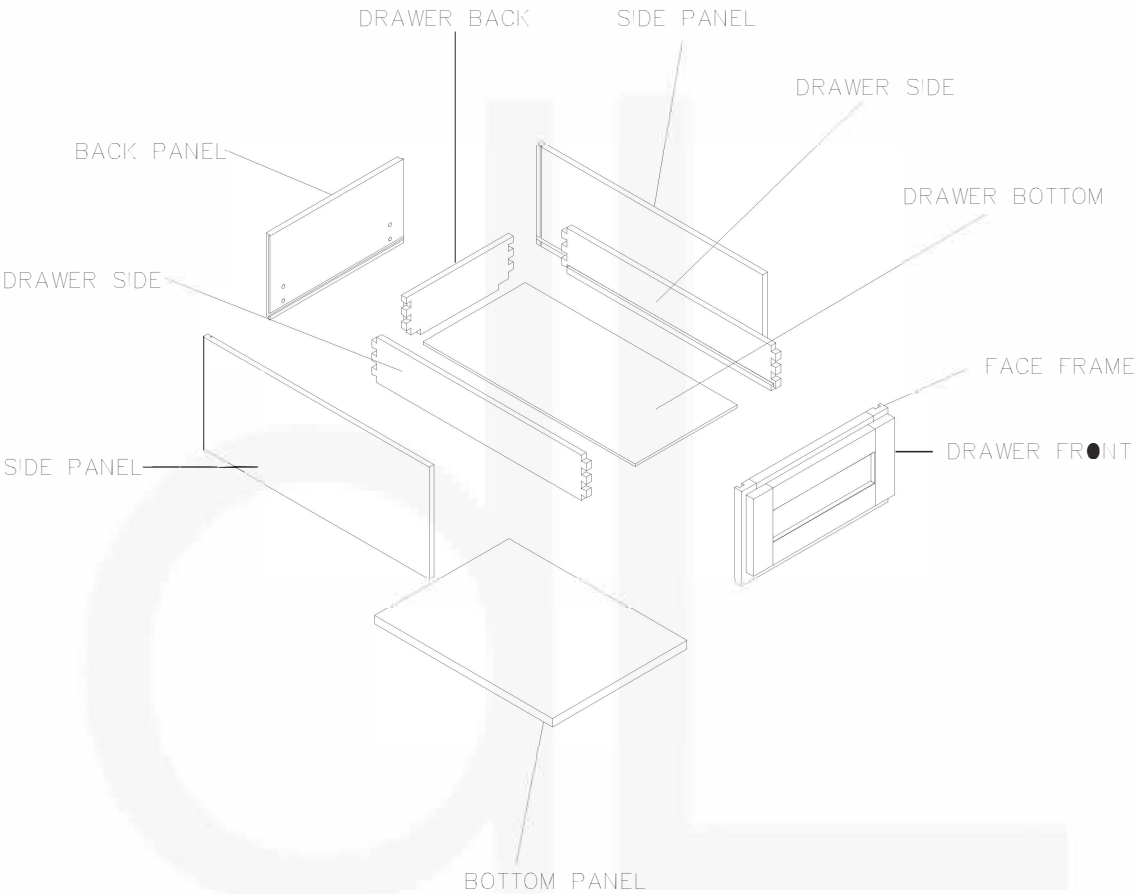


This instruction applies to the following items:

DSK2421 DSK3021


STEP 1

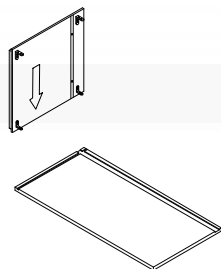


STEP 2

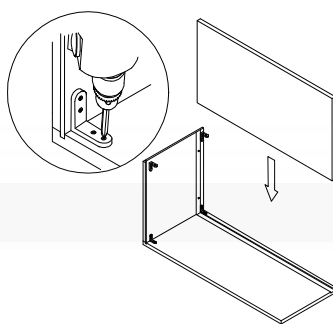


STEP 3

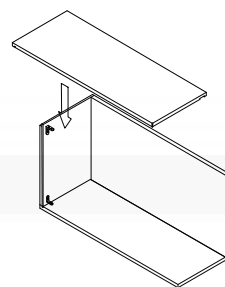


STEP 4

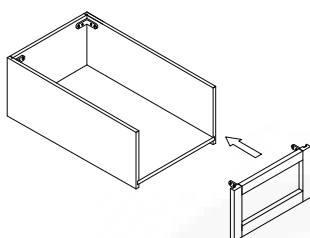


STEP 5

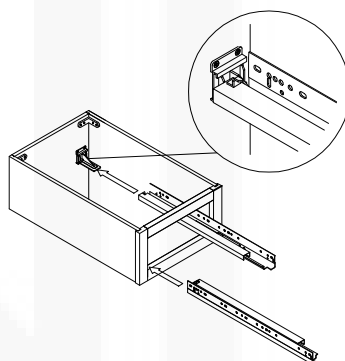

STEP 6

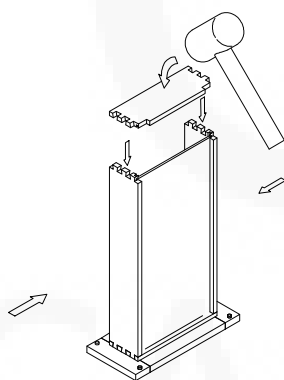

STEP 7

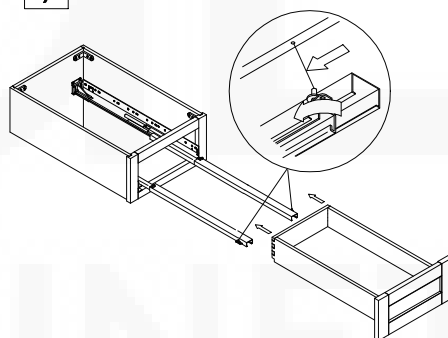

STEP 8

